

## Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand. Do not use the adaptor to recharge non-rechargeable batteries or any other appliance. Do not use the appliance for anything other than its intended use. Take care when equipping accessories with rotating parts as this could cause entrapment. Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended. Only use the appliance with the power supply unit provided. This appliance should not be operated by means of an external timer or separate remote control system. This appliance is intended for domestic use only. It should not be used for commercial purposes.

## Battery Safety

The supply terminals are not to be short-circuited. In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance. Do not leave a battery pack on prolonged charge when not in use. Do not use any charger other than that specifically provided for use with the product. Do not use any cell or battery which is not designed for use with the product. Keep batteries out of the reach of children. Do not crush, puncture, dismantle or otherwise the battery pack. Do not store above 60 °C. Avoid storage in direct sunlight. Do not expose the battery pack to heat or fire as it may explode. Do not subject the battery pack to mechanical shock. Do not dispose of exhausted battery packs in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details. This product is fitted with a 11.1 V 2000 mAh Li-ion battery (non-removable)

## Description of Parts



- |                           |   |
|---------------------------|---|
| 1. Revo Digital main unit | 10. Brush tool                          |
| 2. Power button           | 11. Dust container                      |
| 3. Boost button           | 12. Dust container front release button |
| 4. Charging base          | 13. Dust container rear release button  |
| 5. Charging port          | 14. Dust container cover                |
| 6. HEPA filter            | 15. Indicator light                     |
| 7. Filter cone            |   |
| 8. Crevice tool           |   |
| 9. Upholstery tool        |   |

## Instructions for Use

### Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

### Charging the Revo Digital

Before first use, the vacuum cleaner must be charged for approx. 4–5 hours. Subsequent charging times will vary dependent on use.

**STEP 1:** Check that the vacuum cleaner is switched off.

**STEP 2:** Secure the vacuum cleaner into position in the charging base and connect the mains power adaptor to the charging port.

**STEP 3:** Plug the mains power adaptor into the mains power supply; the indicator light will flash red during charging. Once the battery is fully charged, the indicator light will stop flashing and turn blue.

**NOTE:** Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

### Using the Revo Digital

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The upholstery and brush tools are useful for removing dust and dirt from folds in fabrics, curtains and upholstery, as well as from shelves, cupboards and windowsills.

**STEP 1:** If required, fit the selected attachment by firmly inserting it into the air inlet. The brush tool does not insert into the air inlet directly; it must first be attached to the crevice tool.

**STEP 2:** Turn on the vacuum cleaner by pressing the power button. Press the boost button to use the maximum power setting; the indicator light will illuminate blue. To use the minimum power setting, press the boost button again; the indicator will illuminate red.

**NOTE:** The indicator light will flash when the battery is running low and needs to be charged.

**WARNING:** Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position.

### Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

**STEP 1:** Hold the vacuum cleaner with the dust container facing upwards. Press the dust container front release button and carefully remove the dust container cover from the dust container.

**STEP 2:** Empty the dust container slowly and carefully. If necessary, clean the individual parts with a soft, damp cloth and dry thoroughly.

**STEP 3:** Refit the dust container cover by aligning it with the vacuum cleaner main unit and pushing into place until it clicks.

### Cleaning the HEPA Filter and Filter Cone

**NOTE:** The HEPA filter and filter cone should be thoroughly cleaned at least once every three weeks.

Always clean the HEPA filter and filter cone with the brush provided and only when the dust container is empty.

For further cleaning instructions please see our online instruction manual at [www.beldray.com](http://www.beldray.com).

### Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place.


Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

### Specifications

Product code: BEL01163

Battery: 11.1 V DC 2000 mAh Li-ion (included)

Adaptor input: 100–240V ~ 50/60 Hz 0.4 A

Adaptor output: 14.0 V  0.5 A 7.0 W

Average active efficiency: 81.38 %

Efficiency at low load (10 %): 71.43 %

No load power consumption: 0.066 W

Dust container capacity: 100 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.beldray.com](http://www.beldray.com). Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to [www.beldray.com/manuals.html](http://www.beldray.com/manuals.html) and search **BEL01163** to access the instruction manual for your product.


\*To be eligible for the extended guarantee, go to [guarantee.upgs.com/beldray](http://guarantee.upgs.com/beldray) and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

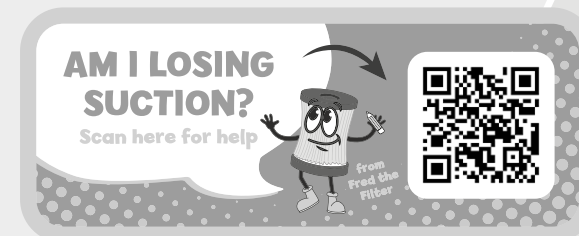

FULL INSTRUCTION MANUAL AT  
[www.beldray.com/manuals.html](http://www.beldray.com/manuals.html)  
PRODUCT CODE: **BEL01163**

est 1872  
**Beldray**<sup>®</sup>

**REVO**  
DIGITAL

QUICK START GUIDE

Find us on 

[www.facebook.com/Beldray](http://www.facebook.com/Beldray)

**UK**  
**CA** 



Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.  
MADE IN CHINA.  
[www.beldray.com](http://www.beldray.com)

©Beldray trademark. All rights reserved

CD241220/MD160622/V2