


The 2 support wires attached to the fitting allow adjustment of the fitting, the height can either be reduced or increased.

1. Hold each wire in turn and gently push upwards to the desired height, the support wire freely moves into the ceiling can.

If required the fitting can be lengthened back to its original height.

2. Push the 2 small metal release pins in individually, this will release the clamp and allow each support wire to become free to lengthen.

3. The weight of the fitting is normally sufficient to lower each support wire, however should the cable not move freely, gently hold the support wire whilst pushing and releasing the pin and pull down on the cable.

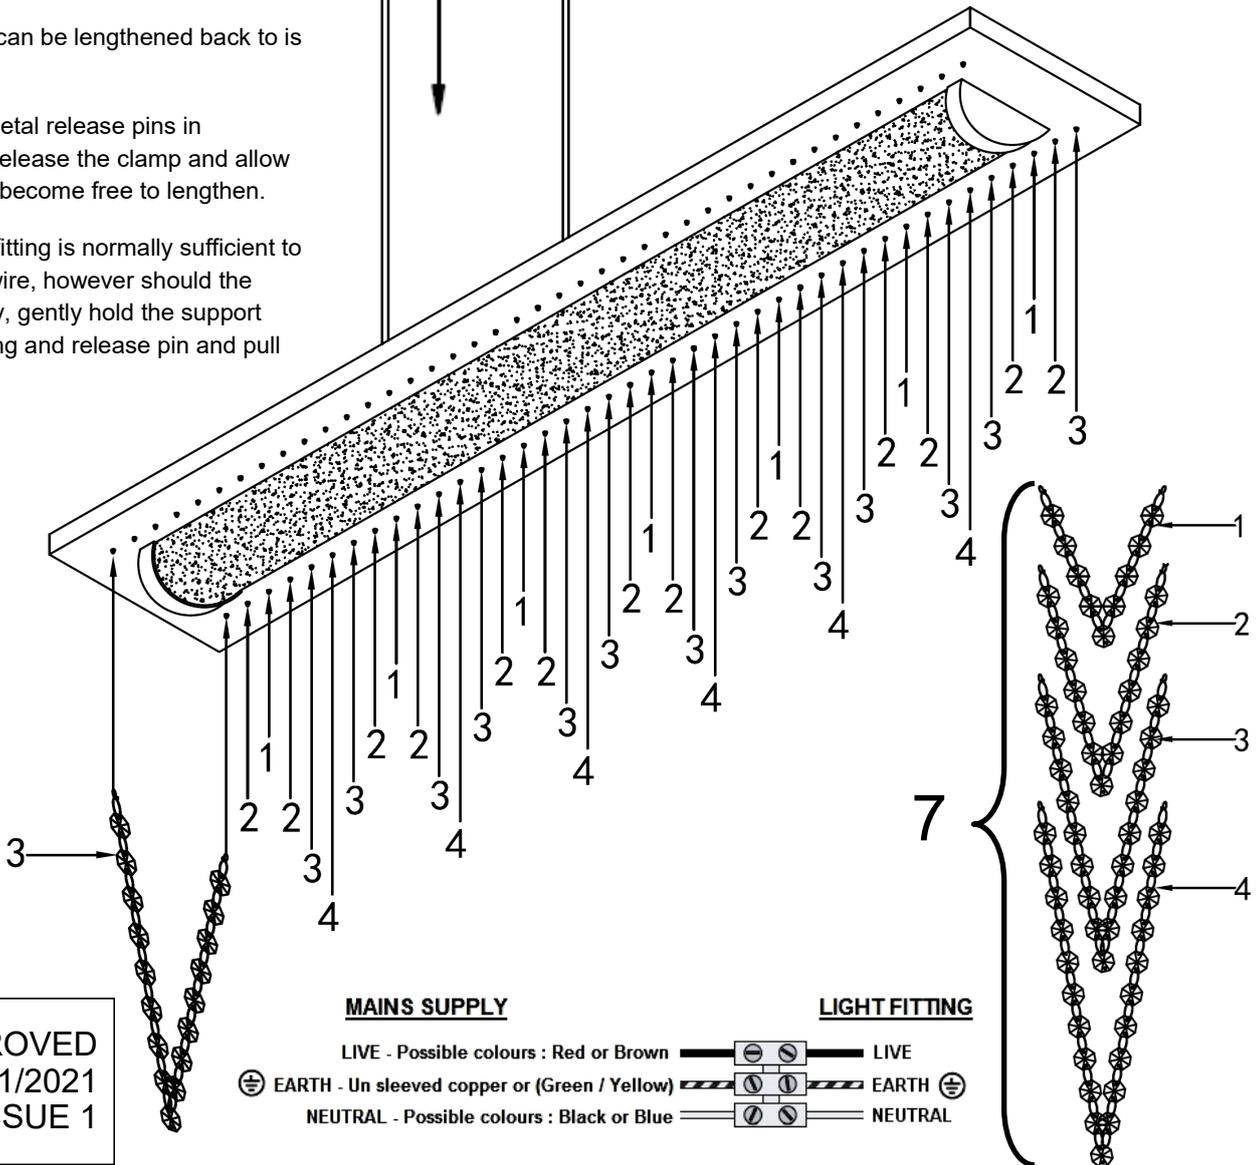

**MAINS SUPPLY**

LIVE - Possible colours : Red or Brown		LIVE
⊕ EARTH - Un sleeved copper (or Green / Yellow)		EARTH ⊕
NEUTRAL - Possible colours : Black or Blue		NEUTRAL

**LIGHT FITTING**

LIVE	
EARTH	
NEUTRAL	

# HOW TO REMOVE LED DRIVER AND LED CHIPS.

ONCE LED CHIPS REMOVED THIS FITTING MUST BE DISPOSED.

