


INCOMING SUPPLY

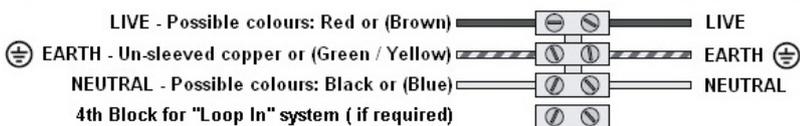

LIGHT FITTING

Driver and LED module removal .

Ensure the power is disconnected

At the end of the life of the luminaire please remove the Driver and LED module as shown to allow recycling of parts in the correct waste stream.

