

## CEILING FLUSH ASSEMBLY

Surface **A**

Remove

**A-1**

**A-2**

650mm

- × 2 1200mm
- × 3 2400mm

**A-3**

**A-4**

1200mm

2400mm

**A-5**


L (brown)  
N (blue)  
⊕ (yellow)


**A-6**

**A-7**

CLICK

**A-8**

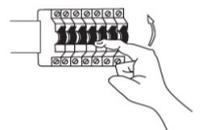

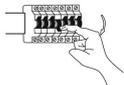

# PENDANT ASSEMBLY

### Pendant B

1200mm X2  
1500mm X2  
1800mm X2  
2400mm X3

750mm-1200mm  
! >200mm

B-1

1  
2 Adjust pendant height  
3  
Max:5kg

B-2

B-3

L (brown)  
N (blue)  
⊕ (yellow)

B-4

press

B-5

Lock  
1  
CLICK  
2  
Unlock

B-6

### Pendant B1

B1-1

X2

B1-1


L (brown)  
N (blue)  
⊕ (yellow)

B1-2

1  
2 Adjust pendant height  
3

B1-3

B-6 → B1-4

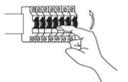

## SAFETY INFORMATION: (Please retain for future reference)

- Always turn off the mains supply before commencing the installation of this fitting .
- This is a Class I product and requires an Earth connection – 220-240Volts – 50/60Hz AC.
- This product must be installed in accordance with the National Building Regulations, if in doubt consult a competent electrician.
- Do not cover the light source or lamp shade.
- Do not modify or alter any product before or after installation. This will invalidate your warranty and may render the product un-safe.

### POSITION

- This fitting is suitable for installation in indoor locations only.
- Suitable for Ceiling mount only.
- Ensure sufficient access to the fitting to enable safe maintenance.
- The luminaire should be positioned so that prolonged into the luminaire at a distance closer than 0.2m is not expected.

### LED INFORMATION:

- This fitting is not suitable for dimming.
- The LED lamps are not replaceable, when the lamps reach the end of their life the whole luminaire shall be replaced.

### AFTERCARE AND MAINTENANCE:


- Always disconnect power supply when servicing or cleaning.
- Clean only with a dry or slightly damp cloth.
- Do Not use any abrasive cloths or cleaners as this may damage the product.



This symbol on the product indicates that this must not be disposed of with your other household waste. It is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of wasted electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling, please contact your local city officer, your household waste disposal service or the shop where you purchased the product.

#### MAINS SUPPLY


#### LIGHT FITTING

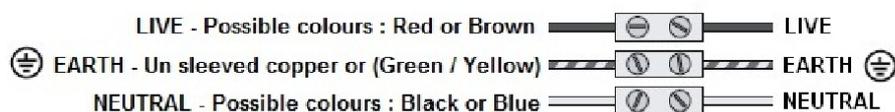

# How to remove LED driver and LED chips. Once removed this fitting must be disposed.

## HOW TO REMOVE LED DRIVER

1. Open the PC cover on the lamp top

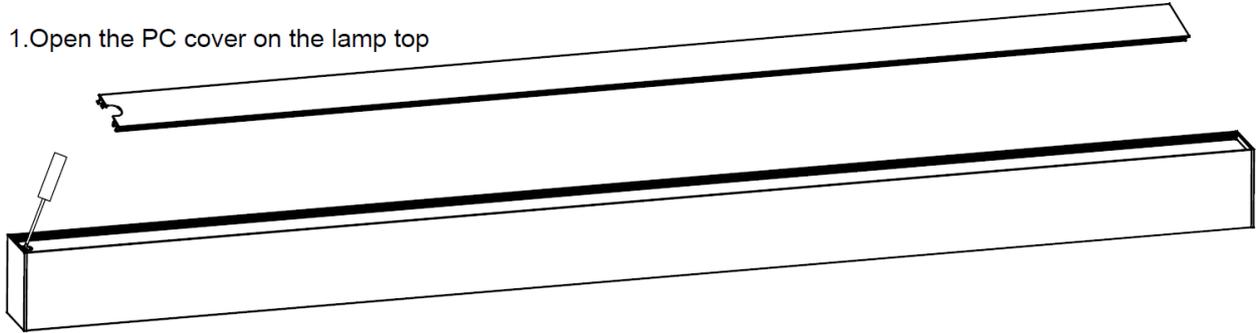


2. Screw off the locking driver's screws




## HOW TO REMOVE LED PCB

1. How to remove the UP lighting LED PCB

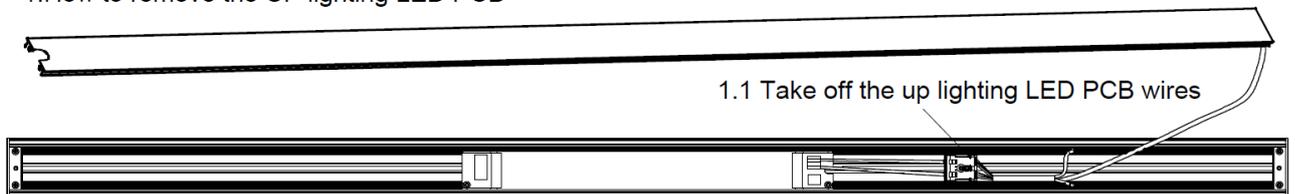


2. How to remove the down lighting LED PCB

2.2 Take off one side end cap

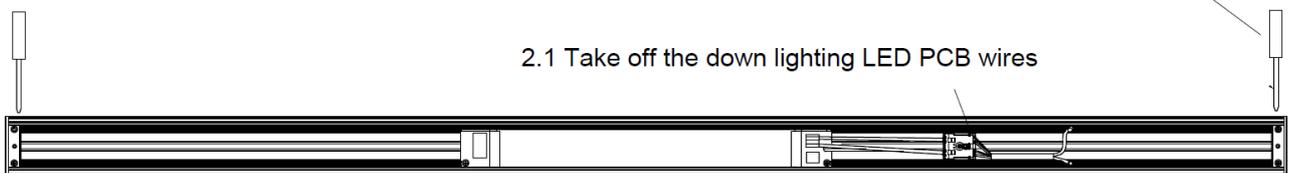

2.3 Take out the diffuser

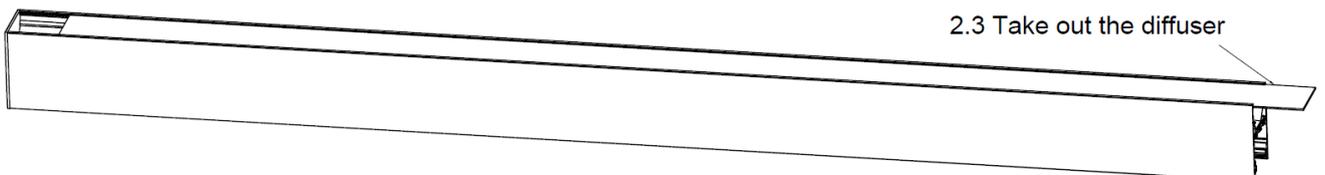

2.4 Screw off the locking PCB's screws, take out the reflector paper and PCB

