



1

2

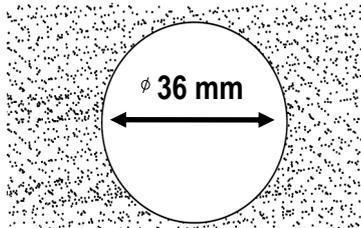


USE AS RECESSED
INGROUND ϕ 36mm

USE DRILL WITH CUT
TOOL

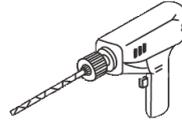


2

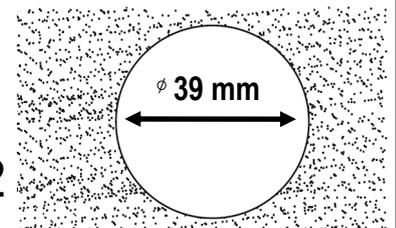


WITH MOUNTING
SLEEVE 39mm

FOR MULTIPLE ASSEMBLY, ALL LED LIGHTS MUST BE CONNECTED IN
SERIES TO A CONSTANT CURRENT 700mA LED DRIVER.

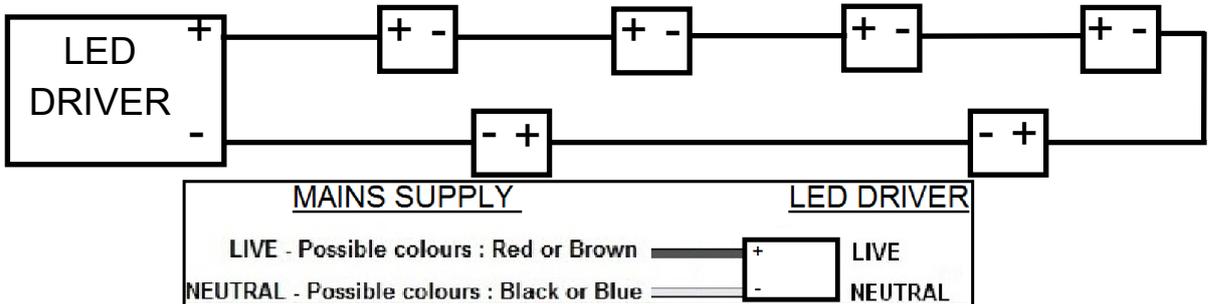


USE AS RECESSED
INGROUND


3

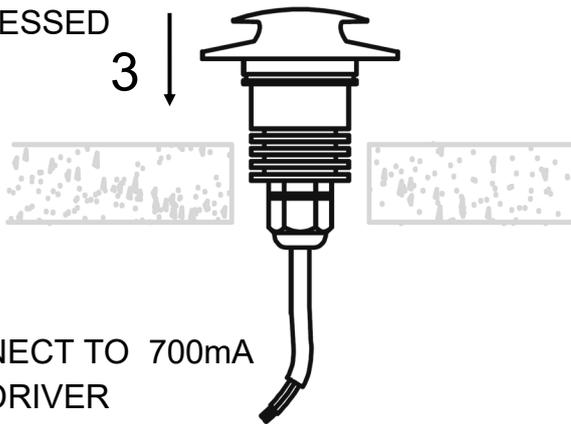

CONNECT TO 700mA
LED DRIVER

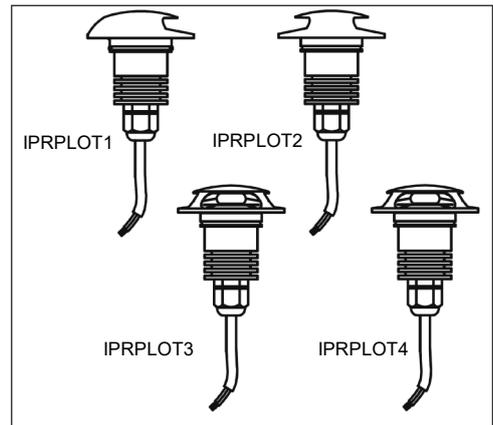


WITH MOUNTING
SLEEVE

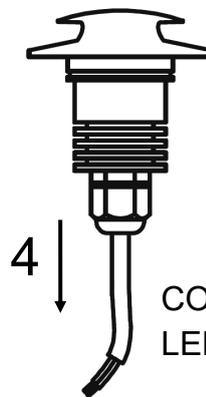




4

CONNECT TO 700mA
LED DRIVER

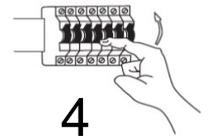

4

3

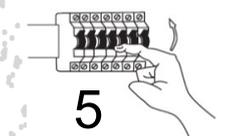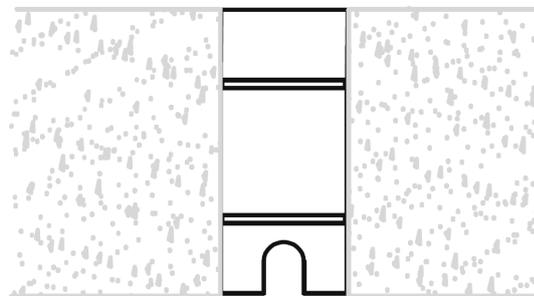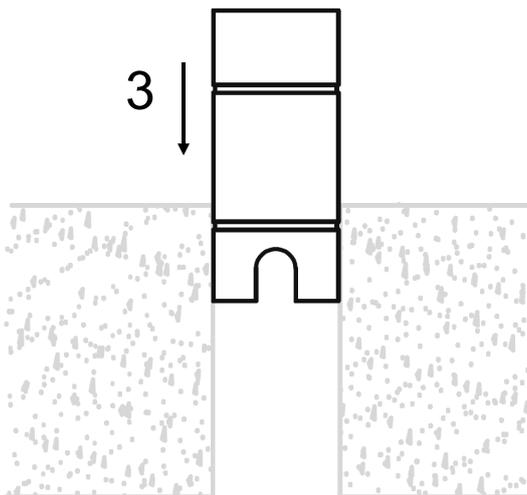

5

SAFETY INFORMATION: (Please retain for future reference)

- Always turn off the mains supply before commencing the installation of this fitting .
- This is a Class 3 product and does not requires an Earth connection. Do not connect directly to mains supply – 230 (240) Volts – 50Hz AC, must be connected in series to a 700mA constant current LED Driver.
- This product must be installed in accordance with the National Building Regulations, if in doubt consult a competent electrician.
- Do not modify or alter any product before or after installation. This will invalidate your warranty and may render the product un-safe.

POSITION:

- The fitting is suitable for installation in outdoor locations.
- The fitting is NOT suitable for installation in Marine locations.
- The fitting is IP67 rated, we recommend the fitting is not installed where it may become Immersed under water for periods longer than 30 minutes, or depths greater than 1metre.
- The fitting should be installed in areas with adequate drainage.
- Ensure sufficient access to the fitting to enable safe maintenance.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0.2M is not expected.

LED INFORMATION:

- This fitting is suitable for dimming when connected to a LED Dimmable Driver.
- The LED lamps are not replaceable, when the lamps reach the end of their life the whole luminaire shall be replaced.

AFTERCARE AND MAINTENANCE:

- Always disconnect power supply when servicing or cleaning.
- Clean only with a dry or slightly damp cloth.
- Do not use any abrasive cloths or cleaners as this may damage the product.



This symbol on the product indicates that this must not be disposed of with your other household waste. It is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of wasted electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling, please contact your local city officer, your household waste disposal service or the shop where you purchased the product.

