

S9845

Simplicity

1950s Vintage

Jiffy

3 main pattern pieces
Easy Cut
Easy Sew



Very Easy

Très Facile

MISSES' DRESS IN TWO LENGTHS

Suggested Fabrics: Cottons and Blends, Cotton Sateen, Crepe, Double Knits, Jersey, Lightweight Wools and Wool Blends, Moire, Pique, Printed Silks, Synthetics and Blends, Textured Knits, Wool Crepe.

Notions: One 22" (56cm) zipper, bias seam binding (optional), 2 yds. (1.9m) of 1" (2.5cm) ribbon for belt (optional).

Sizes	8	10	12	14	16	18	20	22	24	26
European	34	36	38	40	42	44	46	48	50	52

BODY MEASUREMENTS: Select pattern size based on body measurements

Bust	31½	32½	34	36	38	40	42	44	46	48	50	52
Waist	24	25	26½	28	30	32	34	37	39	41½	"	"
Hip-9" below waist	33½	34½	36	38	40	42	44	46	48	50	"	"
Back-neck to waist	15¾	16	16¼	16½	16¾	17	17¼	17½	17¾	17¾	"	"

Dress 1	45**	2½	2½	2½	2½	2½	2½	3½	3½	3½	3½	Yds.
	60**	2	2	2	2	2½	2½	2½	2½	2½	2½	"
Dress 2	45**	2¼	2¼	2¼	2½	2½	2½	3	3	3	3	Yds.
	60**	1½	1½	1½	1½	1¾	1¾	1¾	2	2	2	"
Dress 3	45**	2½	2½	2½	2½	2½	2½	2½	2½	2½	2½	Yds.
	60**	1½	1½	1½	1½	1½	1½	1¾	2	2	2	"

FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)

1,2,3 Bust	36½	37½	39	41	43	45	47	49	51	53	Ins.
1,2,3 Waist	31½	32½	34	36	38	40	42	44	46	48	"
1,2,3 Hip	37½	38½	40	42	44	46	48	50	52	54	"
Width, lower edge											
Dress 1,2	43	44	45½	47½	49½	51½	53½	55½	57½	59½	Ins.
Dress 3	42	43	44½	46½	48½	50½	52½	54½	56½	58½	"
Finished back length from base of neck											
Dress 1,2	38¾	39	39¼	39½	39¾	40	40¼	40½	40¾	41	Ins.
Dress 3	35¾	36	36¼	36½	36¾	37	37¼	37½	37¾	38	"

*with nap **without nap

ROBE EN DEUX LONGUEURS POUR JEUNES FEMMES

Tissus Conseillés: Cottonnades, Satin de coton, Crêpe, Tricotés doubles, Jersey, Laine et Mélanges de laine léger, Mohair, Piqué, Soies imprimés, Tissus synthétiques et mélanges, Tricotés à texture, Crêpe de laine.

Mercurie: 1 fermeture à glissière de 56 cm, extra-fort en biais (facultatif), 1.9m de ruban pour ceinture de 2.5 cm (facultatif).

Tailles	8	10	12	14	16	18	20	22	24	26
Françaises	36	38	40	42	44	46	48	50	52	54
Européen	34	36	38	40	42	44	46	48	50	52

MESURES DU CORPS: Choisissez la taille du patron basée sur les mesures du corps

Poitrine	80	83	87	92	97	102	107	112	117	122	cm
Taille	61	64	67	71	76	81	87	94	99	106	"
Hanches (23cm au-dessous de la taille)											
	85	88	92	97	102	107	112	117	122	127	cm
Dos du cou à la taille	40	40.5	41.5	42	42.5	43	44	44	44.5	44.5	"

Robe 1	115cm*	2.3	2.3	2.3	2.4	2.4	2.4	3.1	3.1	3.1	3.2	m
	150cm*	1.7	1.8	1.8	1.8	1.9	1.9	1.9	2.4	2.4	2.4	"
Robe 2	115cm*	2.1	2.1	2.1	2.2	2.2	2.4	2.7	2.7	2.7	2.9	m
	150cm*	1.4	1.5	1.5	1.5	1.5	1.6	1.6	2.4	2.4	2.4	"
Robe 3	115cm*	1.9	1.9	1.9	1.9	2.1	2.2	2.5	2.6	2.6	2.6	m
	150cm*	1.4	1.4	1.4	1.4	1.5	1.5	1.6	2.2	2.2	2.2	"

MESURES DES VÊTEMENTS FINI (Motif et aisance de port compris)

1,2,3 Poitrine	93	95	99	104	109	114	119	124	130	135	cm
1,2,3 Taille	80	83	86	91	97	102	107	112	117	122	"
1,2,3 Hanches	95	98	102	107	112	117	122	127	132	137	"
Largeur à l'ourlet											
Robe 1,2	109	112	116	121	126	131	136	141	146	151	cm
Robe 3	107	109	113	118	123	128	133	138	144	149	"
Longueur finie – dos, votre nuque à l'ourlet											
Robe 1,2	98	99	100	100	101	102	102	103	104	104	cm
Robe 3	91	91	92	93	93	94	95	95	96	97	"

*avec sens **sans sens



1




2




3

Simplicity 7673 cutting and sewing directions

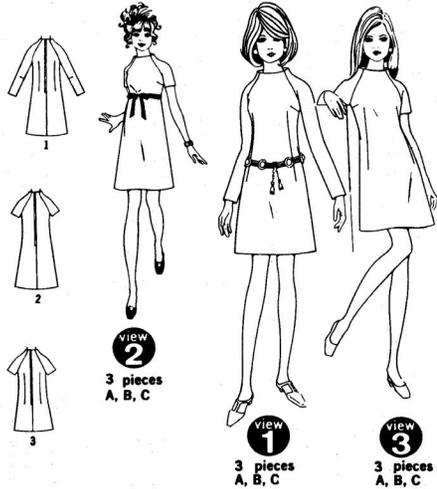

select your pattern pieces according to the view you have chosen 3 pieces given

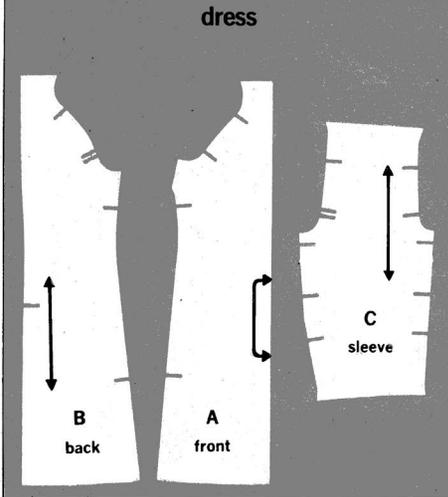


How to use your Simplicity Pattern

Read all directions carefully before beginning to work

1. Prepare your pattern

Select the pattern pieces for the view you plan to make from the box to the left. Do not cut away margins.

This pattern is made to body measurements with ease allowed for style, fit and comfort. Check your back waist and dress length. If necessary, alter the pattern before placing it on fabric. Lengthening and shortening lines are indicated on pattern.

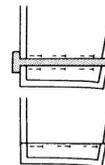

TO LENGTHEN: Cut pattern between printed lines. Place paper underneath. Spread pattern the necessary amount and pin to paper.

TO SHORTEN: At the printed line, pin a pleat half the amount to be shortened. (i.e. 1/2" deep to shorten 1".)

See Simplicity Sewing Book for other pattern alterations.

2. Prepare your fabric

Press fabric. Unless fabric is pre-shrunk, shrink before cutting.

STRAIGHTEN ENDS: Clip one selvage and tear fabric or pull a crosswise thread and cut across fabric.

STRAIGHTEN UNEVEN GRAIN: Pull fabric on the bias in opposite direction until crosswise threads are straight and squared with selvages. This cannot be done on permanent finish fabrics.



3. Know your pattern markings

STRAIGHT GRAIN: Place an even distance from selvage or a straight thread.

FOLD GRAIN: Place on fold of fabric.

CUTTING LINE

LENGTHENING AND SHORTENING LINES

STITCHING LINES: For darts, seams, etc.

SEAM ALLOWANCE: 5/8" unless otherwise stated.

NOTCHES: Blocked in for easier cutting; match notches with same numbers.

4. Laying out and cutting your pattern

Circle cutting layout for View, Size and Fabric width.

FOR DOUBLE THICKNESS: Fold fabric with RIGHT side INSIDE and place pattern on WRONG side of fabric.

FOR SINGLE THICKNESS: Place pattern on RIGHT side of fabric.

FOR NAP OR ONE WAY DESIGN FABRICS: Use "with nap" cutting layout.

Before cutting, place all pattern pieces on fabric, following cutting layouts. Margins may be overlapped when placing pattern on fabric. When duplicate pattern pieces are cut separately, the second piece is reversed and shown as a white outline.

Cut thru pattern and fabric on cutting lines; cut notches out from cutting lines. Margins will fall away as you cut.

5. Mark your fabric

Before removing pattern, transfer markings to WRONG side of fabric with tracing wheel and dressmaker's tracing paper.

FOR SINGLE THICKNESS: Place one sheet of tracing paper face up under WRONG side of fabric.

FOR DOUBLE THICKNESS: Place one sheet of tracing paper face up under fabric; place another sheet face down under pattern.



See Simplicity Sewing Book for "chalk-marking" and Tailor's-tacks.

Do not remove pattern from fabric until you are ready to sew.

6. Sewing your garment

READ DIRECTIONS on pattern pieces as you work.

STAY-STITCH: Machine-stitch thru single thickness of fabric to prevent stretching of bias or curved edges—done on seam line or 1/8" from seam line within seam allowance. Stay-stitching is shown only the first time a section of garment is illustrated.

PIN or BASTE SEAMS: Match notch 1 to 1, 2 to 2, etc. (Baste by hand or machine using a long stitch.)

STITCH SEAMS: In direction shown by arrows on pattern.

PRESS SEAMS: Open, unless otherwise stated. See Simplicity Sewing Book for additional sewing details.

NEW Sizing

BEFORE YOU CUT—be sure to compare your body measurements with **THE NEW MEASUREMENT CHART** on the back of the pattern envelope. You may wish to make minor fitting adjustments.


cutting layouts

Black area represents fabric


* GENERAL NOTE: When pattern pieces extend beyond fold of fabric, cut out all pieces except C; then open out fabric and on single thickness, cut extending pieces C on right side of fabric in position shown.

view 1 dress


35" 36" fabric without nap all sizes

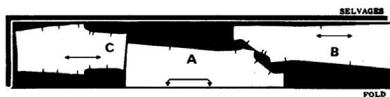


44" 45" fabric without nap sizes 8, 10

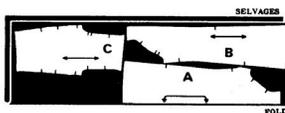


44" 45" fabric without nap size 12

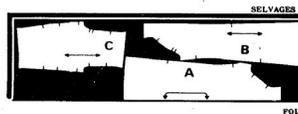

44" 45" fabric without nap sizes 14, 16

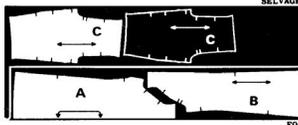


58" fabric without nap all sizes

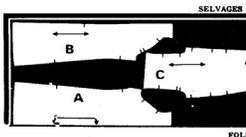


view 2 view 3 dress


35" 36" fabric without nap all sizes

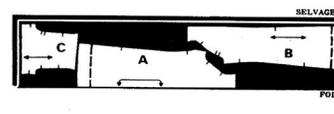


44" 45" fabric without nap sizes 8, 10

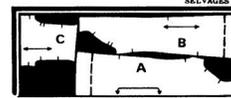

44" 45" fabric without nap size 12

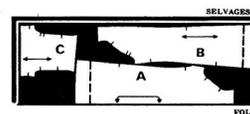


44" 45" fabric without nap sizes 14, 16

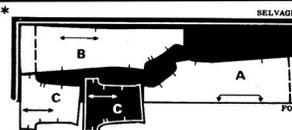


view 2 dress

54" fabric without nap sizes 8, 10, 12, 14

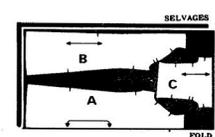


54" fabric without nap size 16

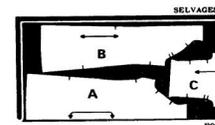

view 3 dress

54" fabric without nap all sizes

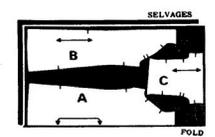


7673 sewing directions

Shaded area is right side of fabric

NOTE: Stitch $\frac{3}{8}$ " seams, unless otherwise stated, matching same numbered notches.


NOTE: Purchased or ribbon belt, belt carriers and front and back waistline darts are optional.

suggested seam finishes

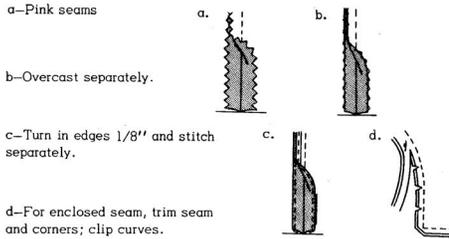


UNIT 1 front


Jiffy dress

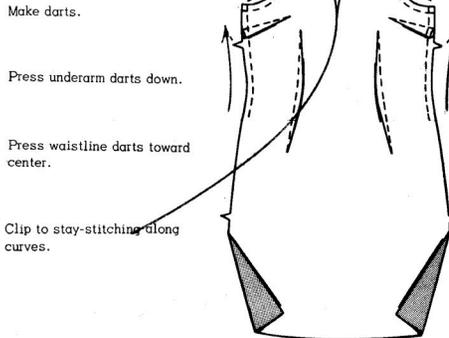


UNIT 2 back

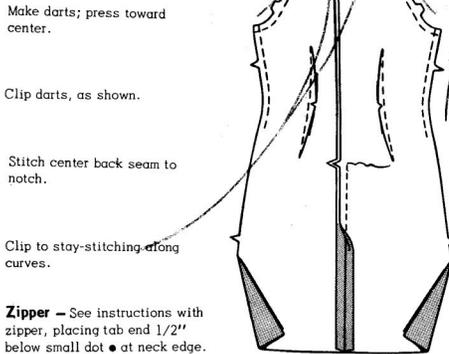


UNIT 3 sleeves

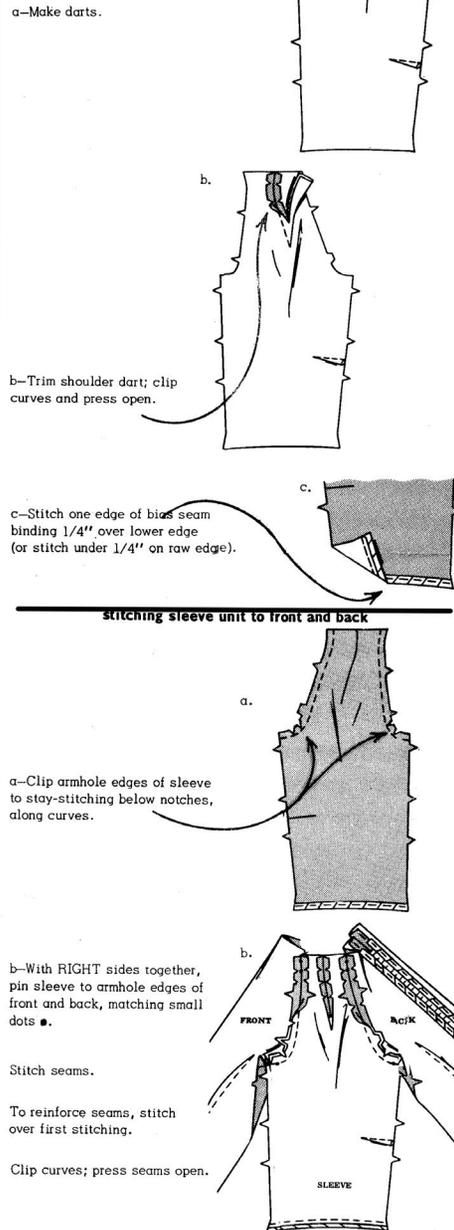


neck edge

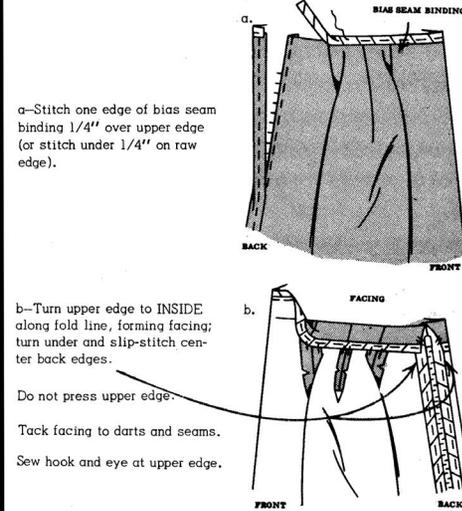


underarm seams and finishing sleeves

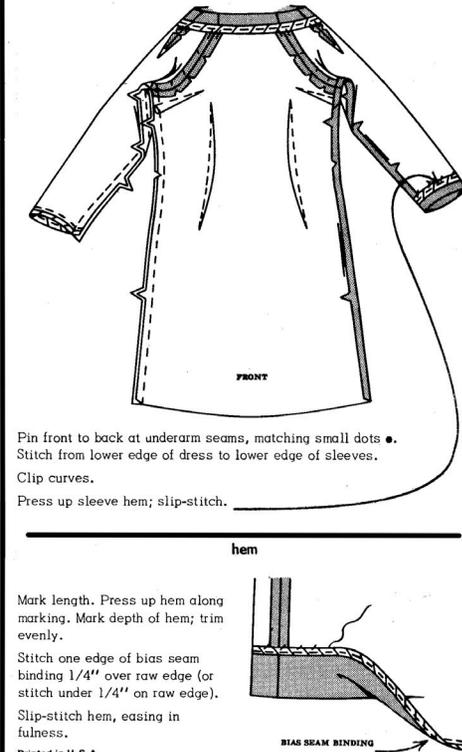

finishing

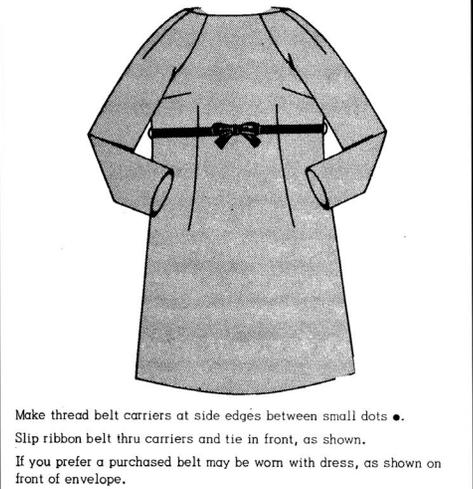

View 2 Jiffy dress

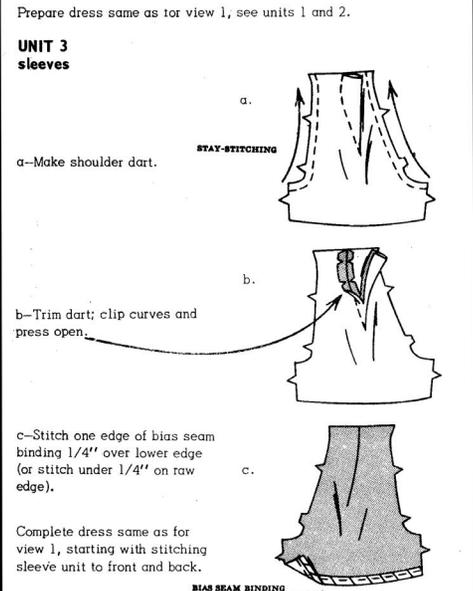

View 3 Jiffy dress


Prepare dress same as for view 1, see units 1 and 2. For sleeves, see dress view 2, unit 3. Complete dress same as for view 1, starting with stitching sleeve unit to front and back.

Simplicity®

Thank you for purchasing this Simplicity pattern. We made every effort to provide you with a high quality product.

SUPPLEMENTAL CUTTING LAYOUTS

3 PIECES

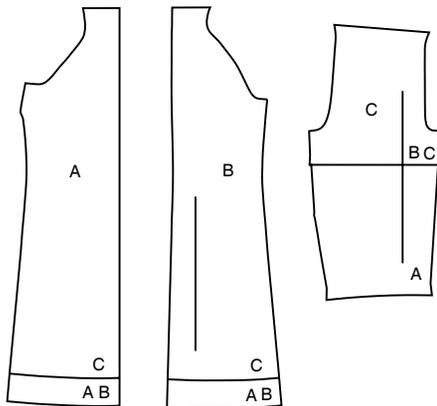

A DRESS FRONT
B DRESS BACK
C SLEEVE

General Directions

The Pattern

- SYMBOLS**
- GRAIN LINE: Place on straight grain of fabric parallel to selvage
 - PLACE SOLID LINE on fold of fabric.
 - CENTER FRONT OR BACK OF garment.
 - NOTCHES
 - DOTS
 - CUTTING LINE
 - LENGTHEN OR SHORTEN LINES

SEAM ALLOWANCE: 5/8" (1.5cm) unless otherwise stated is included but not printed on MULTI-SIZE PATTERNS. Mark your size with colored felt tip pen. See chart on tissue for how to use MULTI-SIZE PATTERNS.

- ADJUST IF NEEDED**
- Make adjustments before placing pattern on fabric.
- TO LENGTHEN:** Cut pattern between lengthen or shorten lines. Spread pattern evenly, the amount needed and tape to paper.
- TO SHORTEN:** At lengthen or shorten lines, make an even pleat taking up amount needed. Tape in place.

When lengthen or shorten lines are not given, make adjustments at lower edge of pattern.

Cutting/Marking

- BEFORE CUTTING:**
- PRESS pattern pieces with a warm dry iron. PRE-SHRINK fabric by pre-washing washables or steam-pressing non-washables.
- CIRCLE your cutting layout.
- PIN pattern to fabric as shown in Cutting Layouts.
- FOR DOUBLE THICKNESS: Fold fabric with RIGHT sides together.
 - FOR SINGLE THICKNESS: Place fabric RIGHT side up.
 - FOR PILE, SHADED OR ONE WAY DESIGN FABRICS: Use "with nap" layouts

AFTER CUTTING:

Transfer markings to WRONG side of fabric before removing pattern. Use pin and chalk method or dressmaker's tracing paper and wheel.


To Quick Mark:

- Snip edge of fabric to mark notches, ends of fold lines and center lines.
- Pin mark dots.




Sewing

- SEW garment following Sewing Directions.
- PIN or machine-baste seams matching notches.
- STITCH 5/8" (1.5 cm) seams unless otherwise stated.
- PRESS seams open unless otherwise indicated clipping when necessary so seams will lie flat.
- TRIM seams to reduce bulk, as shown below.

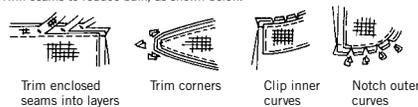


SPECIAL CUTTING NOTES


★ If layout shows a piece extending past fold, cut out all pieces except piece that extends.

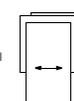

Open out fabric to single thickness. Cut extending piece on RIGHT side of fabric in position shown.

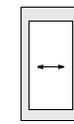


✱ Mark small arrows along both selvages indicating direction of nap or design. Fold fabric crosswise with RIGHT sides together, and cut along fold (a).

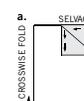

Turn one fabric layer around so arrows on both layers go in the same direction. Place RIGHT sides together (b).



Cutting Layouts

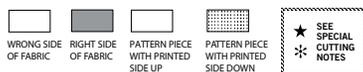


POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE


DRESS 1

USE PIECES A B C


45" (115CM) WITH NAP
SIZES 8 10 12 14 16- 18

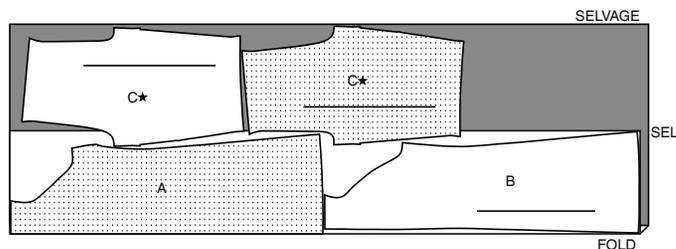

45" (115CM) WITH NAP
SIZES 20 22 24 26

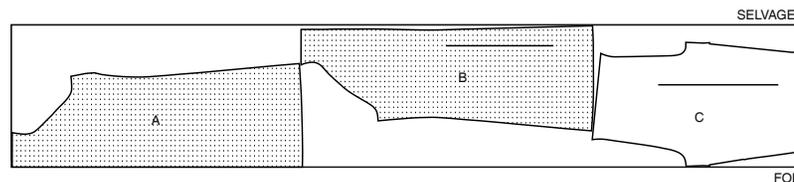

60" (150CM) WITH NAP
SIZES 8 10 12 14 16 18 20

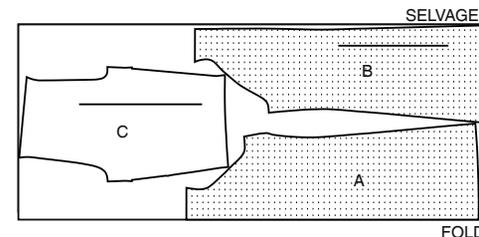


CUTTING LAYOUTS CONTINUED ON PAGE 2

S9845

4 of 4


60" (150CM)
WITH NAP
SIZES 22 24 26

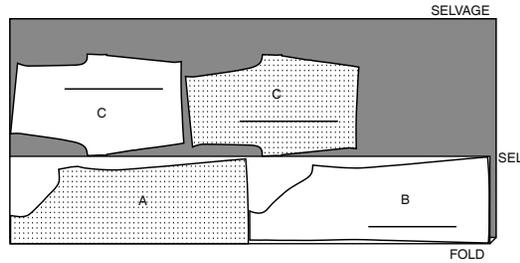


DRESS 2

USE PIECES A B C


45" (115CM)
WITH NAP
SIZES 8 10 12 14 16 18

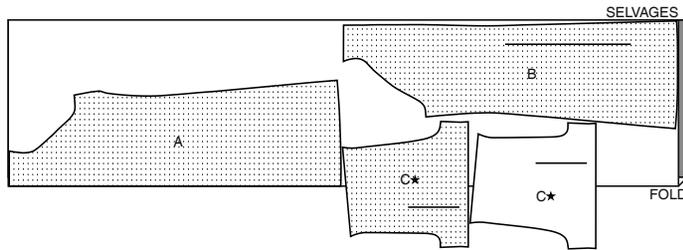


45" (115CM)
WITH NAP
SIZES 20 22 24 26

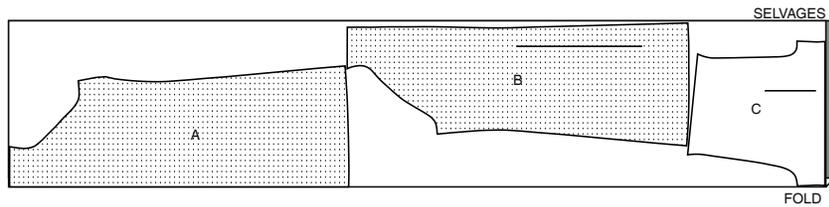

60" (150CM)
WITH NAP
SIZES 8 10 12 14 16 18 20

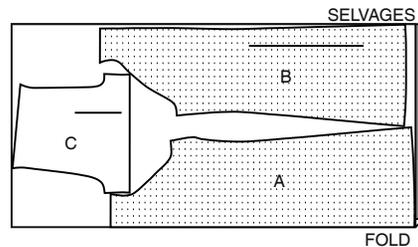


60" (150CM)
WITH NAP
SIZES 22 24 26

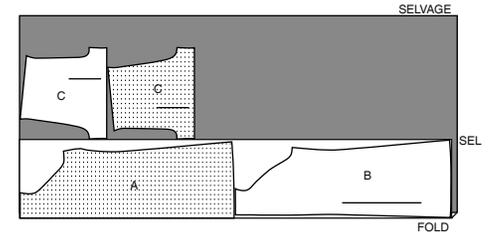


DRESS 3

USE PIECES A B C


45" (115CM)
WITH NAP
SIZES 8 10 12 14 16 18

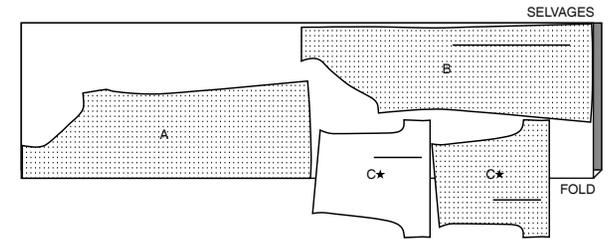


45" (115CM)
WITH NAP
SIZES 20 22 24 26

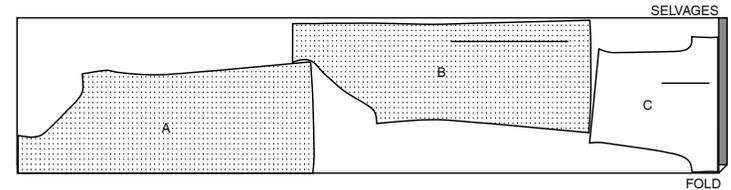

60" (150CM)
WITH NAP
SIZES 8 10 12 14 16 18 20 22

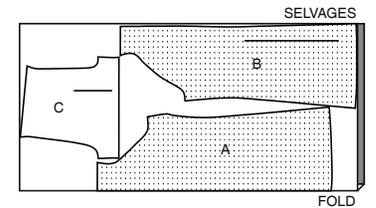

60" (150CM)
WITH NAP
SIZES 24 26

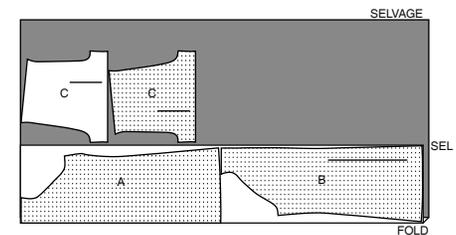



Congrats!

You've completed your sewing adventure

**SHARE
YOUR** LOOK



Post your pattern and tag us
@simplicity_creative_group and **#simplicitypatterns**
for a chance to be featured on our social media.

Look for more PDF patterns at [simplicity.com](https://www.simplicity.com)

Have a question or need help with your sewing project call us at
1-888-588-2700



Simplicity ©2023 a division of IG Design Group Americas Inc. • Atlanta, GA 30342 USA www.thedesigngroup.com • All Rights Reserved. www.simplicity.com • Made in the U.S.A. Fabriqué aux États-Unis.

To be used for individual private home use only and not for commercial or manufacturing purposes. • A usage privé seulement et non à des fins commerciales ou de production en série. • Para uso privado solamente, no se puede utilizar con propósitos de comercialización o de producción en serie.