


SHAD

HONDA INTEGRA 750 '14 -'16


HONG77IF



1 261972 x1 →
261973 x1 ←

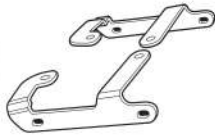

2 262110 x1 →
262111 x1 ←

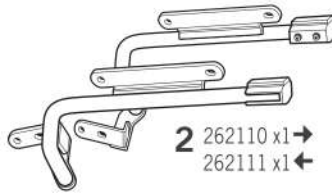

3 304028 x4
M8 x 25 DIN 7380



4 303020 x4
Ø8



5 302024 x4
M8



6 304211 x2
M8 x 15 DIN 933



7 303045 x10
Ø8



8 260213 x4
Ø16 Ø9 x 12



9 304272 x4
M8 x 35 DIN 7380



! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

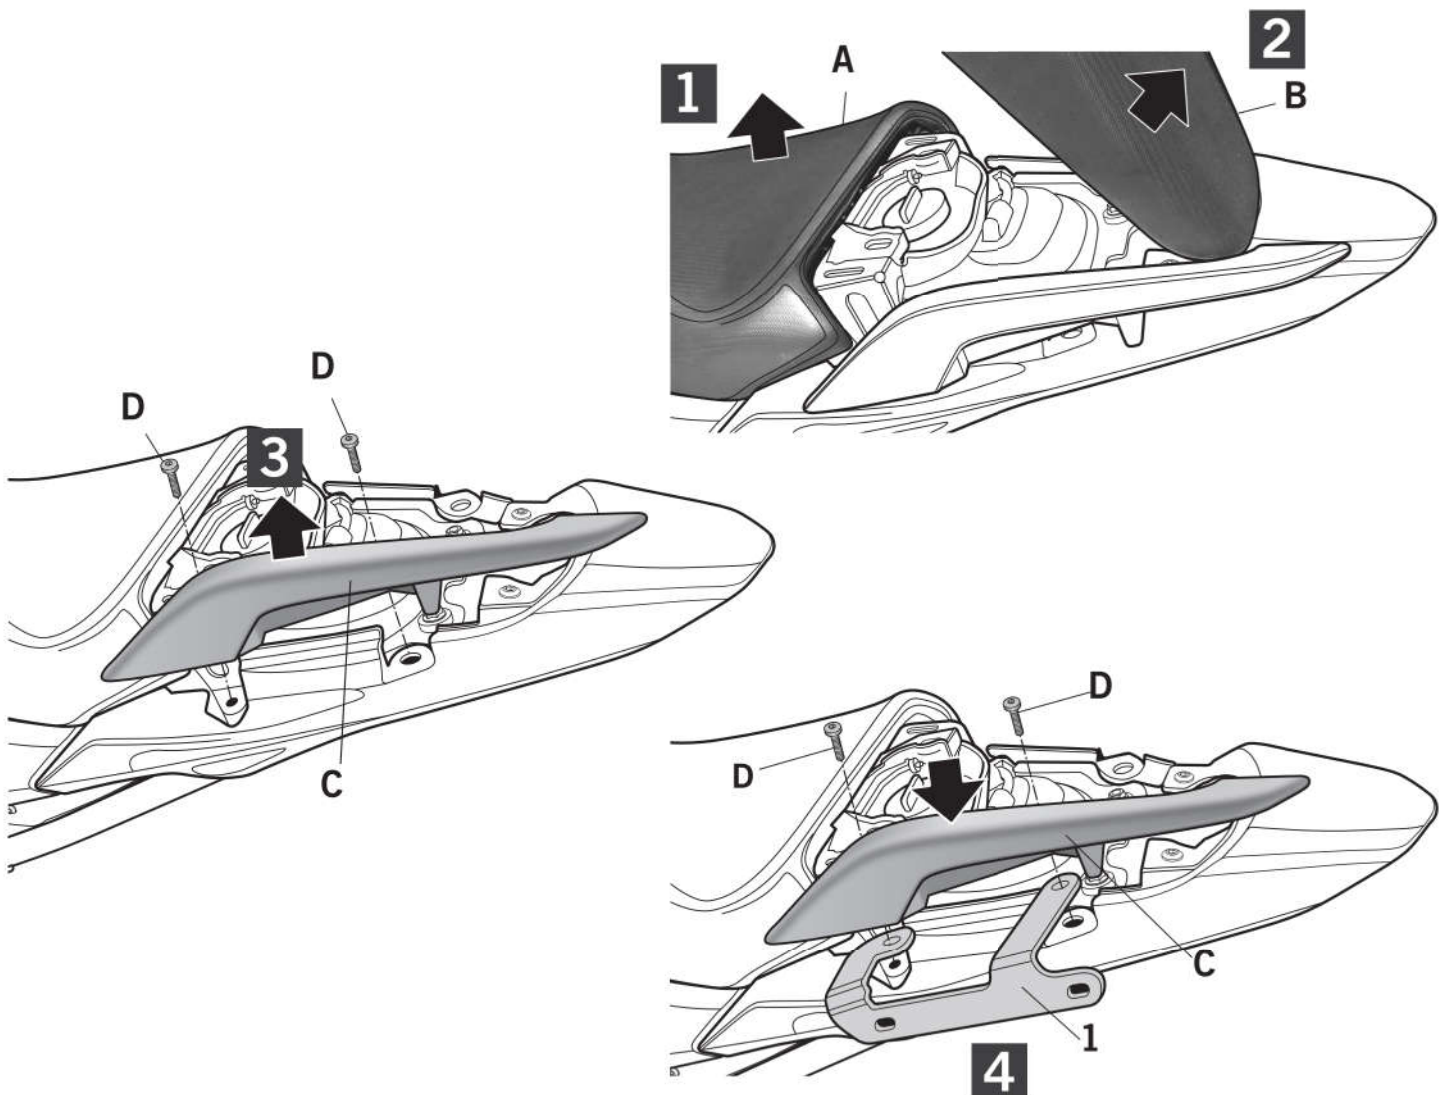

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

