

SHAD

KTM 390 ADVENTURE '20-

3P KITS K0DK30IIF



1 K0DK30IIF-IM x1



2 K0IDK30IF-02 x1
SUPPORT PLATE REAR



3 K0IDK30IF-02 x1
SUPPOR PLATE FRONT



4 FOD012 x4
BUSHING Ø16 Ø10X10



5 EOD028 x12
FLAT WASHER M8



6 EOD017 x4
BOLT M8X40 DIN912



7 EOD014 x4
BOLT M8X25 DIN912



8 EOD034 x4
NUT NYLON M8



9 EOD021 x2
BOLT M8X60 DIN912



10 FOD011 x2
BUSHING Ø16 Ø10X5



11 EOD053 x6
SPLIT LOCK WASHER M8

WARNING!






(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

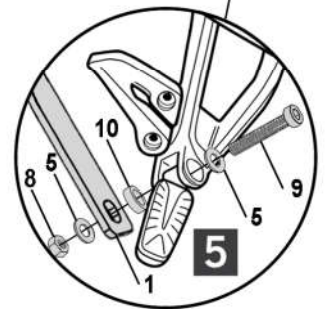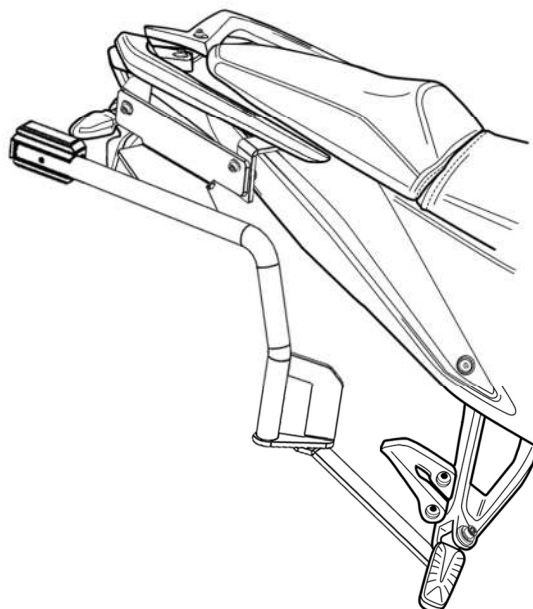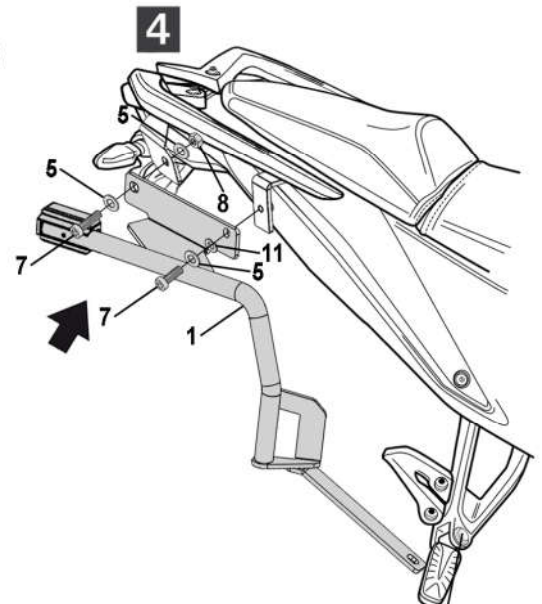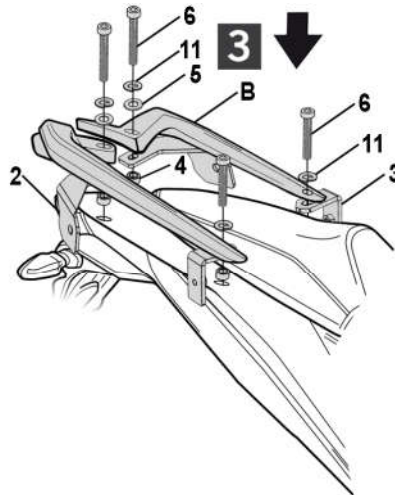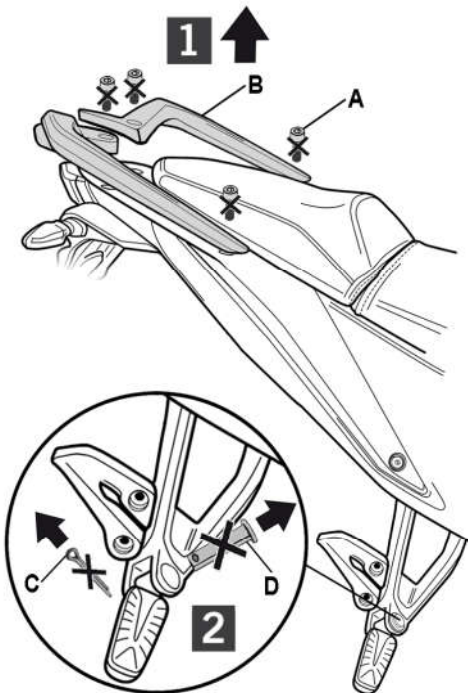

WWW.SHAD.ES

N° 90 Edition 0

*Using Bolt M8x50 DIN912
from K0DK30IST

