


1 K0VR68I4P-IM x1

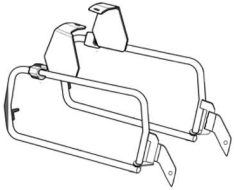

2 EOD017 x2
BOLT M8X40 DIN912



3 EOD028 x4
WASHER M8



4 EOD064 x2
WASHER M8X24



5 EOD035 x2
NYLON NUT M8



6 EOD005 x2
BOLT M6X15 DIN912



7 EOD027 x4
WASHER M6



8 AS JOINT
4P VERSYS 650 x1



9 EOD034 x2
NYLON NUT M6



10 EOD053 x2
SPLIT LOCK WASHER M8



11 EOD014 x2
BOLT M8X25 DIN912



WARNING! ⚠

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

