


SHAD

VOGE SR4 MAX '22

TOP MASTER V0SR42ST

BCN

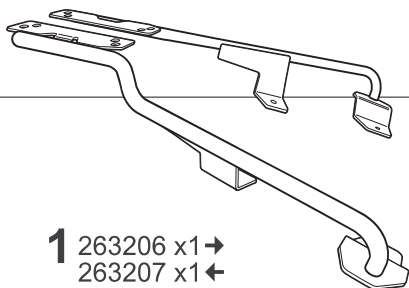

1 263206 x1 →
263207 x1 ←



2 260712 x2
Ø20 Ø11 x 22



3 303045 x4
Ø8



4 304036 x4
M8x45 DIN 7380



5 260740 x2
Ø20 Ø11 x 11

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.


F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

A **1**

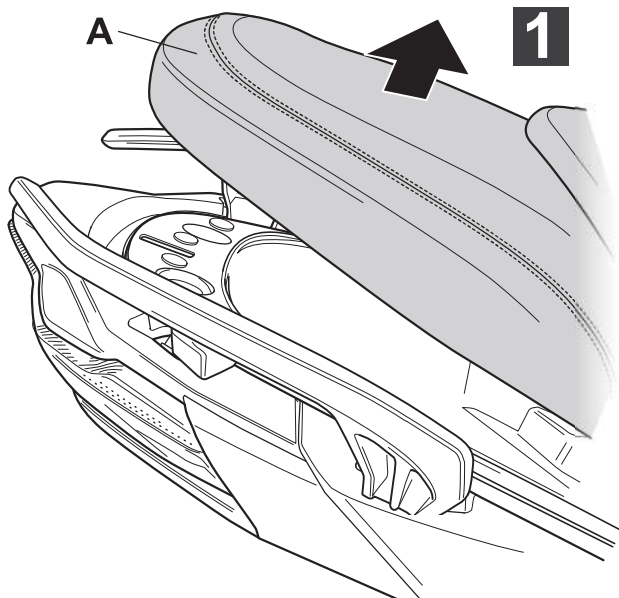

B

2

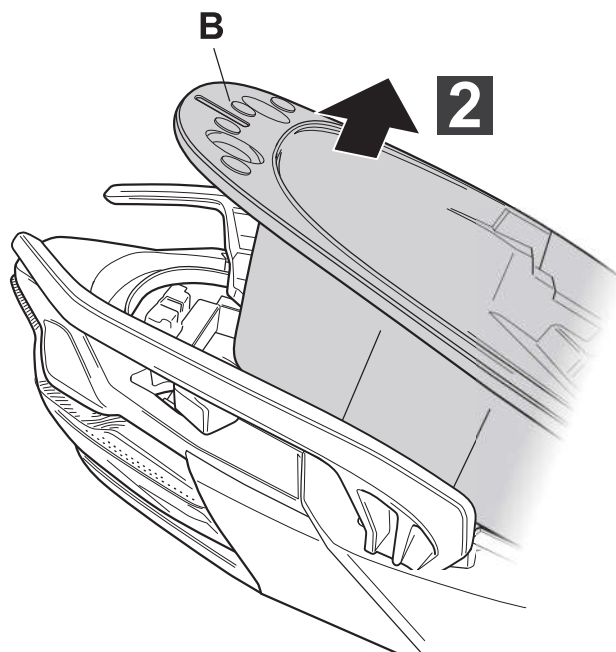

C

3

