




Thank you for purchasing this New Look pattern.
We made every effort to provide you with a high quality product.
Gracias por haber comprado este patrón de New Look.
Hemos hecho todos los esfuerzos para ofrecerle un producto de alta calidad.

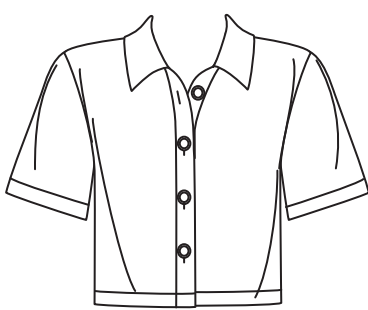


A

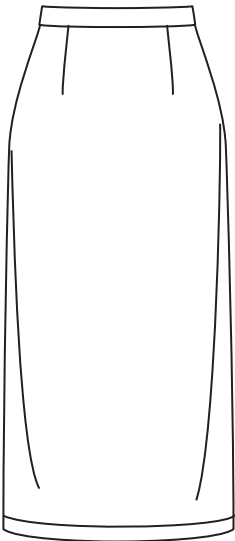

B

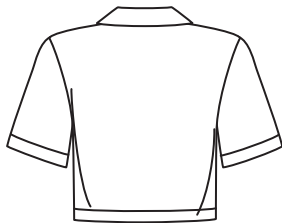


A

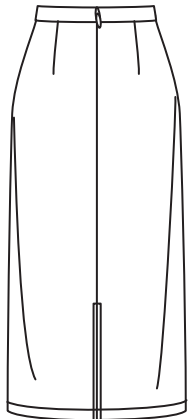


B

9 PIECES

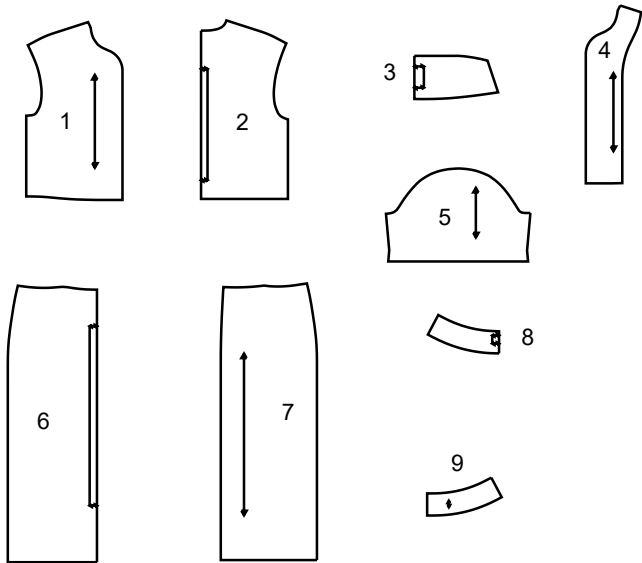

- 1 FRONT - A
2 BACK - A
3 COLLAR - A
4 FRONT FACING - A
5 SLEEVE - A
6 FRONT - B
7 BACK - B
8 WAISTBAND FRONT - B
9 WAISTBAND BACK - B

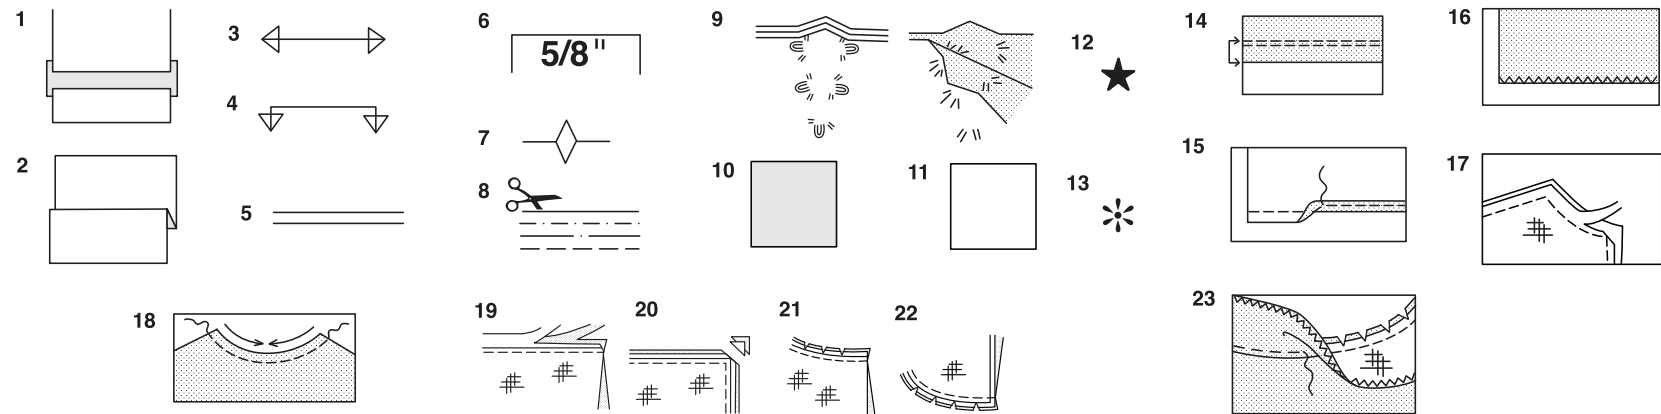

How To Use Your Multi Size Pattern

First Prepare Your Pattern

Select the pattern pieces according to the view you are making.

This pattern is made to body measurements with ease allowed for comfort and style. If your body measurements differ from those on the pattern envelope adjust the pieces before placing them on the fabric.

Check your back neck to waist and dress length, if necessary, alter the pattern. Lengthening and shortening lines are indicated.

- TO LENGTHEN** : Cut pattern between printed lines and place paper underneath. Spread pattern the required amount and pin to paper.
- TO SHORTEN** : Fold at the printed lines to form a pleat half the amount to be shortened, ie 1/2" (1.3cm) deep to shorten 1" (2.5cm).

Study Your Pattern Markings

- STRAIGHT GRAIN** : Place an even distance from selvage or a straight thread.
- FOLD** : Place on fold of fabric.
- LENGTHENING AND SHORTENING LINES.**
- SEAM ALLOWANCE** : 5/8" (1.5cm) unless otherwise stated.
- NOTCHES** : Match notches.
- CUTTING LINES** : Multi patterns have different cutting lines for different sizes.
- TAILOR-TACKS** : With double thread make two loose stitches forming loop through fabric layers and pattern leaving long ends. Cut loop to remove pattern. Snip thread between fabric layers. Leave tufts.

Cutting Layouts

Cutting Directions

FOR FOLDED AND DOUBLE LAYER FABRIC - Place fabric with right side insideand pin pattern on wrong side of fabric.

FOR SINGLE LAYER - Pin pattern on right side of fabric.
NOTE: Pattern pieces may interlock more closely for smaller sizes. Cut notches out from cutting line.

BEFORE removing pattern from fabric, transfer all pattern markings using tailor tacks or dressmaking tracing paper.

- KEY:** pattern printed side down
- KEY:** pattern printed side Up
- KEY:** Cut out all pieces except pieces that extend beyond folded fabric, then open out fabric and on RIGHT side of fabric, cut in positions as shown.
- KEY:** For with and without nap layouts ensure fabric is placed with nap or design running in same direction.

Before pinning to fabric, press tissue pattern with a warm dry iron to remove creases.

Sewing Directions

Fabric Key	Right Side	Wrong Side	Interfacing	Lining

Sew garment following **Sewing Directions.**

PIN or machine-baste seams matching notches.

STITCH 5/8" (1.5cm) seams unless otherwise stated.

PRESS seams open unless otherwise indicated, clipping when necessary so seams will lie flat.

14. EASE-STITCH or **GATHER** - Loosen needle tension slightly. With RIGHT side up, stitch 5/8" (1.5cm) from cut edge using a long stitch. Stitch again 1/4" (6mm) away in the seam allowance.

EDGE FINISH - Neaten raw edges of seams, hems and facings using one of the following methods.

- Stitch 1/4" (6mm) from edge, turn under along stitching and stitch.
- Zig-zag or overlock raw edges.

17. INTERFACING — Pin interfacing to WRONG side of fabric. Cut across corners that will be enclosed with seams. Machine-baste 1/2" (1.3cm) from cut edge. (Shown only on first illustration). Trim interfacing close to machine-basting. For FUSIBLE interfacing, follow manufacturer's directions.


18. STAY-STITCH —Stitch 1/2" (1.3cm) from cut edge, in direction of arrows: (Shown on ly in the first illustration).

LAYERING — Trim seam allowance in layers.

- Layer enclosed seams
- Trim corners
- Clip inner curves
- Notch outer curves

23. UNDERSTITCH —Press facing away from garment; press seam toward facing. Facing side up, understitch close to seam through facing and seam allowances.



Cutting Layouts

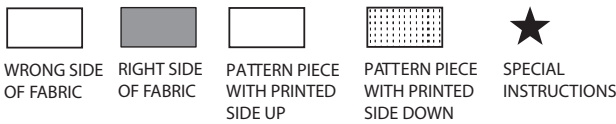


A TOP

USE PIECES 1 2 3 4 5

1A 44" 45" (115CM)
WITH NAP

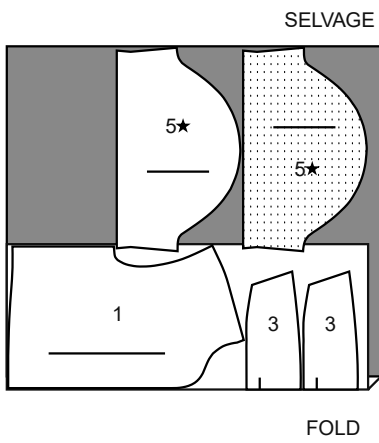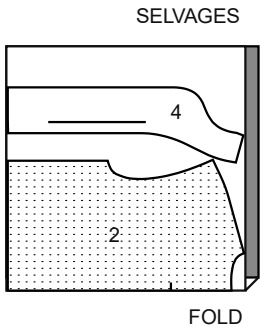


1B 58" 60" (150CM)
WITH NAP

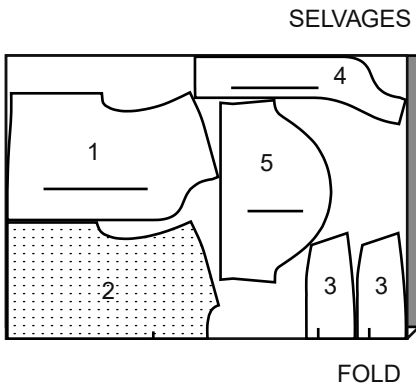

INTERFACING

USE PIECES 3 4


1C 20" TO 25" (51CM TO 64CM) FUSIBLE

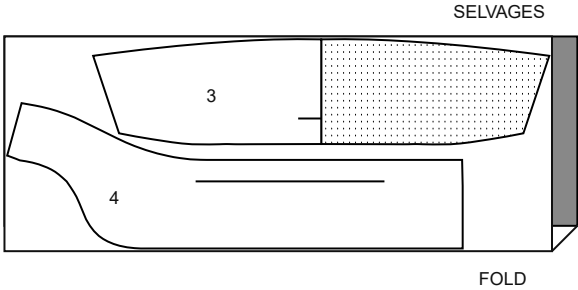


B SKIRT

USE PIECES 6 7 8 9

2A 44" 45" (115CM)
WITH NAP

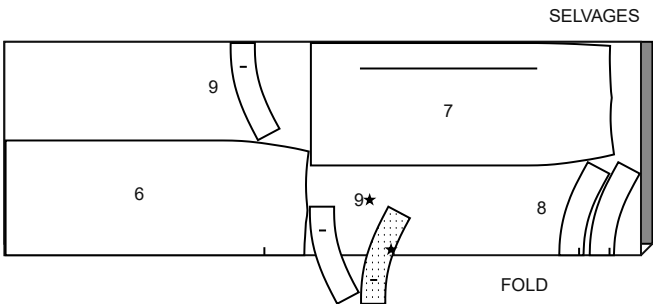


2B 58" 60" (150CM)
WITH NAP

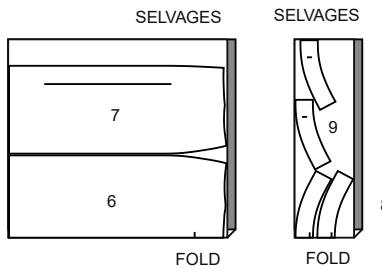

INTERFACING

USE PIECES 8 9

2C 20" TO 25" (51CM TO 64CM)
FUSIBLE

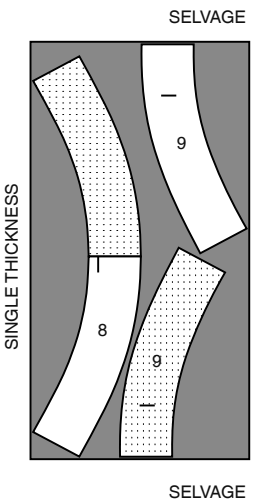

Español

A BLUSA

USE LAS PIEZAS 1 2 3 4 5

1A 44" 45" (115CM)
CON PELUSA
1B 58" 60" (150CM)
CON PELUSA

ENTRETELA

USE LAS PIEZAS 3 4

1C 20" A 25" (51CM A 64CM) ADHESIVA

B FALDA

USE LAS PIEZAS 6 7 8 9

2A 44" 45" (115CM)
CON PELUSA
2B 58" 60" (150CM)
CON PELUSA

ENTRETELA

USE LAS PIEZAS 8 9

2C 20" A 25" (51CM A 64CM)
ADHESIVA

SELVAGE(S)= ORILLA(S)
FOLD= DOBLEZ
SINGLE THICKNESS= ESPESOR SIMPLE

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.

STITCH SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.

TOP A











- 1. STAY-STITCH neck edge of front (1) sections above large dot.
- 2. STAY-STITCH neck edge of back (2).

- 3. Stitch back to front sections at shoulders and sides.

- 4. Apply INTERFACING to one collar (3) section.
Machine stitch neck edge of collar facing along seamline through small dots. Clip to small dots.
Press under seam allowance between clips.
With RIGHT sides together, pin collar to collar facing, matching small and large dots. Stitch ends and unnotched edge. LAYER seam.

- 5. Turn collar RIGHT side out. Press. UNDERSTITCH collar facing as far as possible.
Clip top to stay-stitching along curves. Pin collar (facing side) to neck edge, matching center back, notches and large dots, placing small dots at shoulder seams. Baste, keeping pressed edge free.

- 6. Apply INTERFACING to front facing (4) sections. EDGE-FINISH outer unnotched edge of facing.
Press under seam allowance on shoulder edge of facing. Stitch close to edge.

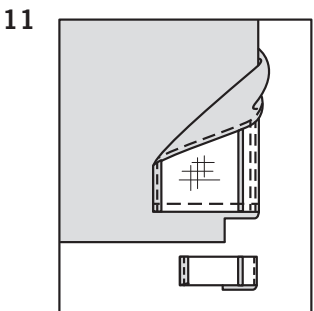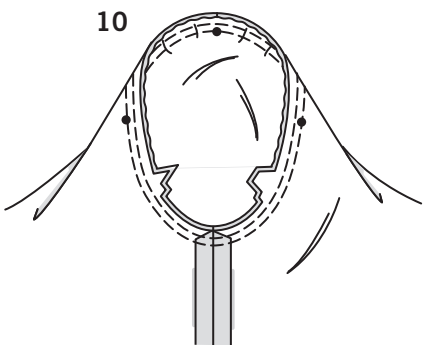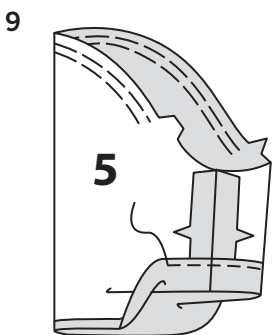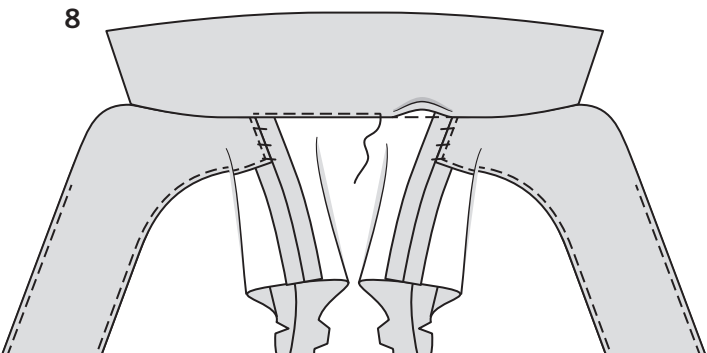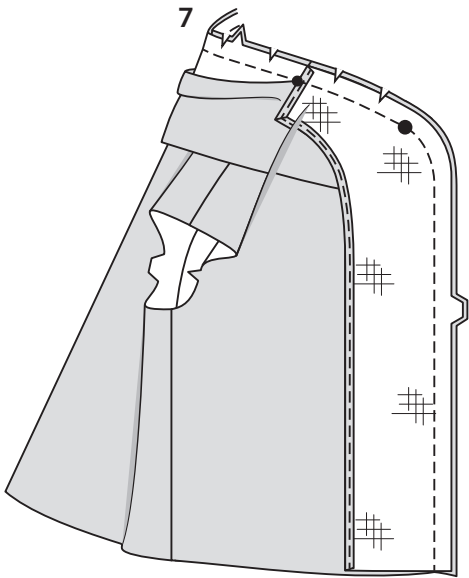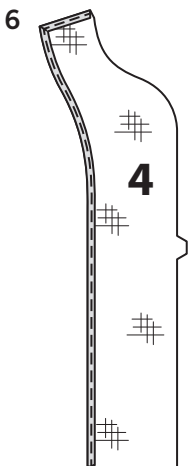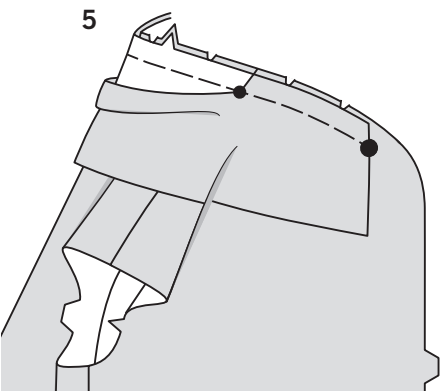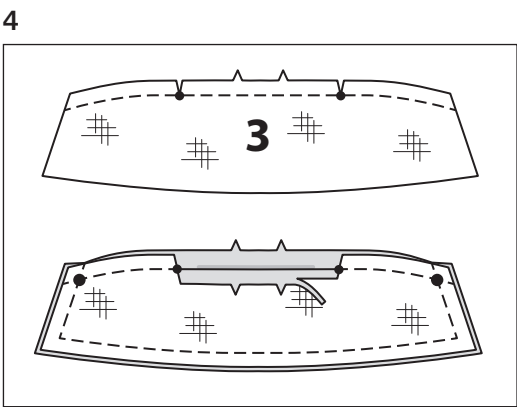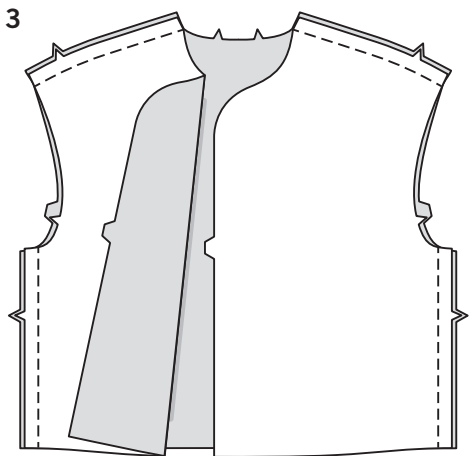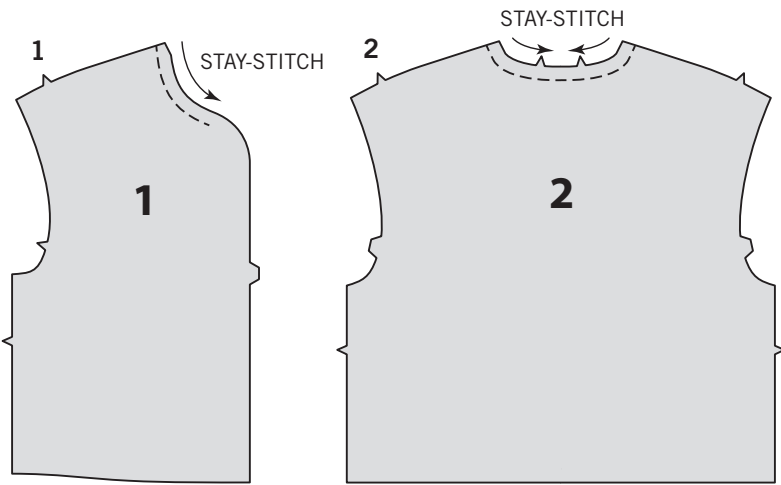


- 7. With RIGHT sides together, pin front facings to top, matching large dots. Stitch front and neck edge, keeping pressed under edge of collar free. LAYER seam.

- 8. UNDERSTITCH facing as far as possible.
Turn facing to INSIDE; press, pressing back neck seam toward collar.
Pin pressed edge of collar over seam, placing pins on OUTSIDE. On OUTSIDE, stitch close to neck edge of back, catching in pressed edge of collar on INSIDE, removing pins as you come to them.
Hand-sew pressed under edge of front facing to shoulder seam.


- 9. Stitch underarm seam in sleeve (5).
Press up hem.
Press under 1/4" (6mm) on raw edge.
Stitch close to inner pressed edge.

- 10. Turn sleeve RIGHT side out. Hold top WRONG side out with armhole toward you. With RIGHT sides together, pin sleeve to armhole edge with center small dot at shoulder seam, matching underarm seams, notches and remaining small dots.
Baste. Stitch. Stitch again 1/8" (3mm) from first stitching. Trim seam allowance below notches close to stitching. Press only the seam allowance.


- 11. Turn lower edge of front facing to OUTSIDE along seam. Stitch across facing 1-1/4" (3.2cm) above lower edge. Trim lower edge of facing close to stitching. Trim top to within 5/8" (1.5cm) of inner edge of facing.

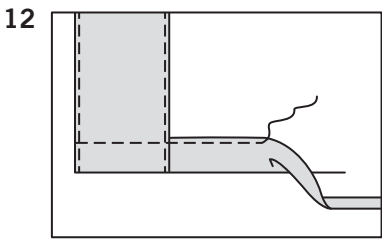

12. Turn facing to INSIDE; press, pressing up hem. Press under 1/4" (6mm) on raw edge. Stitch hem in place starting at opening edge. Hand-sew facing to hem using small stitches.

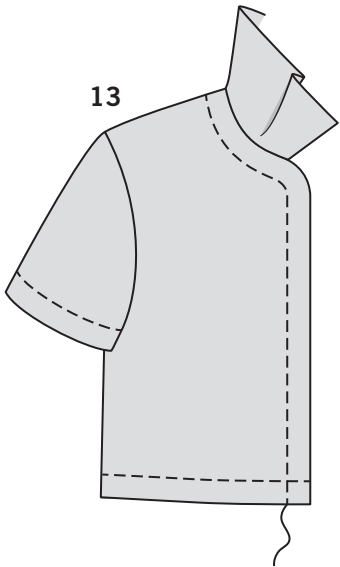


13. TOP-STITCH 1" (2.5cm) from front opening and neck edge, ending at shoulder seam.

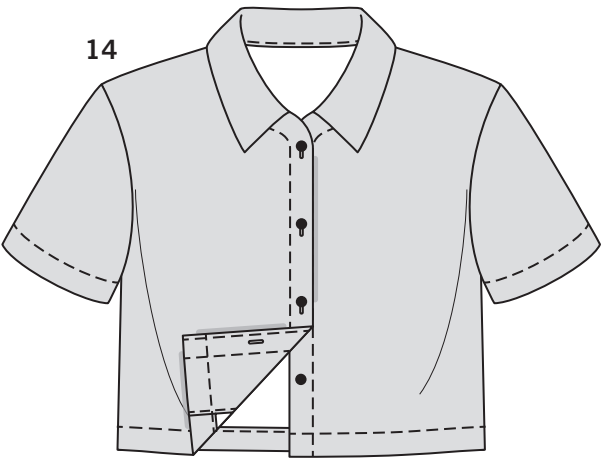


14. Mark buttonholes in right front at markings. Lap right front over left, matching center fronts. Sew buttons to left front under buttonholes.


SKIRT B

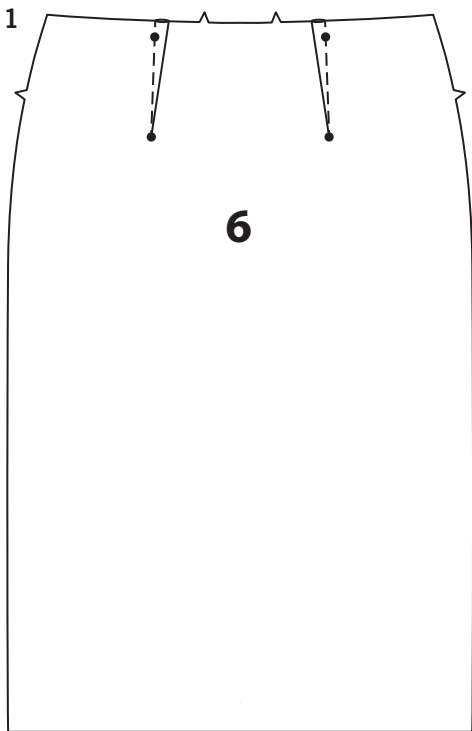


1. To make darts in front (6), with RIGHT sides together, bring solid lines together, matching small dots. Stitch from wide end to point. Press darts toward center front.

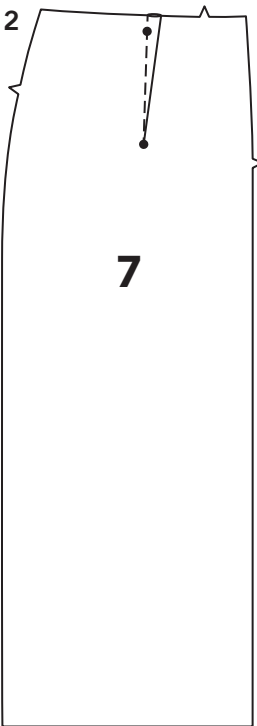

2. To make dart in each back (7) section, with RIGHT sides together, bring solid lines together, matching small dots. Stitch from wide end to point. Press dart toward center back.

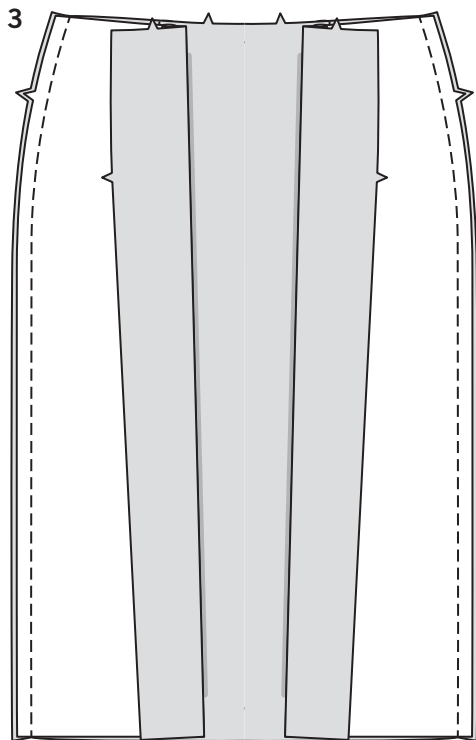


3. Stitch front to back sections at sides.

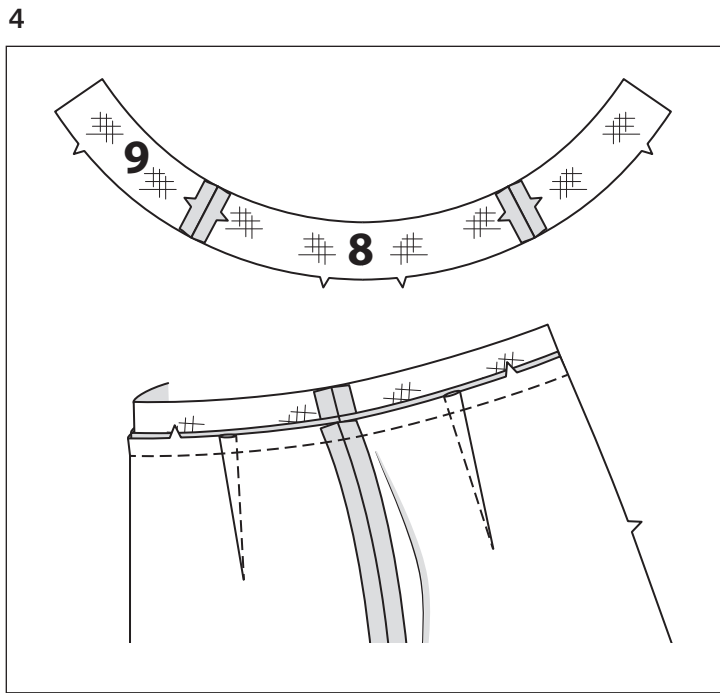


4. Apply **INTERFACING** to one waistband front (8) and two waistband back (9) sections. Stitch waistband back sections to waistband front at sides. Pin waistband to upper edge of skirt, matching center back, side seams and center front. Stitch. **LAYER** seam. Press seam toward waistband.

NOTE: *Stitch the invisible zipper using an invisible zipper foot. Before you begin, be sure to line up your needle with the center of the invisible zipper foot or you may break your needle. When the coils are to the LEFT of the raw edge use the LEFT groove and when the coils are to the RIGHT of the raw edge use the RIGHT groove.*

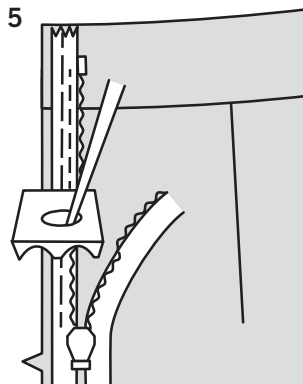

5. Open the zipper and press the tape flat on the WRONG side unrolling the coils. Do not press the coils. (Use a low iron setting.) On OUTSIDE, pin RIGHT side of the zipper face down on the RIGHT side of the zipper opening. Have the coil along the seam line, the tape within the seam allowance and the top stop 3/4" (2cm) below upper edge, as shown. Hand-baste along center of the tape. Position zipper foot at the top of the zipper with RIGHT groove of the foot over coil. Stitch along tape to the notch. Back-stitch to reinforce.

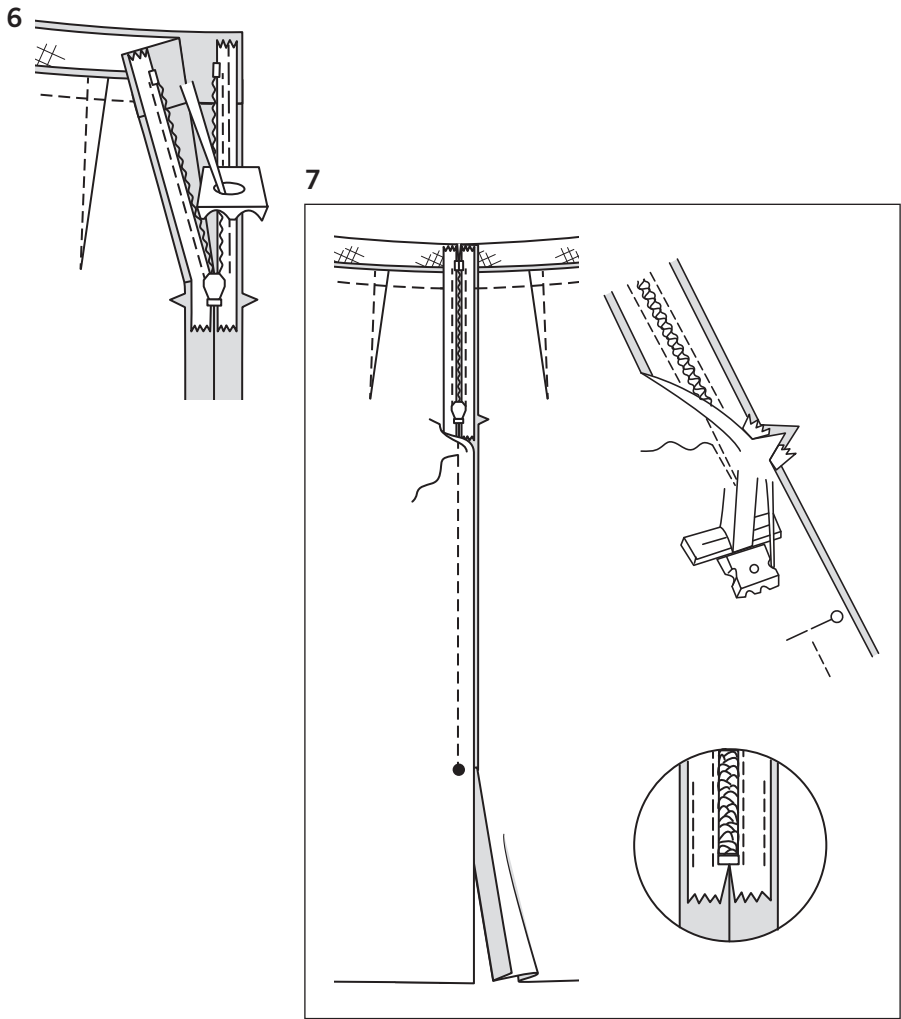

6. Pin the remaining half of the zipper to the LEFT side of the zipper opening in same manner. Make sure the upper edges of the garment are even. Hand-baste along the center of the tape. Position zipper foot at the top of the zipper with LEFT groove over coil. Stitch along tape to the notch. Back-stitch to reinforce.

7. Close zipper and check that it is visible from the OUTSIDE. Pull the free ends of the zipper tape away from the seam allowance. Pin remaining center back seam together below zipper. Position zipper foot all the way to the LEFT so that needle goes down through the outer notch of the foot. Start stitching seam 1/4" (6mm) above lowest stitch and slightly to the LEFT. Stitch seam for about 3" (7.5cm). Stitch remainder of seam, using your regular zipper foot, ending at large dot. If you prefer, open out each seam allowance at end of zipper and stitch tape to seam allowances.

8. Stitch waistband back facing sections to waistband front facing at sides. Press under 3/8" (1cm) on lower edge of facing.

9. Open out center back opening edges, rolling the zipper teeth away from opening edges. With RIGHT sides together, pin facing to waistband at upper edge, matching center back, side seams and center front. Stitch. LAYER seam.

10. Turn waistband facing to INSIDE; press. Turn in ends to clear zipper teeth. Sew to zipper tape. Pin pressed edge of facing over seam, placing pins on OUTSIDE. On OUTSIDE, stitch in the "ditch" or groove of the waistband seam, catching pressed edge of facing on INSIDE, removing pins as you come to them.

11. Mark hem. Press up hem along marking. Trim depth of hem. Turn under 1/4" (6mm) on raw edge. Stitch close to inner pressed edge.

12. Press under 5/8" (1.5cm) hem allowance on back opening edges of skirt. To form narrow hem, tuck under raw edge to meet crease. Press. Stitch hem in place, squaring stitching above opening.

1. **HAGA PUNTADA DE SOSTEN** al borde del escote, de la sección frontal (1) y por encima del punto grande.
2. **HAGA PUNTADA DE SOSTEN** al borde del escote de la espalda (2).
3. Cosa las secciones de la espalda al frente, en las costuras de los hombros y en las laterales.
4. Aplique **ENTRETELA** a una sección del cuello (3). Cosa a máquina el borde del escote de la vista del cuello, a lo largo de la línea de la costura y a través de los puntos pequeños. Haga cortes a los puntos pequeños. Planche un doblez al margen de la costura entre los cortes. DERECHO CON DERECHO, sujete con alfileres el cuello a la vista del cuello, casando los puntos pequeños y grandes. Cosa los extremos y el borde sin muescas. Recorte la costura a **DIFERENTES NIVELES**.

5. Voltee el cuello al lado DERECHO. Planche. **HAGA PUNTADA OCULTA** a la vista del cuello y hasta donde sea posible. Haga cortes a la blusa, para hacerle puntada de sostén a lo largo de las curvas. Sujete con alfileres el cuello (lado de la vista) al borde del escote, casando la parte trasera centra, las muescas y los puntos grandes, colocando los puntos pequeños en las costuras de los hombros. Hilvane, manteniendo el borde doblado libre.

6. Aplique **ENTRETELA** a la sección de la vista frontal (4). **TERMINE EL BORDE** sin muescas exterior de la vista. Planche un doblez al margen de la costura, sobre el borde de los hombros de la vista. Cosa cerca del borde.

7. DERECHO CON DERECHO, sujete con alfileres la vista frontal a la blusa, casando los puntos grandes. Cosa el borde frontal y el del escote, manteniendo el borde doblado del cuello libre. Recorte la costura a **DIFERENTES NIVELES**.

8. **HAGA PUNTADA OCULTA** a la vista y hasta donde sea posible. Voltee la vista al INTERIOR; planche, planchando la costura del escote trasero hacia el cuello. Sujete con alfileres el borde doblado del cuello sobre la costura, colocando los alfileres en el EXTERIOR. En el EXTERIOR, cosa cerca del borde del escote de la espalda, agarrando el borde doblado del cuello en el INTERIOR, retirando los alfileres a medida que los encuentre. Cosa a mano el borde doblado de la vista frontal, hasta la costura de los hombros.

9. Cosa la costura de debajo de los brazos de la manga (5). Planche hacia arriba el dobladillo. Planche un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa cerca del borde doblado interior.

10. Voltee la manga al lado DERECHO. Sostenga la blusa al REVES, con la sisa hacia usted. DERECHO CON DERECHO, sujete con alfileres la manga y el borde de la sisa, con el punto pequeño central en la costura de los hombros, casando las costuras de debajo de los brazos, las muescas y los puntos pequeños restantes. Hilvane. Cosa. Cosa de nuevo a 1/8" (3mm) de la puntada previa. Recorte la costura por debajo de las muescas y cerca de la puntada. Planche únicamente el margen de la costura.

11. Voltee el borde inferior de la vista frontal, al EXTERIOR y a lo largo de la costura. Cosa a través de la vista a 1-1/4" (3.2cm), por encima del borde inferior. Recorte el borde inferior de la vista cerca de la puntada. Recorte la blusa hasta dentro de 5/8" (1.5cm), del borde interior de la vista.

12. Voltee la vista al INTERIOR; planche, planchando hacia arriba el dobladillo. Planche un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa el dobladillo en su lugar, comenzando en el borde abierto. Cosa a mano la vista al dobladillo, usando algunas pequeñas puntadas.

13. **HAGA PUNTADA DE ADORNO** a 1" (2.5cm), desde la abertura frontal y el borde del escote, terminando en la costura de los hombros.

14. Marque los ojales en el frente derecho, sobre las marcas. Cruce el frente derecho sobre el izquierdo, casando los frentes centrales. Cosa los botones al frente izquierdo, debajo de los ojales.

1. para hacer las pinzas en el frente (6), DERECHO CON DERECHO, lleve juntas las líneas continuas, casando los puntos pequeños. Cosa desde el extremo ancho hasta la punta. Planche las pinzas hacia el frente central.

2. Para hacer la pinza en cada sección trasera (7), DERECHO CON DERECHO, lleve juntas las líneas continuas, casando los puntos pequeños. Cosa desde el extremo ancho hasta la punta. Planche la pinza hacia la parte trasera central.

3. Cosa la sección frontal a la parte trasera en los lados.

4. Aplique **ENTRETELA** a una sección frontal de la pretina (8) y a dos partes traseras de la pretina (9). Cosa la sección de la parte trasera a la frontal de la pretina en los lados. Sujete con alfileres la pretina, al borde superior de la falda, casando la parte trasera central, las costuras laterales y el frente central. Cosa. Recorte la costura a **DIFERENTES NIVELES**. Planche la costura hacia la pretina.

NOTA: Cosa la cremallera de manera invisible, usando un pie para cremallera invisible. Antes de comenzar, asegúrese de alinear arriba la aguja con el centro del pie para cremallera invisible, o usted podrá romper la aguja. Cuando las bobinas están a la IZQUIERDA del borde no terminado, use la ranura IZQUIERDA y cuando las bobinas estén al DERECHO del borde no terminado, use la ranura DERECHA.

5. Abra la cremallera y planche la cinta plana al REVES, desenrollando las bobinas. No planche las bobinas (Use plancha tibia). En el EXTERIOR, sujete con alfileres el lado DERECHO de la cremallera, con la cara hacia abajo, sobre el lado DERECHO de la abertura de la cremallera. Mantenga la bobina a lo largo de la línea de la costura, la cinta de la cremallera dentro del margen de la costura y la parte superior de la lengüeta a 3/4" (2cm), por debajo del borde superior, como se muestra. Hilvane a mano a lo largo del centro de la cinta de la cremallera. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura DERECHA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.

6. Sujete con alfileres la mitad restante de la cremallera, al lado IZQUIERDO de la abertura de la cremallera, de la misma manera. Asegúrese de emparejar los bordes superiores de la prenda. Hilvane a mano a lo largo del centro de la cinta. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura IZQUIERDA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.

7. Cierre la cremallera y verifique que sea invisible desde el EXTERIOR. Hale de los extremos libres de la cinta de la cremallera, aparte del margen de la costura. Sujete con alfileres conjuntamente la costura trasera central, por debajo de la cremallera. Coloque el prénsatelas a la IZQUIERDA, así la aguja baja a través de la muesca exterior del pie. Comience cosiendo la costura a 1/4" (6mm), por encima de la puntada más baja y ligeramente a la IZQUIERDA. Cosa la costura por alrededor de 3" (7.5cm). Cosa el resto de la costura, usando un prénsatelas regular, terminando en el punto grande. Si lo prefiere, abra cada margen de la costura, en el extremo de la cremallera y cosa, la cinta de la cremallera a los márgenes de la costura.

8. Cosa las secciones de la vista trasera de la pretina, a la vista frontal de la pretina en los lados. Planche un doblez de 3/8" (1cm), sobre el borde inferior de la vista.

9. Abra los bordes abiertos traseros centrales, enrollando los dientes de la cremallera aparte de los bordes abiertos. DERECHO CON DERECHO, sujete con alfileres la vista a la pretina en el borde superior, casando la parte trasera central, las costuras laterales y el frente central. Cosa. Recorte la costura a **DIFERENTES NIVELES**.

10. Voltee la vista de la pretina al INTERIOR; planche. Voltee los extremos, para dejar libres los dientes de la cremallera. Cosa hasta la cinta de la cremallera. Sujete con alfileres el borde doblado de la vista sobre la costura, colocando los alfileres en el EXTERIOR. En el EXTERIOR, cosa en la "ranura" o hendidura de la costura de la pretina, agarrando el borde doblado de la vista al INTERIOR, retirando los alfileres a medida que los encuentre.

11. Marque el dobladillo. Planche hacia arriba el dobladillo a lo largo de la marca. Recorte el ancho del dobladillo. Voltee un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa cerca del borde doblado interior.

12. Planche un doblez de 5/8" (1.5cm), al margen del dobladillo sobre los bordes abiertos traseros de la falda. Para formar el dobladillo angosto, doble hacia adentro el borde no terminado hasta el pliegue. Planche. Cosa el dobladillo en su lugar, girando la puntada por encima de la abertura.