




Thank you for purchasing this New Look pattern.
We made every effort to provide you with a high quality product.
Gracias por haber comprado este patrón de New Look.
Hemos hecho todos los esfuerzos para ofrecerle un producto de alta calidad.

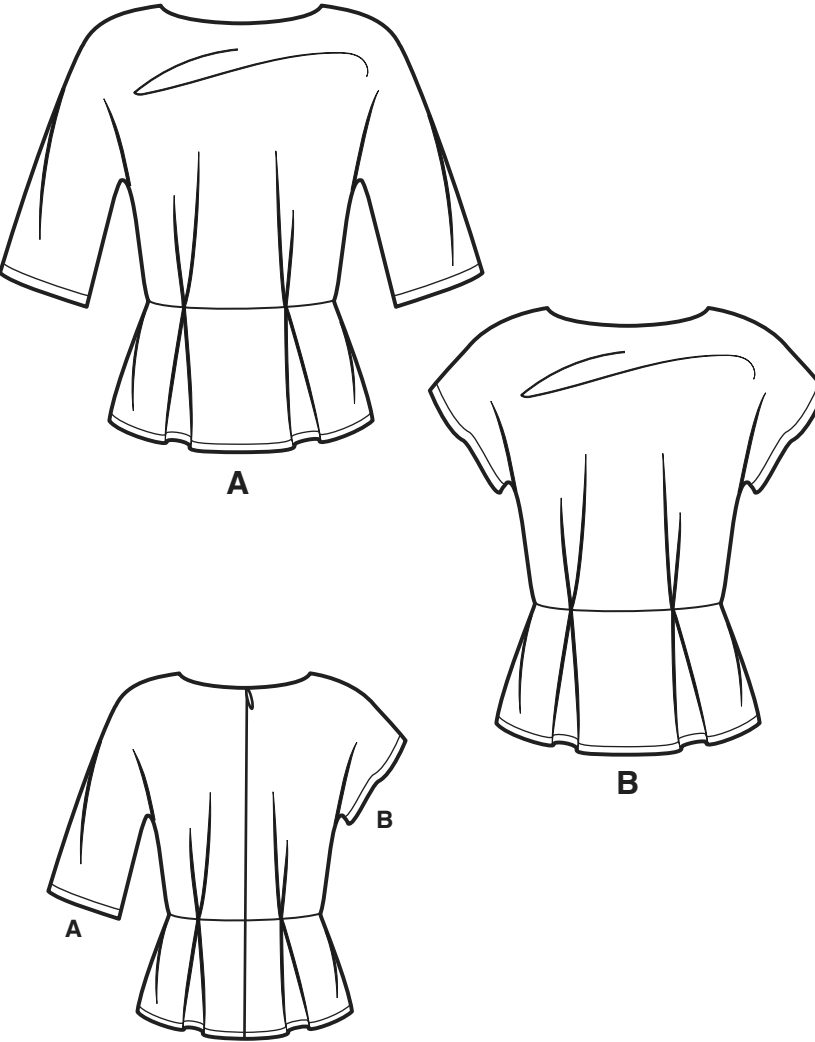

6 PIECES

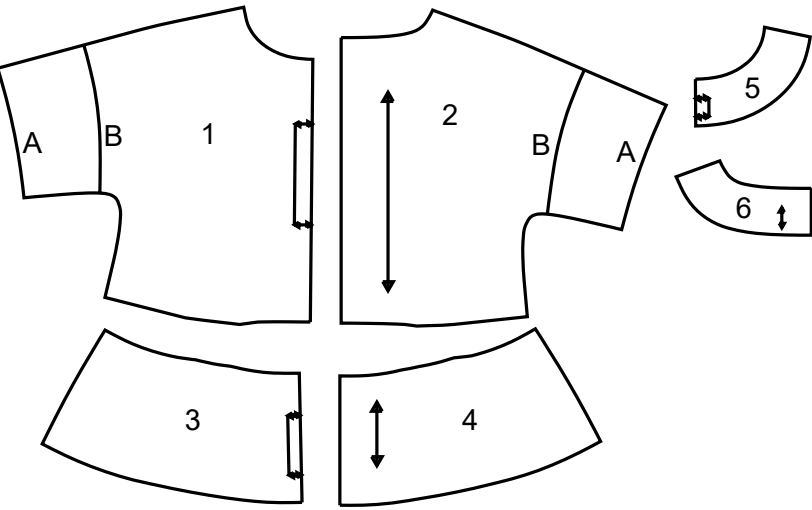

- 1 FRONT-A,B
2 BACK-A,B
3 PEPLUM FRONT-A,B
4 PEPLUM BACK-A,B
5 FRONT FACING-A,B
6 BACK FACING-A,B

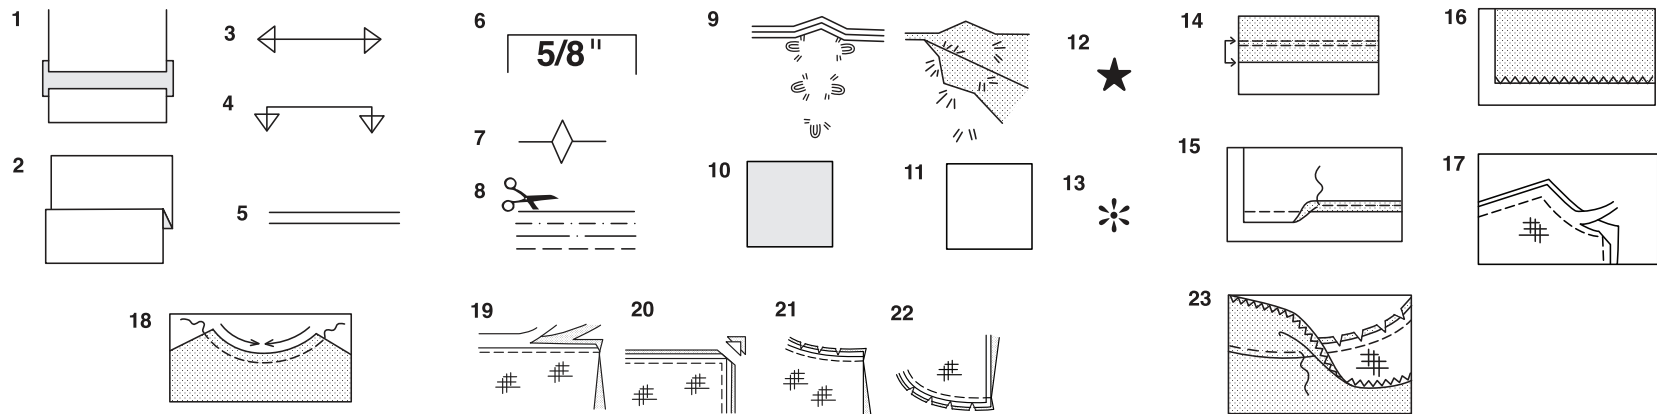

How To Use Your Multi Size Pattern

First Prepare Your Pattern

Select the pattern pieces according to the view you are making.

This pattern is made to body measurements with ease allowed for comfort and style. If your body measurements differ from those on the pattern envelope adjust the pieces before placing them on the fabric.

Check your back neck to waist and dress length, if necessary, alter the pattern. Lengthening and shortening lines are indicated.

1. **TO LENGTHEN** : Cut pattern between printed lines and place paper underneath. Spread pattern the required amount and pin to paper.
2. **TO SHORTEN** : Fold at the printed lines to form a pleat half the amount to be shortened, ie 1/2" (1.3cm) deep to shorten 1" (2.5cm).

Study Your Pattern Markings

3. **STRAIGHT GRAIN** : Place an even distance from selvage or a straight thread.
4. **FOLD** : Place on fold of fabric.
5. **LENGTHENING AND SHORTENING LINES.**
6. **SEAM ALLOWANCE** : 5/8" (1.5cm) unless otherwise stated.
7. **NOTCHES** : Match notches.
8. **CUTTING LINES** : Multi patterns have different cutting lines for different sizes.
9. **TAILOR-TACKS** : With double thread make two loose stitches forming loop through fabric layers and pattern leaving long ends. Cut loop to remove pattern. Snip thread between fabric layers. Leave tufts.

Cutting Layouts

Cutting Directions

FOR FOLDED AND DOUBLE LAYER FABRIC - Place fabric with right side inside and pin pattern on wrong side of fabric.

FOR SINGLE LAYER - Pin pattern on right side of fabric.
NOTE: Pattern pieces may interlock more closely for smaller sizes. Cut notches out from cutting line.

BEFORE removing pattern from fabric, transfer all pattern markings using tailor tacks or dressmaking tracing paper.

10. **KEY:** pattern printed side down
11. **KEY:** pattern printed side Up
12. **KEY:** Cut out all pieces except pieces that extend beyond folded fabric, then open out fabric and on RIGHT side of fabric, cut in positions as shown.
13. **KEY:** For with and without nap layouts ensure fabric is placed with nap or design running in same direction.

Before pinning to fabric, press tissue pattern with a warm dry iron to remove creases.

Sewing Directions

Fabric Key	Right Side	Wrong Side	Interfacing	Lining

Sew garment following **Sewing Directions.**
PIN or machine-baste seams matching notches.
STITCH 5/8" (1.5cm) seams unless otherwise stated.
PRESS seams open unless otherwise indicated, clipping when necessary so seams will lie flat.

14. **EASE-STITCH** or **GATHER** - Loosen needle tension slightly. With RIGHT side up, stitch 5/8" (1.5cm) from cut edge using a long stitch. Stitch again 1/4" (6mm) away in the seam allowance.

EDGE FINISH - Neaten raw edges of seams, hems and facings using one of the following methods.
15. Stitch 1/4" (6mm) from edge, turn under along stitching and stitch.
16. Zig-zag or overlock raw edges.

17. **INTERFACING** — Pin interfacing to WRONG side of fabric. Cut across corners that will be enclosed with seams. Machine-baste 1/2" (1.3cm) from cut edge. (Shown only on first illustration). Trim interfacing close to machine-basting. For FUSIBLE interfacing, follow manufacturer's directions.

18. **STAY-STITCH** —Stitch 1/2" (1.3cm) from cut edge, in direction of arrows: (Shown only in the first illustration).

LAYERING — Trim seam allowance in layers.
19. Layer enclosed seams
20. Trim corners
21. Clip inner curves
22. Notch outer curves


23. **UNDERSTITCH** —Press facing away from garment; press seam toward facing. Facing side up, understitch close to seam through facing and seam allowances.

Cutting Layouts


POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE

A TOP
USE PIECES 1 2 3 4 5 6


1A 44" 45" (115CM)
WITH NAP
ALL SIZES

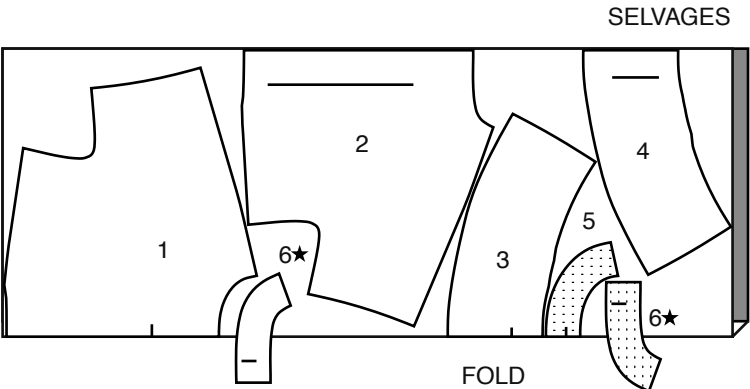

1B 58" 60" (150CM)
WITH NAP
SIZES 6 8 10

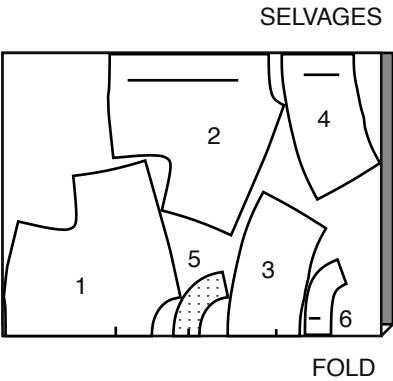


1C 58" 60" (150CM)
WITH NAP
SIZES 12 14 16

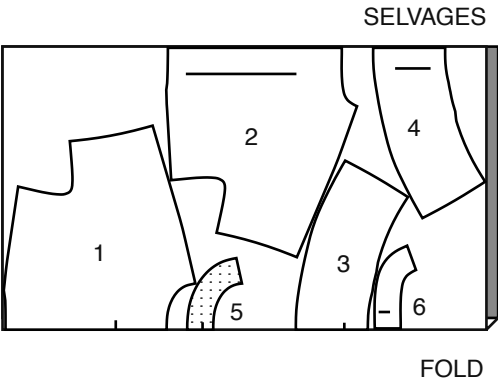


B TOP
USE PIECES 1 2 3 4 5 6

2A 44" 45" (115CM)
WITH NAP
ALL SIZES

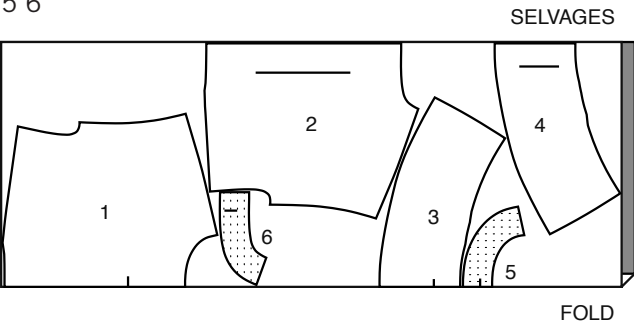


2B 58" 60" (150CM)
WITH NAP
ALL SIZES

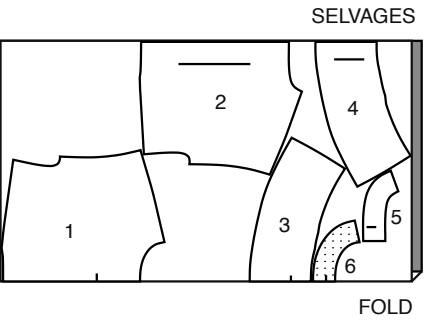

A,B INTERFACING
USE PIECES 5 6

3 20" TO 25" (51CM TO 64CM)
LIGHTWEIGHT FUSIBLE
ALL SIZES

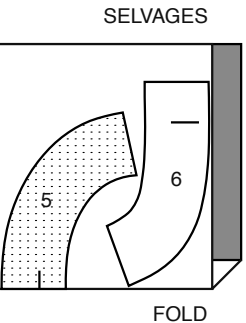

Español

A BLUSA
USE LAS PIEZAS 1 2 3 4 5 6

1A 44" 45" (115CM) CON PELUSA
TODAS LAS TALLAS

1B 58" 60" (150CM) CON PELUSA
TALLAS 6 8 10

1C 58" 60" (150CM) CON PELUSA
TALLAS 12 14 16

B BLUSA
USE LAS PIEZAS 1 2 3 4 5 6

2A 44" 45" (115CM) CON PELUSA
TODAS LAS TALLAS

2B 58" 60" (150CM) CON PELUSA
TODAS LAS TALLAS

A,B ENTRETELA
USE LAS PIEZAS 5 6

3 20" A 25" (51CM A 64CM)
LIGERA ADHESIVA
TODAS LAS TALLAS

SELVAGES= ORILLAS
FOLD= DOBLEZ

Sewing procedures ***ITALICIZED*** in Sewing Directions are defined below.

STAY-STITCH- Stitch 1/2" (1.3cm) from cut edge in direction of arrows. This stitching stays in permanently to prevent stretching on curved edges. (Shown only in the first illustration).

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.

STITCH SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.


TOP A, B

1. ***STAY-STITCH*** neck edge of front (1) and back (2) sections.


2. To make pleats in front and back sections, on **OUTSIDE**, fold along solid lines. Bring folds to broken lines; pin. Baste across raw edges.

3. Stitch back to front at shoulder and entire underarm seams. Stitch again along underarm curve to reinforce seam. Clip curves if necessary.


4. Press under hem on lower edge of sleeve. To form narrow hem, tuck under raw edge to meet crease. Press. Stitch hem in place.

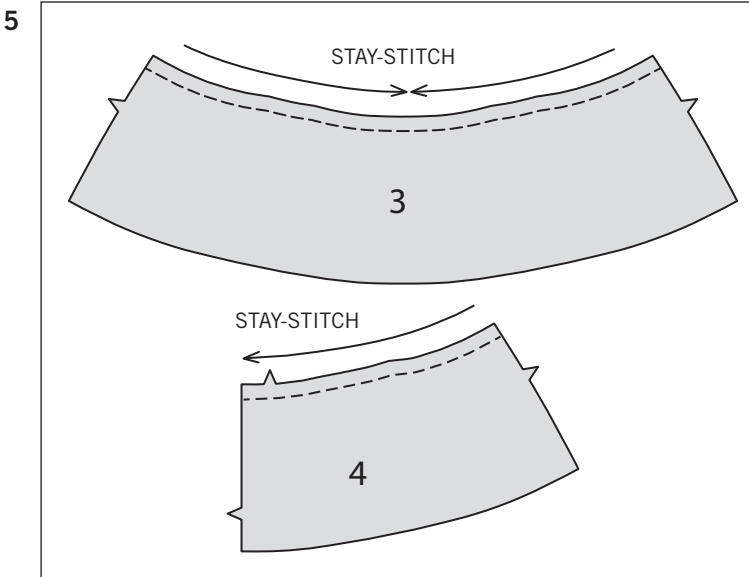


5. ***STAY-STITCH*** upper edge of peplum front (3) and peplum back (4) sections.

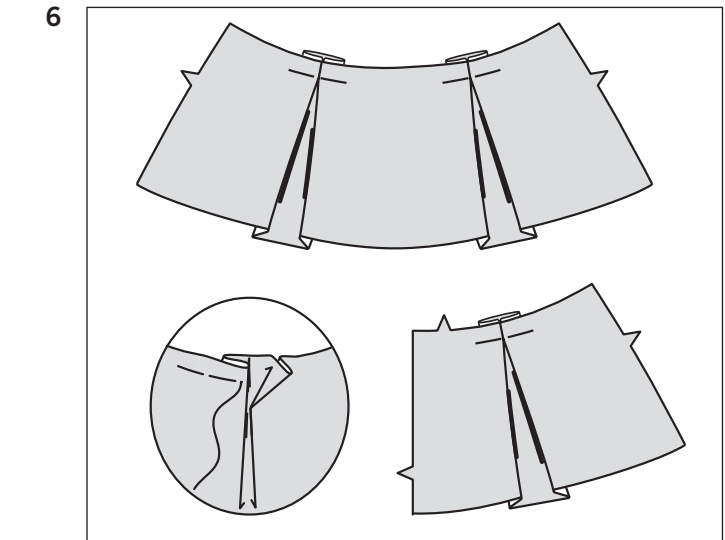


6. To make pleats in front and back peplum sections, on **OUTSIDE**, fold along solid lines. Bring folds to broken lines; pin. Baste across raw edges.

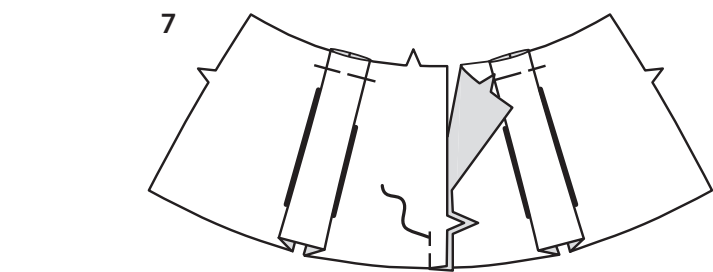

7. Stitch center back seam of back peplum sections below notch, back-stitching at notch to reinforce seam.

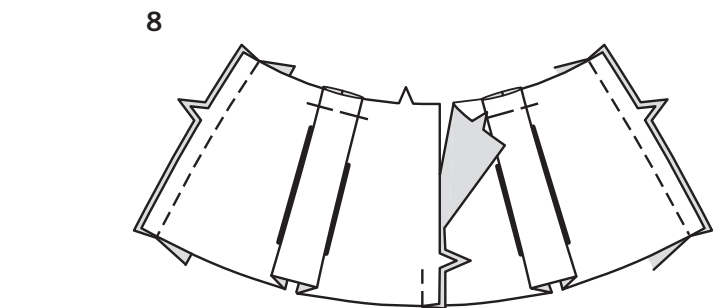

8. Stitch peplum front to peplum back sections at side seams.

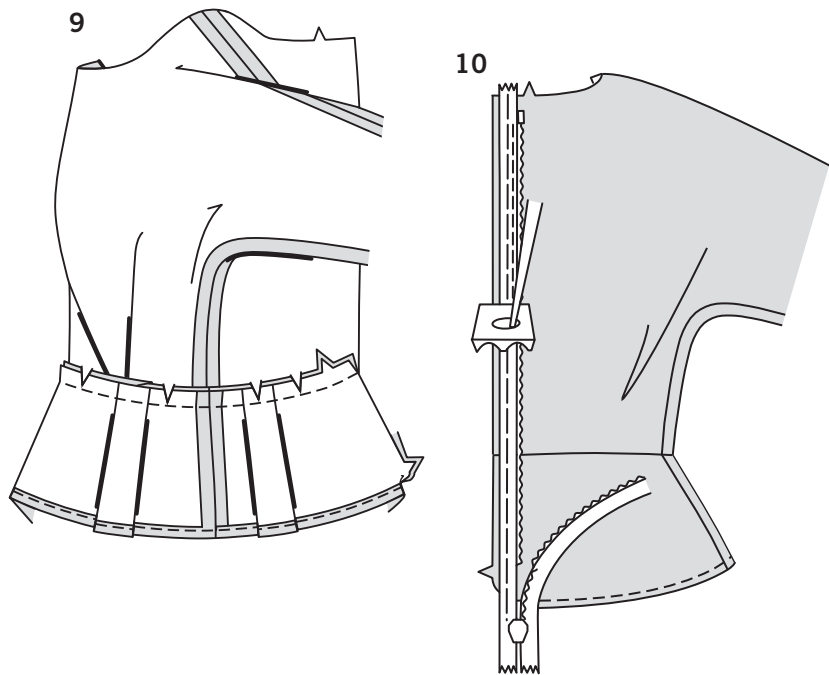


9. With **RIGHT** sides together and raw edges even, pin peplum to lower edge of bodice, matching centers, side seams, and pleats, clipping curves to stay-stitching where necessary. Stitch. Press seam toward bodice.


NOTE: *Stitch the invisible zipper using an invisible zipper foot. Before you begin, be sure to line up your needle with the center of the invisible zipper foot or you may break your needle. When the coils are to the LEFT of the raw edge use the LEFT groove and when the coils are to the RIGHT of the raw edge use the RIGHT groove. The zipper is longer than the zipper opening and will be adjusted after the zipper is inserted.*

10. Open the zipper and press the tape flat on the **WRONG** side, unrolling the coils. Do not press the coils. (Use a low iron setting.) On **OUTSIDE**, pin **RIGHT** side of the zipper face down on the **RIGHT** side of the zipper opening. Have the coil along the seam line, the tape within the seam allowance and the top stop 3/4" (2cm) below upper edge, as shown. Hand-baste along center of the tape. Position zipper foot at the top of the zipper with **RIGHT** groove of the foot over coil. Stitch along tape to the notch. Back-stitch to reinforce.

11

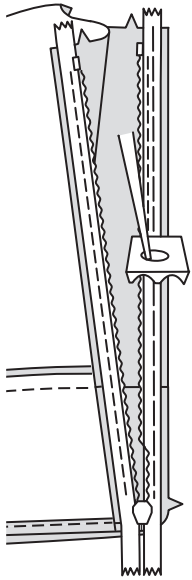


12

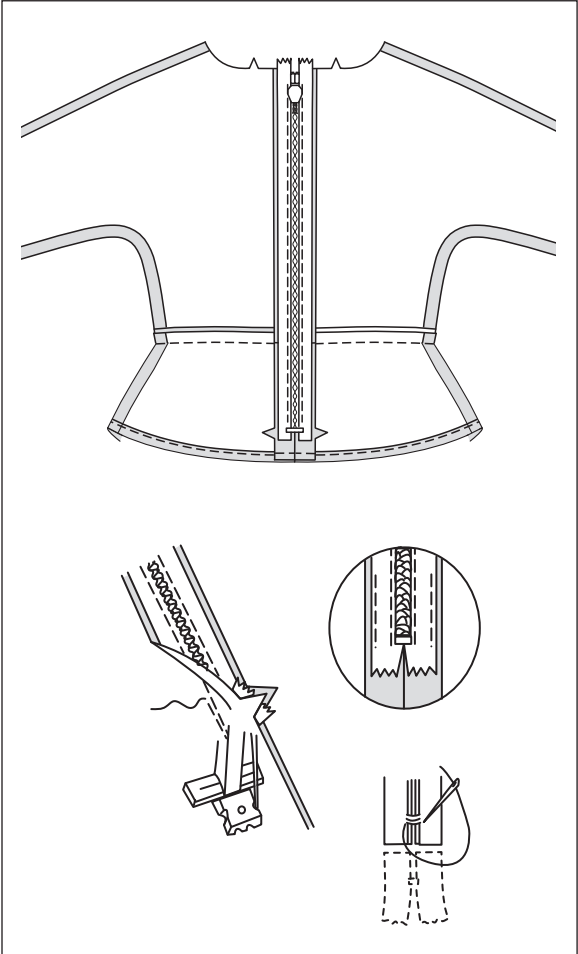

11. Pin the remaining half of the zipper to the LEFT side of the zipper opening in same manner. Make sure the upper and lower edges of the top are even and that waist seams match. Hand-baste along the center of the tape. Position zipper foot at the top of the zipper with LEFT groove over the coil. Stitch along tape to the notch. Back-stitch to reinforce.


12. Close zipper and check that it is invisible from the OUTSIDE. Pull the free ends of the zipper tape away from the seam allowance. If zipper is longer than the opening, using a strong thread, hand-sew a few small stitches across ends of coils at end of opening. Trim away lower end of zipper tape to within 5/8" (1.3cm) of hand-stitches. If you prefer, open out each seam allowance at end of zipper and stitch tape to seam allowances.

13

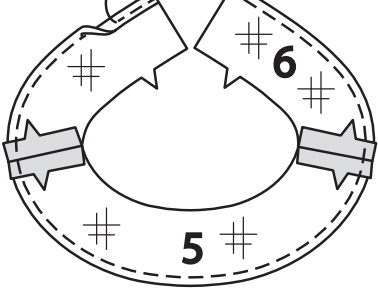


13. Apply fusible interfacing to WRONG side of front facing (5) and back facing (6) sections, following manufacturer's directions. Stitch shoulder seams of facing sections. To finish unnotched edge, stitch 1/4" (6mm) from edge, turn under along stitching and stitch OR zig-zag over the edge OR overlock/serge over the edge.

14

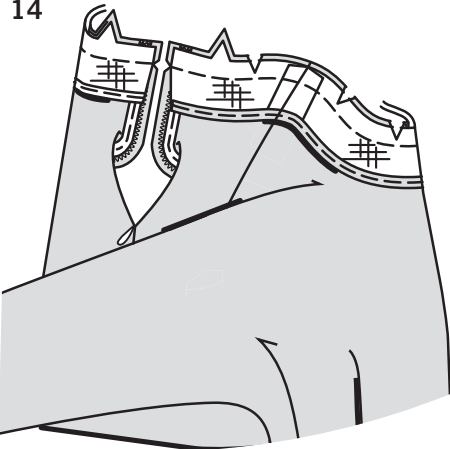


15

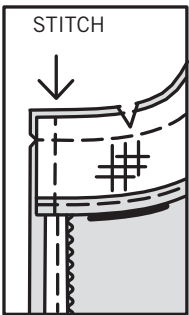


14. Open out center back opening edges of top, rolling the zipper teeth away from the opening edge. With RIGHT sides together, pin facing to neck edge, matching centers and side seams. Stitch upper edge. Trim seam; clip curves.

15. Pin back opening edges together. Using an adjustable zipper foot, stitch 1/2" (1.3cm) from back edges, keeping zipper teeth free. Trim corners. Do not trim center back edges.

16

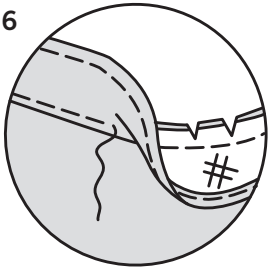

17

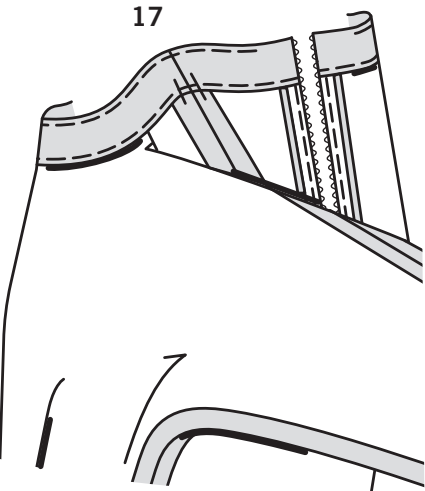

16. Understitch by pressing facing and seam away from top, stitching through facing and seam allowances close to seam as far as possible.

17. Turn facing and back edges to INSIDE, rolling zipper teeth back in place; press. To keep the facing from rolling to OUTSIDE, secure it at the seam allowances by tacking it by hand.

BLUSAS A, B

1. HAGA PUNTADA DE SOSTEN al borde del escote, de las secciones frontal (1) y trasera (2).

2. Para hacer los pliegues en la sección frontal y de la espalda, en EXTERIOR, doble las líneas continuas. Lleve los dobleces a las líneas entrecortadas; sujete con alfileres. Hilvane a través de los bordes no terminados.

3. Cosa la espalda al frente, en las costuras de los hombros y toda la de debajo de los brazos. Coa de nuevo a lo largo de la curva de debajo de los brazos, para reforzar la costura. Haga cortes a lo largo de las curvas, si lo considera necesario.

4. Planche un doblez al dobladillo, sobre el borde inferior de la manga. Para formar el dobladillo angosto, doble hacia adentro el borde no terminado hasta el pliegue. Planche. Cosa el dobladillo en su lugar.

5. HAGA PUNTADA DE SOSTEN al borde superior, de las secciones del péplum frontal (3) y del trasero (4).

6. Para hacer los pliegues, en las secciones del péplum frontal y el trasero, en el EXTERIOR, doble a lo largo de las líneas continuas. Lleve los dobleces a las líneas entrecortadas; sujete con alfileres. Hilvane a través de los bordes no terminados.

7. Cosa la costura trasera central, de las secciones del péplum trasero, por debajo de la muesca, retrocediendo la puntada y cosiendo en la muesca, para reforzar la costura.

8. Cosa la sección frontal del péplum a la trasera, en las costuras laterales.

9. DERECHO CON DERECHO y emparejados los bordes no terminados, sujete con alfileres el péplum al borde inferior del corpiño, casando los centros, las costuras laterales y los pliegues, haciendo cortes a lo largo de las curvas, para hacerle puntada de sostén, donde se considere necesario. Cosa. Planche la costura hacia el corpiño.

NOTA: Cosa la cremallera de manera invisible, usando un pie para cremallera invisible. Antes de comenzar, asegúrese de alinear arriba la aguja con el centro del pie para cremallera invisible, o usted podrá romper la aguja. Cuando las bobinas están a la IZQUIERDA del borde no terminado, use la ranura IZQUIERDA y cuando las bobinas estén al DERECHO del borde no terminado, use la ranura DERECHA. La cremallera es más larga que la abertura para la cremallera y serpa ajustada, después que la cremallera esta insertada.

10. Abra la cremallera y planche la cinta plana al REVES, desenrollando las bobinas. No planche las bobinas (Use plancha tibia). En el EXTERIOR, sujete con alfileres el lado DERECHO de la cremallera, con la cara hacia abajo, sobre el lado DERECHO de la abertura de la cremallera. Mantenga la bobina a lo largo de la línea de la costura, la cinta de la cremallera dentro del margen de la costura y la parte superior de la lengüeta a 3/4" (2cm), por debajo del borde superior, como se muestra. Hilvane a mano a lo largo del centro de la cinta de la cremallera. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura DERECHA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.

11. Sujete con alfileres la mitad restante de la cremallera, al lado IZQUIERDO de la abertura de la cremallera, de la misma manera. Asegúrese de emparejar los bordes superior e inferior de la blusa y que las costuras de la cintura casen. Hilvane a mano a lo largo del centro de la cinta. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura IZQUIERDA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.

12. Cierre la cremallera y verifique que sea invisible desde el EXTERIOR. Hale de los extremos libres de la cinta de la cremallera, aparte del margen de la costura. Si la cinta de la cremallera es más larga que la abertura, usando una hebra de hilo resistente, cosa a mano algunas puntadas, a través de los extremos de las bobinas en los extremos de la abertura. Recorte extremo inferior de la cinta de la cremallera, hasta dentro de 5/8" (1.3cm) de las puntadas a mano. Si lo prefiere, abra los márgenes de cada costura en el extremo de la cremallera y cosa la cinta a los márgenes de la costura.

13. Aplique entretela adhesiva, al REVES de las secciones de la vista frontal (5) y de la trasera (6), siguiendo las instrucciones del fabricante. Cosa las costuras de los hombros de las secciones de la vista. Para terminar el borde sin muescas, cosa a 1/4" (6mm) del borde, volte un doblez a lo largo de la puntada y cosa O haga puntada de zig-zag sobre el borde, O puntada overlock/sobrehilada sobre el borde.

14. Abra los bordes abiertos traseros centrales de la blusa, enrollando los dientes de la cremallera, aparte del borde abierto. DERECHO CON DERECHO, sujete con alfileres la vista al borde del escote, casando las costuras centrales y las laterales. Cosa el borde superior. Recorte la costura; haga cortes a lo largo de las curvas.

15. Sujete con alfileres conjuntamente los bordes abiertos traseros. Usando un pie ajustable para cremallera, cosa a 1/2" (1.3cm) de los bordes traseros, manteniendo los dientes de la cremallera. Recorte las esquinas. No recorte los bordes traseros centrales.

16. Haga puntada oculta a la vista doblada y la costura aparte de la blusa, cosiendo a través de la vista y los márgenes de la costura, cerca de la puntada y hasta donde sea posible.

17. Voltee los bordes de la vista y el trasero al INTERIOR, enrollando los dientes de la cremallera hacia atrás en su lugar; planche. Para prevenir que la vista se enrolle al EXTERIOR, asegúrela a los márgenes de la costura, mediante algunas puntadas a mano.