



# NEWLOOK® N6757

www.simplicity.com info@simplicity.com 1-888-588-2700

Thank you for purchasing this New Look pattern. We made every effort to provide you with a high quality product. Gracias por haber comprado este patrón de New Look. Hemos hecho todos los esfuerzos para ofrecerle un producto de alta calidad.

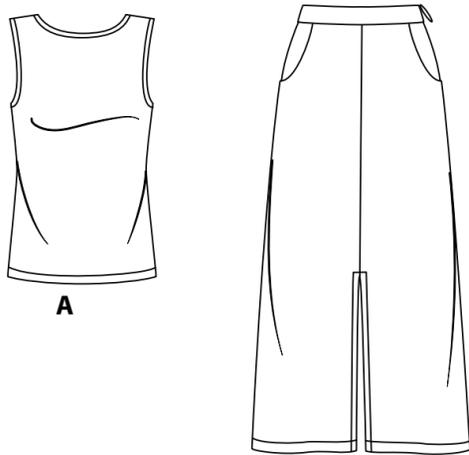


A

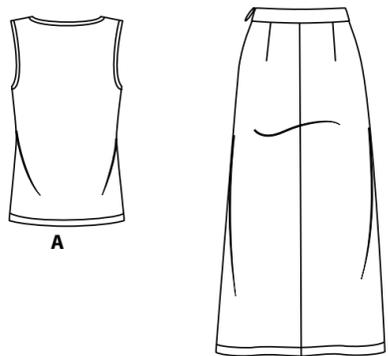


B

8 PIECES

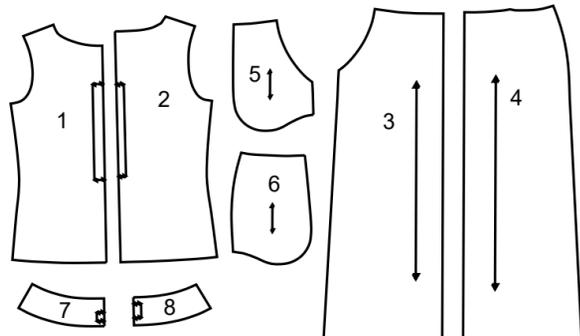

- 1 FRONT-A
- 2 BACK-A
- 3 FRONT-B
- 4 BACK-B
- 5 POCKET FACING-B
- 6 FRONT YOKE AND POCKET-B
- 7 WAISTBAND FRONT-B
- 8 WAISTBAND BACK-B

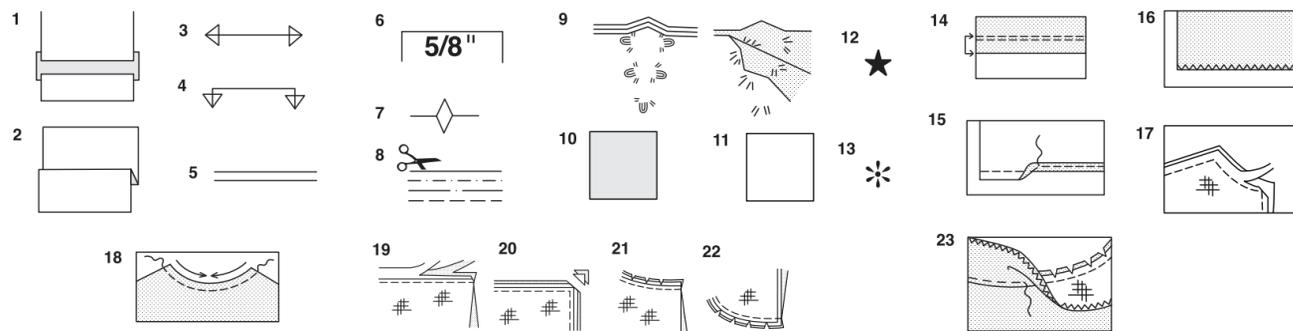

### How To Use Your Multi Size Pattern

#### First Prepare Your Pattern

Select the pattern pieces according to the view you are making.

This pattern is made to body measurements with ease allowed for comfort and style. If your body measurements differ from those on the pattern envelope adjust the pieces before placing them on the fabric.

Check your back neck to waist and dress length, if necessary, alter the pattern. Lengthening and shortening lines are indicated.

1. **TO LENGTHEN** : Cut pattern between printed lines and place paper underneath. Spread pattern the required amount and pin to paper.
2. **TO SHORTEN** : Fold at the printed lines to form a pleat half the amount to be shortened, ie 1/2" (1.3cm) deep to shorten 1" (2.5cm).

#### Study Your Pattern Markings

3. **STRAIGHT GRAIN** : Place an even distance from selvage or a straight thread.
4. **FOLD** : Place on fold of fabric.
5. **LENGTHENING AND SHORTENING LINES.**
6. **SEAM ALLOWANCE** : 5/8" (1.5cm) unless otherwise stated.
7. **NOTCHES** : Match notches.
8. **CUTTING LINES** : Multi patterns have different cutting lines for different sizes.
9. **TAILOR-TACKS** : With double thread make two loose stitches forming loop through fabric layers and pattern leaving long ends. Cut loop to remove pattern. Snip thread between fabric layers. Leave tufts.

### Cutting Layouts

#### Cutting Directions

FOR FOLDED AND DOUBLE LAYER FABRIC - Place fabric with right side inside and pin pattern on wrong side of fabric.

FOR SINGLE LAYER - Pin pattern on right side of fabric. NOTE: Pattern pieces may interlock more closely for smaller sizes. Cut notches out from cutting line.

BEFORE removing pattern from fabric, transfer all pattern markings using tailor tacks or dressmaking tracing paper.

10. **KEY:** pattern printed side down
11. **KEY:** pattern printed side up
12. **KEY:** Cut out all pieces except pieces that extend beyond folded fabric, then open out fabric and on RIGHT side of fabric, cut in positions as shown.
13. **KEY:** For with and without nap layouts ensure fabric is placed with nap or design running in same direction.

Before pinning to fabric, press tissue pattern with a warm dry iron to remove creases.

#### Sewing Directions

| Fabric Key | Right Side | Wrong Side | Interfacing | Lining |
|------------|------------|------------|-------------|--------|
|            |            |            |             |        |

Sew garment following **Sewing Directions.**

**PIN** or machine-baste seams matching notches.

**STITCH** 5/8" (1.5cm) seams unless otherwise stated.

**PRESS** seams open unless otherwise indicated, clipping when necessary so seams will lie flat.

14. **EASE-STITCH** or **GATHER** - Loosen needle tension slightly. With RIGHT side up, stitch 5/8" (1.5cm) from cut edge using a long stitch. Stitch again 1/4" (6mm) away in the seam allowance.

**EDGE FINISH** - Neaten raw edges of seams, hems and facings using one of the following methods.

15. Stitch 1/4" (6mm) from edge, turn under along stitching and stitch.
16. Zig-zag or overlock raw edges.

17. **INTERFACING** — Pin interfacing to WRONG side of fabric. Cut across corners that will be enclosed with seams. Machine-baste 1/2" (1.3cm) from cut edge. (Shown only on first illustration). Trim interfacing close to machine-basting. For FUSIBLE interfacing, follow manufacturer's directions.


18. **STAY-STITCH** —Stitch 1/2" (1.3cm) from cut edge, in direction of arrows: (Shown only in the first illustration).

**LAYERING** — Trim seam allowance in layers.

19. Layer enclosed seams
20. Trim corners
21. Clip inner curves
22. Notch outer curves

23. **UNDERSTITCH** —Press facing away from garment; press seam toward facing. Facing side up, understitch close to seam through facing and seam allowances.


## Cutting Layouts

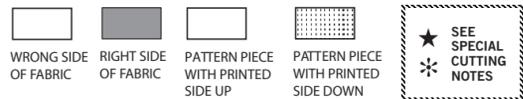

### A TOP- SIZED FOR STRETCH KNITS ONLY

USE PIECES 1 2

1 58" 60" (150CM)  
WITH NAP  
ALL SIZES


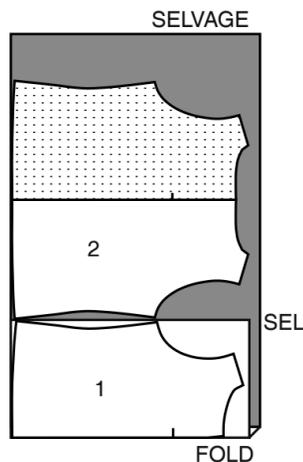


### B SKIRT

USE PIECES 3 4 5 6 7 8

2A 44" 45" (115CM)  
WITH NAP  
SIZES 10 12 14 16

2B 44" 45" (115CM)  
WITH NAP  
SIZES 18 20 22

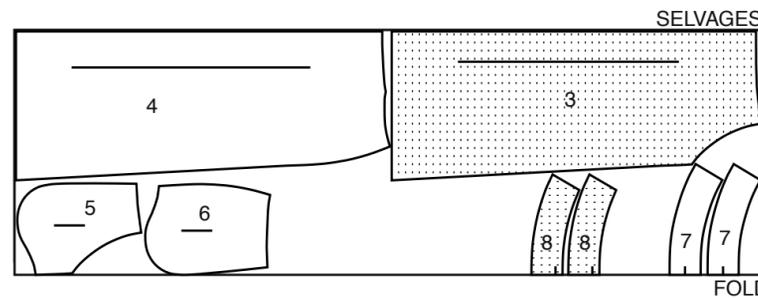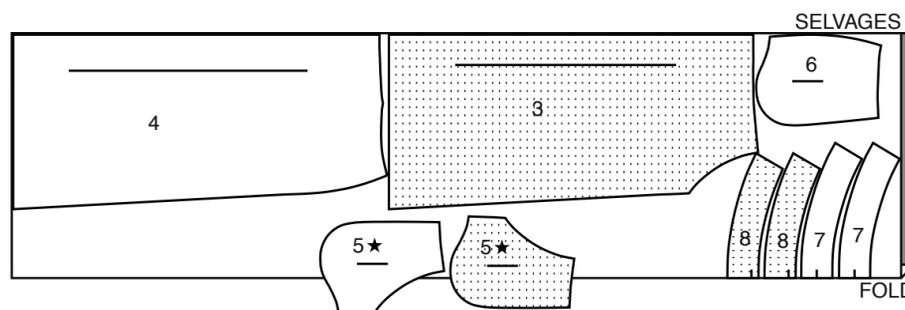

CUTTING LAYOUTS CONTINUED ON PAGE 2

## Español

### A BLUSA- SOLO EN MALLAS ESTIRABLES

USE LAS PIEZAS 1 2

1 58" 60" (150CM)  
CON PELUSA  
TODAS LAS TALLAS

### B FALDA

USE LAS PIEZAS 3 4 5 6 7 8

2A 44" 45" (115CM)  
CON PELUSA  
TALLAS 10 12 14 16

2B 44" 45" (115CM)  
CON PELUSA  
TALLAS 18 20 22



DIAGRAMAS DE CORTE CONTINUAN EN LA PAGINA 2

# N6757

2 of 4

**2C** 58" 60" (150CM)  
WITH NAP  
SIZES 10 12 14 16 18


**2D** 58" 60" (150CM)  
WITH NAP  
SIZES 20 22

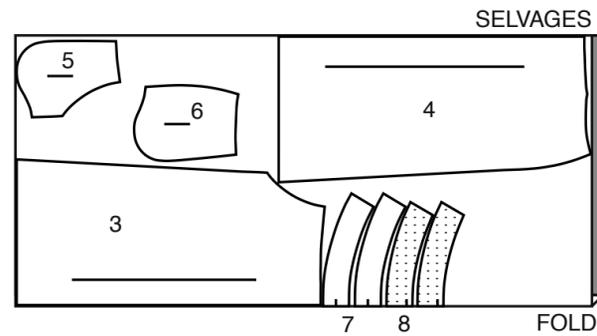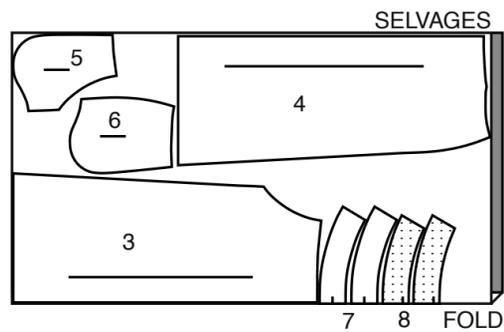

## B INTERFACING

USE PIECES 7 8

**3** 20" TO 25"  
(51CM TO 64CM)  
LIGHTWEIGHT FUSIBLE  
ALL SIZES

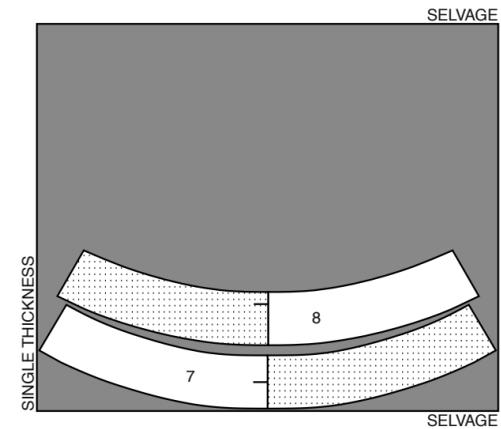

## Español

**2C** 58" 60" (150CM) CON PELUSA  
TALLAS 10 12 14 16 18

**2D** 58" 60" (150CM) CON PELUSA  
TALLAS 20 22

## B ENTRETELA

USE LAS PEIZAS 7 8

**3** 20" A 25" (51CM A 64CM)  
LIGERA ADHESIVA  
TODAS LAS TALLAS

SELVAGE(S)= ORILLA(S)  
SEL.= ORILLA  
FOLD= DOBLEZ  
SINGLE THICKNESS= ESPESOR SIMPLE

## Sewing Directions

|            |            |            |             |        |
|------------|------------|------------|-------------|--------|
| FABRIC KEY | RIGHT SIDE | WRONG SIDE | INTERFACING | LINING |
|------------|------------|------------|-------------|--------|

Read **General Directions** on page 1 before you begin.

### GLOSSARY OF SEWING METHODS

Sewing procedures **ITALICIZED** in Sewing Directions are defined below.

**WAIST DART** - With **RIGHT** sides together, fold the fabric through the center of the dart, bringing broken lines and small dots together. On **INSIDE**, place pins at **RIGHT** angles to the broken lines. Stitch the dart from wide end to point.

**TIP**- To prevent a "bubble" at the point, make the last few stitches right on the fold and leave the thread ends long enough to tie a knot. **DO NOT** back-stitch at the point.

Press the dart flat along the stitching to "blend" the stitches, then press dart toward center.

**INTERFACING**- Pin interfacing to **WRONG** side of fabric. Fuse interfacing in place following manufacturer's directions.

**STAY-STITCH**- Stitch 1/2" (1.3cm) from cut edge in direction of arrows. This stitching stays in permanently to prevent stretching on curved edges. (Shown only in the first illustration).


**UNDERSTITCH**- Press facing and seam away from garment, stitching through facing and seam allowances close to seam as far as possible.

**PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.**


**STITCH SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.**

### TOP A

1. Stitch front (1) to back (2) at shoulder seams.
2. Open out one edge of single fold bias tape. With **RIGHT** sides together, pin tape to neck edge having raw edges even, turning under and lapping one end at one shoulder seam. Stitch. Trim seam. Clip curves if necessary. Press tape out, pressing seam toward tape. **UNDERSTITCH**.

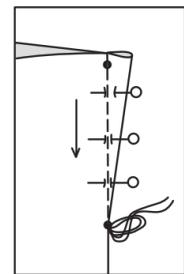


WAIST DART

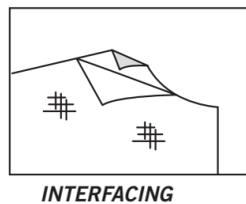



INTERFACING




STAY-STITCH

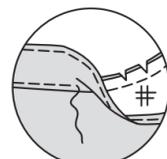


UNDERSTITCH

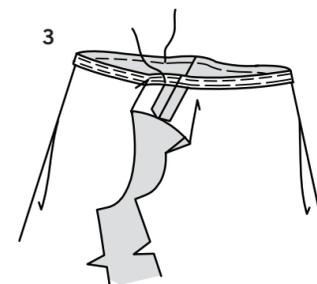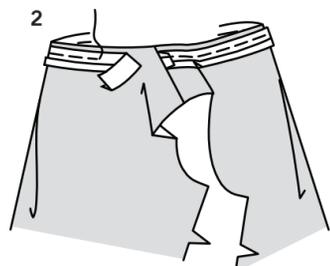

3. Turn tape to **INSIDE**; press. Baste close to inner edge. On **OUTSIDE**, stitch as basted.

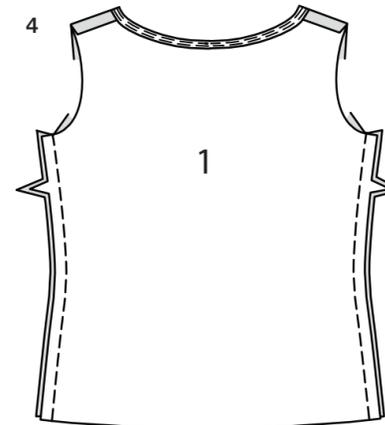


4. Stitch back to front at side seams.

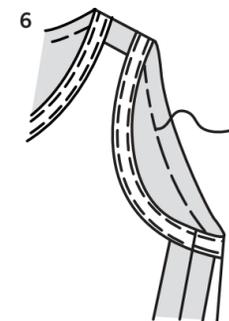


5. With **RIGHT** sides together, pin tape to armhole edge having raw edges even, turning under and lapping one end at underarm seam. Stitch. Trim seam; clip curves. Press tape out, pressing seam toward tape. **UNDERSTITCH**.

6. Turn tape to **INSIDE**; press. Baste close to inner edge. On **OUTSIDE**, stitch as basted.

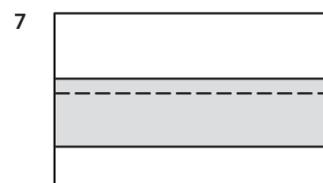


7. Press up hem on lower edge. Straight or zig-zag stitch 1/4" (6mm) from raw edge.


## SKIRT B

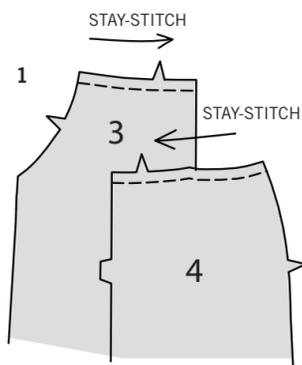

1. **STAY-STITCH** upper edge of front (3) and back (4) sections.

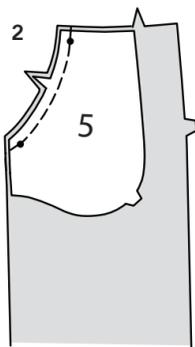


2. With **RIGHT** sides together and raw edges even, pin pocket facing (5) to front, matching small dots. Stitch single notched edge. Trim seam.

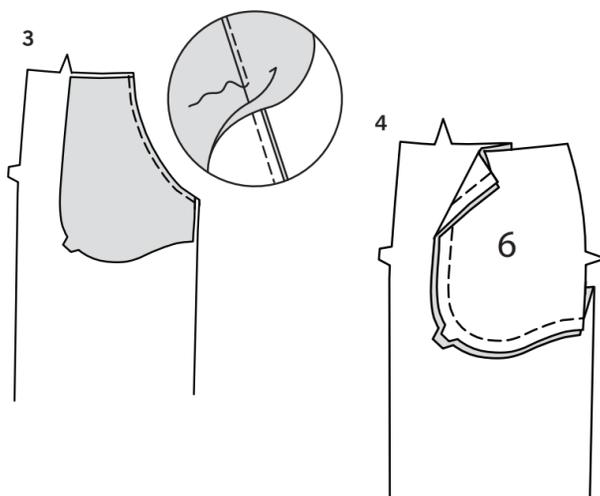


3. **UNDERSTITCH** Pocket. Turn pocket facing to **INSIDE**; press.

4. On **INSIDE**, with **RIGHT** sides together, pin front yoke and pocket (6) to pocket facing, having raw edges even. Stitch double notched edge, as shown.

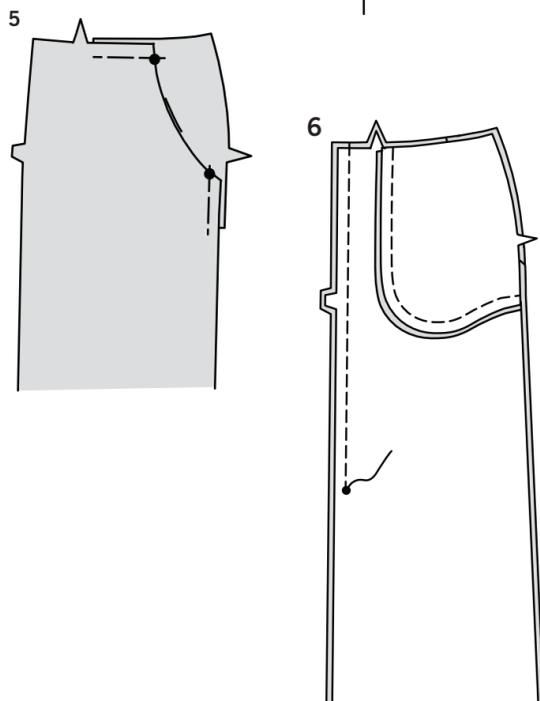


5. On **OUTSIDE**, lap skirt front over yoke and pocket section, matching small dots, having raw edges even; pin. Baste side and upper edges together.

6. Stitch center front seam of front sections to large dot, back-stitching at large dot to reinforce seam.

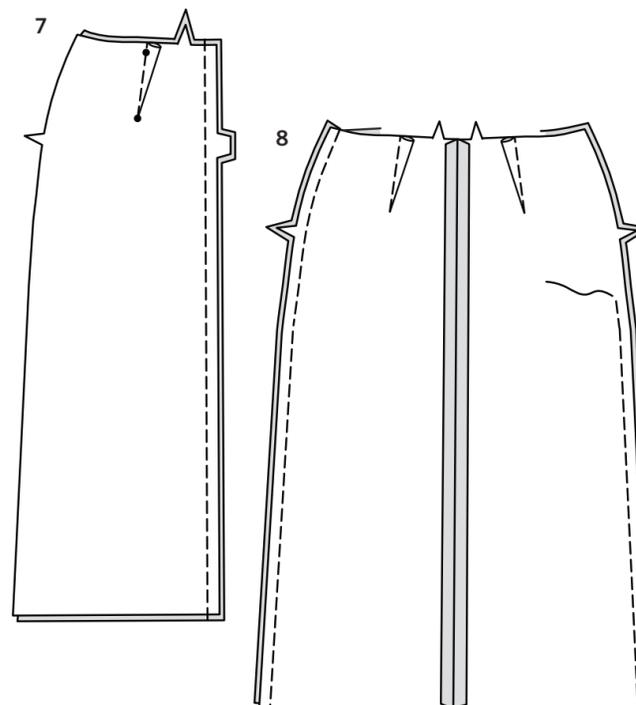


7. Make **WAIST DART** in back. Stitch center back seam of back sections.

8. Stitch front to back at **RIGHT** side seam. Stitch **LEFT** side seam from lower edge to 3" (7.5cm) below notch, back-stitching to reinforce seam.

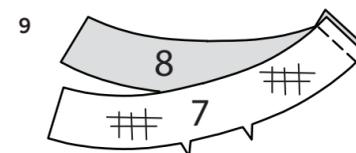


9. Apply **INTERFACING** to waistband front (7) and waistband back (8). Stitch **RIGHT** side seam of waistband sections.

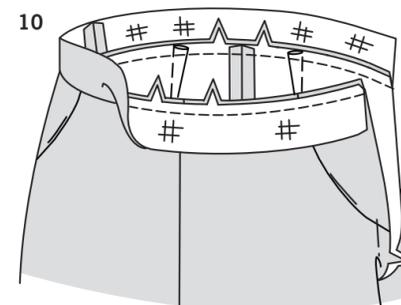


10. With **RIGHT** sides together, pin waistband to upper edge of skirt having raw edges even, matching centers, notches, and **RIGHT** sides seams. Stitch. Trim seam. Press seam toward waistband.

**NOTE:** *Stitch the invisible zipper using an invisible zipper foot. Before you begin, be sure to line up your needle with the center of the invisible zipper foot or you may break your needle. When the coils are to the **LEFT** of the raw edge use the **LEFT** groove and when the coils are to the **RIGHT** of the raw edge use the **RIGHT** groove.*

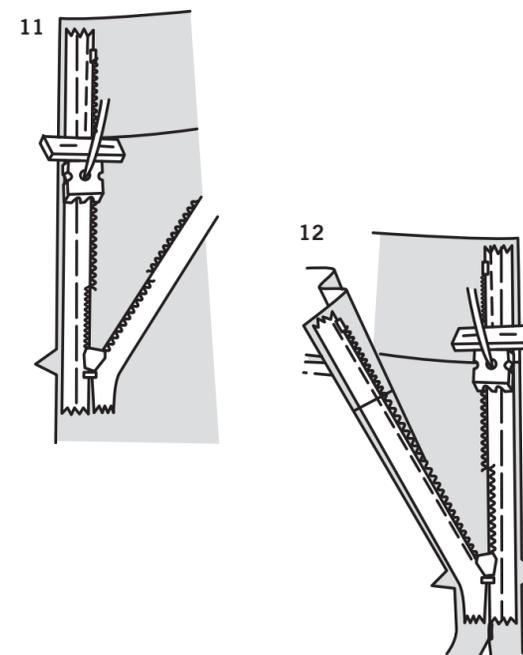


11. Open the zipper and press the tape flat on the **WRONG** side unrolling the coils. Do not press the coils. (Use a low heat setting.) On **OUTSIDE**, pin **RIGHT** side of the zipper face down on the **RIGHT** side of the zipper opening. Have the coil along the seam line, the tape within the seam allowance and the top stop 3/4" (2cm) below upper edge, as shown. Hand-baste along center of the tape. Position zipper foot at the top of the zipper with **RIGHT** groove of the foot over coil. Stitch along tape to the notch. Back-stitch to reinforce.


12. Pin the remaining half of the zipper to the **LEFT** side of the zipper opening in same manner. Make sure the upper and lower edges of the garment are even. Hand-baste along the center of the tape. Position zipper foot at the top of the zipper with **LEFT** groove over the coil. Stitch along tape to the notch. Back-stitch to reinforce.

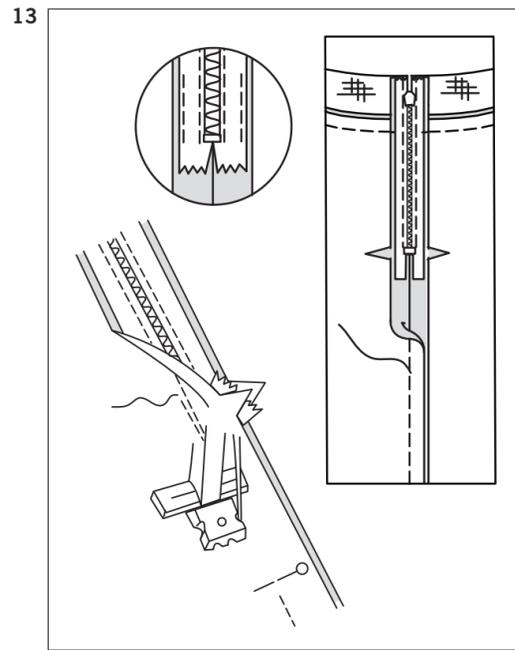


- 13.** Close zipper and check that it is invisible from the OUTSIDE. Pull the free ends of the zipper tape away from the seam allowance. Pin remaining LEFT side seam together below zipper. Position zipper foot all the way to the LEFT so the needle goes down through the outer notch of the foot. Start stitching seam 1/4" (6mm) above lowest stitch and slightly to the LEFT. Stitch remainder of seam connecting to previous stitching. If you prefer, open out each seam allowance at end of zipper and stitch tape to seam allowance.

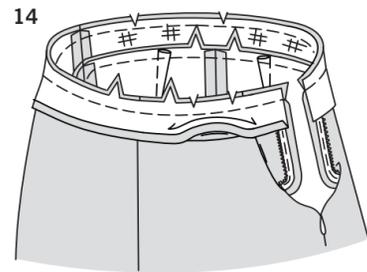


- 14.** Stitch RIGHT side seam of facing sections. Press under 1/2" (1.3cm) on lower edge. Open out LEFT opening edges of facing, rolling the zipper teeth away from the opening edge. With RIGHT sides together, pin facing to upper edge, matching centers and RIGHT side seams. Stitch upper edge. Trim seam; clip curves.

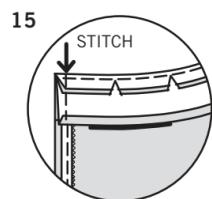

- 15.** Pin side opening edges together. Using an adjustable zipper foot, stitch 1/2" (1.3cm) from LEFT edges, keeping zipper teeth free. Trim corners. Do not trim LEFT side edges. **UNDERSTITCH.**

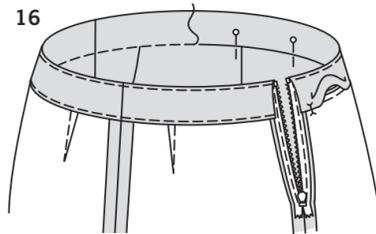

- 16.** Turn facing and side edges to INSIDE, rolling zipper teeth back in place; press. On INSIDE, pin pressed edge of facing 1/8" (3mm) over seam, placing pins on OUTSIDE. On OUTSIDE, stitch in the ditch or groove of the waistband seam, catching in pressed edge on INSIDE. **TIP** - To conceal the stitches in the ditch or groove of seam, try using a zipper foot, spreading pant and yoke away from the seam with your fingers.

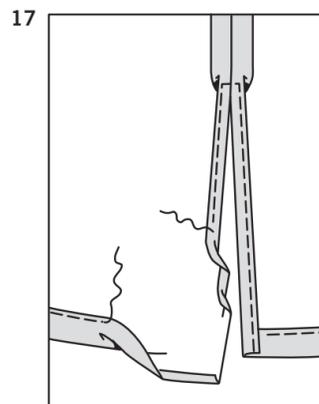

- 17.** Mark length. Press up hem along marking. Mark depth of hem; trim evenly. Press under 1/4" (6mm) on raw edge. Stitch hem in place. Press under 5/8" (1.5cm) on slit opening edges. Press under 1/4" (6mm) on raw edge; stitch, squaring stitching above opening.

**LAS PIEZAS DEL PATRÓN SON INDICADAS POR NÚMEROS CUANDO SON USADAS POR PRIMERA VEZ. DERECHO CON DERECHO, COSER JUNTAS LAS COSTURAS A MENOS QUE SE INDIQUE LO CONTRARIO.**

## BLUSA A

- Cosa el frente (1) a la espalda (2), en las costuras de los hombros.
- Abra un borde de la cinta sencilla de bias. DERECHO CON DERECHO, sujete con alfileres la cinta al borde del escote, emparejando los bordes no terminados, volteando un doblez y cruzando un extremo, en una costura de los hombros. Cosa. Recorte la costura. Haga cortes a lo largo de las curvas, si lo considera necesario. Planche la cinta hacia afuera y la costura hacia la cinta. **HAGA PUNTADA OCULTA.**
- Voltee la cinta al INTERIOR; Planche. Hilvane cerca del borde interior. En el EXTERIOR, cosa como hilvanado.
- Cosa la espalda al frente en las costuras laterales.
- DERECHO CON DERECHO, sujete con alfileres la cinta al borde de la sisa, emparejando los bordes no terminados, volteando un doblez y cruzando un extremo en la costura de debajo de los brazos. Cosa. Recorte la costura; haga cortes a lo largo de las curvas. Planche la cinta hacia afuera y la costura hacia la cinta. **HAGA PUNTADA OCULTA.**
- Voltee la cinta al INTERIOR; planche. Hilvane cerca del borde interior. En el EXTERIOR, cosa como hilvanado.
- Planche hacia arriba el dobladillo, sobre el borde inferior. Haga puntada recta o haga puntada de zig-zag, a 1/4" (6mm) del borde no terminado.

## FALDA B

- HAGA PUNTADA DE SOSTEN** al borde superior, de las secciones frontal (3) y trasera (4).
- DERECHO CON DERECHO y emparejados los bordes no terminados, sujete con alfileres la vista del bolsillo (5) al frente, casando los puntos pequeños. Cosa el borde con muescas sencillas. Recorte la costura.
- HAGA PUNTADA OCULTA** al bolsillo. Voltee la vista del bolsillo al INTERIOR; planche.
- En el INTERIOR, DERECHO CON DERECHO, sujete con alfileres el canesú frontal y el bolsillo (6) a la vista del bolsillo, emparejando los bordes no terminados. Cosa el borde con muescas dobles, como se muestra.
- En el EXTERIOR, cruce el frente de la falda, sobre la sección del canesú y del bolsillo, casando los puntos pequeños y emparejando los bordes no terminados; sujete con alfileres. Hilvane conjuntamente los bordes lateral y superior.
- Cosa la costura frontal central de la sección frontal hasta el punto grande, retrocediendo la puntada y cosiendo en el punto grande, para reforzar la costura.
- Haga la **PINZA DE LA CINTURA** en la parte trasera. Cosa la costura trasera central de las secciones traseras.
- Cosa el frente a la parte trasera, en la costura lateral DERECHA. Cosa la costura lateral IZQUIERDA, desde el borde inferior hasta 3" (7.5cm) por debajo de la muesca, retrocediendo la puntada y cosiendo para reforzar la costura.
- Aplique **ENTRETELA** al frente de la pretina (7) y a la parte trasera de la pretina (8). Cosa la costura lateral DERECHA, de las secciones de la pretina.
- DERECHO CON DERECHO, sujete con alfileres la pretina al borde superior, de la falda, emparejando los bordes no terminados, casando los centros, las muescas y las costuras laterales DERECHAS. Cosa. Recorte la costura. Planche la costura hacia la pretina.

**NOTA:** Cosa la cremallera de manera invisible, usando un pie para cremallera invisible. Antes de comenzar, asegúrese de alinear arriba la aguja con el centro del pie para cremallera invisible, o usted podrá romper la aguja. Cuando las bobinas están a la IZQUIERDA del borde no terminado, use la ranura IZQUIERDA y cuando las bobinas estén al DERECHO del borde no terminado, use la ranura DERECHA.

- Abra la cremallera y planche la cinta plana, al REVES desenrollando las bobinas. No planche las bobinas (Use plancha tibia). En el EXTERIOR, sujete con alfileres el lado DERECHO de la cremallera, con la cara hacia abajo, sobre el lado DERECHO de la abertura de la cremallera. Mantenga la bobina a lo largo de la línea de la costura, la cinta de la cremallera dentro del margen de la costura y la parte superior de la lengüeta a 3/4" (2cm), por debajo del borde superior, como se muestra. Hilvane a mano a lo largo del centro de la cinta de la cremallera. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura DERECHA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.
- Sujete con alfileres la mitad restante de la cremallera, al lado IZQUIERDO de la abertura de la cremallera, de la misma manera. Asegúrese de emparejar los bordes superior e inferior de la prenda. Hilvane a mano a lo largo del centro de la cinta. Coloque el pie para cremallera en la parte superior de la cremallera, con la ranura IZQUIERDA del pie sobre la bobina. Cosa a lo largo de la cinta hasta la muesca. Retroceda la puntada y cosa para reforzar.
- Cierre la cremallera y verifique que sea invisible desde el EXTERIOR. Hale de los extremos libres de la cinta de la cremallera, aparte del margen de la costura. Sujete con alfileres conjuntamente la costura lateral IZQUIERDA, por debajo de la cremallera. Coloque el prénsatelas a la IZQUIERDA, así la aguja baja a través de la muesca exterior del pie. Comience cosiendo la costura a 1/4" (6mm), por encima de la puntada más baja y ligeramente a la IZQUIERDA. Cosa el resto de la costura, uniendo las puntadas previas. Si lo prefiere, abra los márgenes de cada costura por el extremo de la cremallera y cosa la cinta al margen de la costura.
- Cosa la costura lateral DERECHA, de las secciones de la vista. Planche un doblez de 1/2" (1.3cm) sobre el borde inferior. Abra el borde abierto IZQUIERDO de la vista, enrollando la cremallera aparte del borde abierto. DERECHO CON DERECHO, sujete con alfileres la vista al borde superior, casando las costuras centrales y la lateral DERECHA. Cosa el borde superior. Recorte la costura; haga cortes a lo largo de las curvas.
- Sujete con alfileres conjuntamente los bordes abiertos laterales. Usando un pie ajustable para cremallera, cosa a 1/2" (1.3cm) del borde IZQUIERDO, manteniendo los dientes de la cremallera libres. Recorte las esquinas. No recorte el borde lateral IZQUIERDO. **HAGA PUNTADA OCULTA.**
- Voltee los bordes de la vista y los laterales al INTERIOR, enrollando los dientes de la cremallera en su lugar; planche. En el INTERIOR, sujete con alfileres el borde doblado de la vista, a 1/8" (3mm) sobre la costura, colocando los alfileres en el EXTERIOR. En el EXTERIOR, cosa en la ranura o hendidura de la costura de la pretina, agarrando el borde doblado en el INTERIOR. **CONSEJO** - Para ocultar las puntadas en la ranura o hendidura de la costura, pruebe usando un pie ajustable para cremallera, distribuyendo con los dedos los pantalones y el canesú, aparte de la costura.

- Marque el largo. Planche hacia arriba dobladillo a lo largo de la marca. Marque el ancho del dobladillo; recórtelo uniformemente. Planche un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa el dobladillo en su lugar. Planche un doblez de 5/8" (1.5cm), sobre los bordes abiertos. Planche un doblez de 1/4" (6mm) sobre el borde no terminado; cosa, girando la puntada por encima de la abertura.