



Thank you for purchasing this New Look pattern.
We made every effort to provide you with a high quality product.
Gracias por haber comprado este patrón de New Look.
Hemos hecho todos los esfuerzos para ofrecerle un producto de alta calidad.

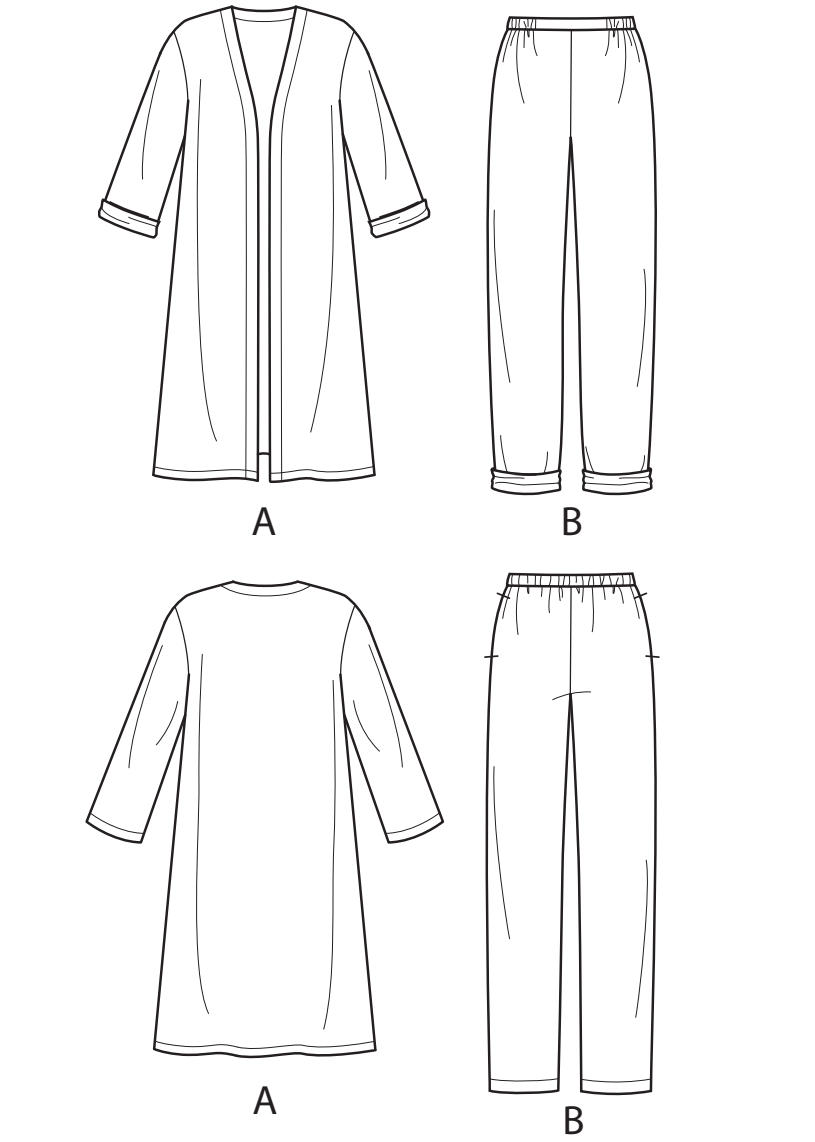


Cutting Layouts

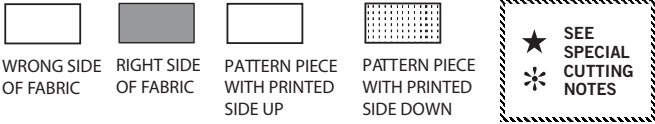


A JACKET

USE PIECES 1 2 3 4 5


1A 44" 45" (115CM)
WITH NAP
SIZES 10 12

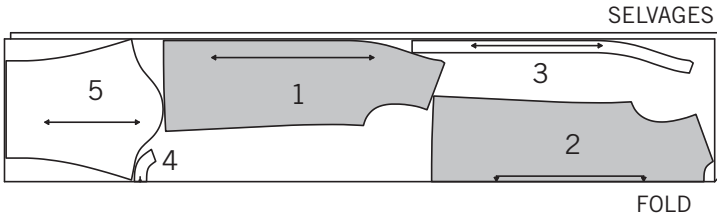


1B 44" 45" (115CM)
WITH NAP
SIZES 14 16 18 20 22

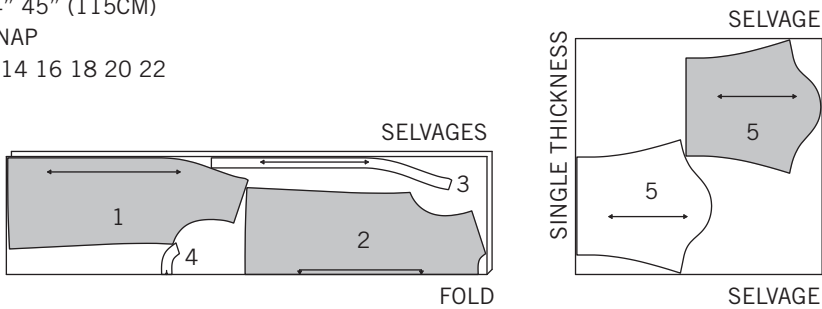

10 PIECES

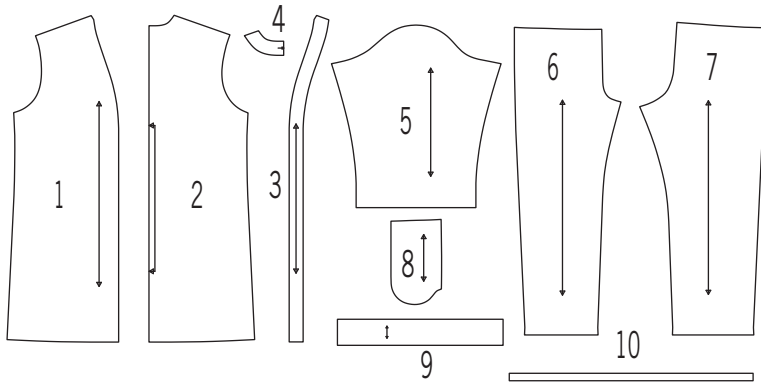

- 1-FRONT -A
- 2-BACK -A
- 3-FRONT FACING -A
- 4-BACK FACING -A
- 5-SLEEVE -A
- 6-FRONT -B
- 7-BACK -B
- 8-POCKET -B
- 9-CASING -B
- 10-ELASTIC GUIDE -B

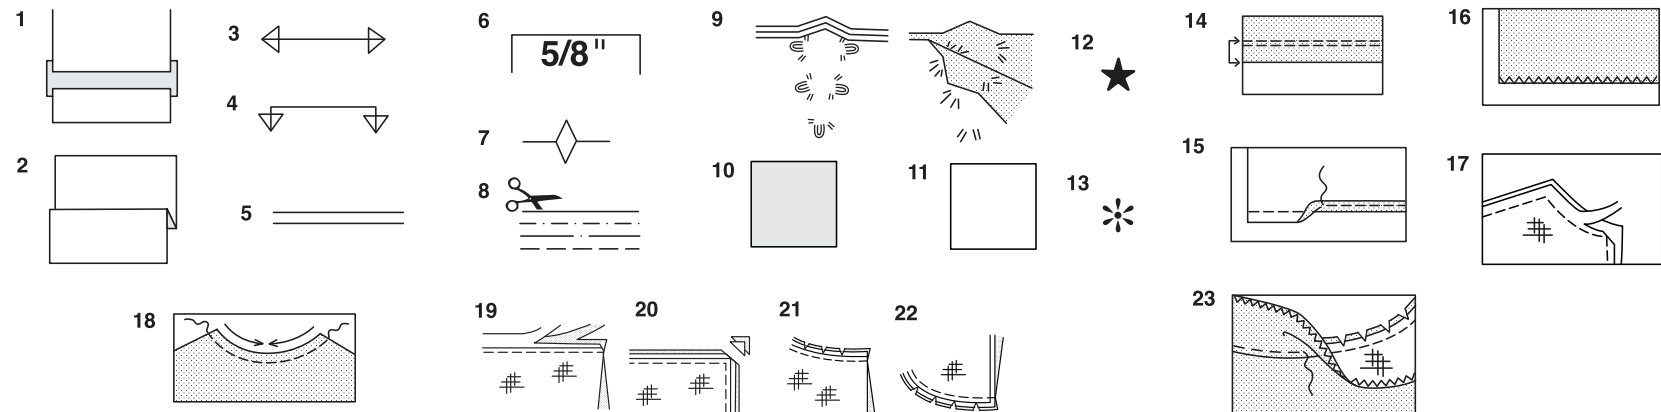

How To Use Your Multi Size Pattern

First Prepare Your Pattern

Select the pattern pieces according to the view you are making.

This pattern is made to body measurements with ease allowed for comfort and style. If your body measurements differ from those on the pattern envelope adjust the pieces before placing them on the fabric.

Check your back neck to waist and dress length, if necessary, alter the pattern. Lengthening and shortening lines are indicated.

- TO LENGTHEN** : Cut pattern between printed lines and place paper underneath. Spread pattern the required amount and pin to paper.
- TO SHORTEN** : Fold at the printed lines to form a pleat half the amount to be shortened, ie 1/2" (1.3cm) deep to shorten 1" (2.5cm).

Study Your Pattern Markings

- STRAIGHT GRAIN** : Place an even distance from selvage or a straight thread.
- FOLD** : Place on fold of fabric.
- LENGTHENING AND SHORTENING LINES.**
- SEAM ALLOWANCE** : 5/8" (1.5cm) unless otherwise stated.
- NOTCHES** : Match notches.
- CUTTING LINES** : Multi patterns have different cutting lines for different sizes.
- TAILOR-TACKS** : With double thread make two loose stitches forming loop through fabric layers and pattern leaving long ends. Cut loop to remove pattern. Snip thread between fabric layers. Leave tufts.

Cutting Layouts

Cutting Directions

FOR FOLDED AND DOUBLE LAYER FABRIC - Place fabric with right side inside and pin pattern on wrong side of fabric.

FOR SINGLE LAYER - Pin pattern on right side of fabric. NOTE: Pattern pieces may interlock more closely for smaller sizes. Cut notches out from cutting line.

BEFORE removing pattern from fabric, transfer all pattern markings using tailor tacks or dressmaking tracing paper.

- KEY:** pattern printed side down
- KEY:** pattern printed side Up
- KEY:** Cut out all pieces except pieces that extend beyond folded fabric, then open out fabric and on RIGHT side of fabric, cut in positions as shown.
- KEY:** For with and without nap layouts ensure fabric is placed with nap or design running in same direction.

Before pinning to fabric, press tissue pattern with a warm dry iron to remove creases.

Sewing Directions

Fabric Key	Right Side	Wrong Side	Interfacing	Lining

Sew garment following **Sewing Directions.**

PIN or machine-baste seams matching notches.

STITCH 5/8" (1.5cm) seams unless otherwise stated.

PRESS seams open unless otherwise indicated, clipping when necessary so seams will lie flat.

14. EASE-STITCH or **GATHER** - Loosen needle tension slightly. With RIGHT side up, stitch 5/8" (1.5cm) from cut edge using a long stitch. Stitch again 1/4" (6mm) away in the seam allowance.

EDGE FINISH - Neaten raw edges of seams, hems and facings using one of the following methods.

- Stitch 1/4" (6mm) from edge, turn under along stitching and stitch.
- Zig-zag or overlock raw edges.

17. INTERFACING — Pin interfacing to WRONG side of fabric. Cut across corners that will be enclosed with seams. Machine-baste 1/2" (1.3cm) from cut edge. (Shown only on first illustration). Trim interfacing close to machine-basting. For FUSIBLE interfacing, follow manufacturer's directions.

18. STAY-STITCH —Stitch 1/2" (1.3cm) from cut edge, in direction of arrows: (Shown on ly in the first illustration).

LAYERING — Trim seam allowance in layers.

- Layer enclosed seams
- Trim corners
- Clip inner curves
- Notch outer curves


23. UNDERSTITCH —Press facing away from garment; press seam toward facing. Facing side up, understitch close to seam through facing and seam allowances.

B PANTS- WORN 1" (2.5CM) BELOW WAIST


USE PIECES 6 7 8 9

PIECE 10 IS CUT OF ELASTIC


2A 44" 45" (115CM)
WITH NAP
SIZES 10 12 14

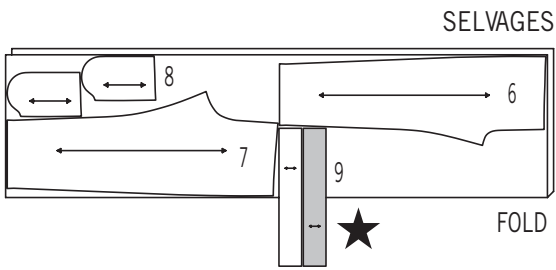

2B 44" 45" (115CM)
WITH NAP
SIZES 16 18 20 22

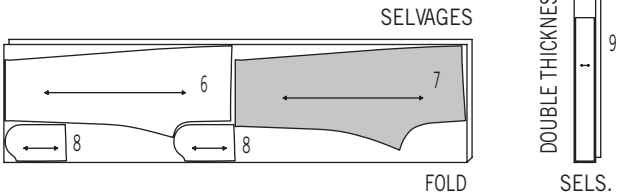

2C 58" 60" (150CM)
WITH NAP
ALL SIZES

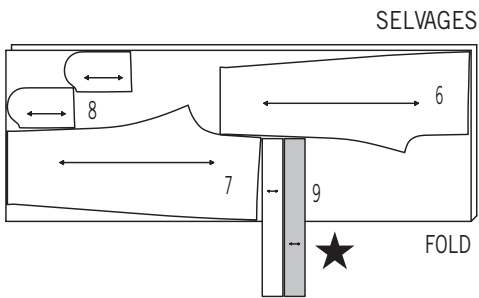

Español

A CHAQUETA

USE LAS PIEZAS 1 2 3 4 5

1A 44" 45" (115CM) CON PELUSA
TALLAS 10 12

1B 44" 45" (115CM) CON PELUSA
TALLAS 14 16 18 20 22

1C 58" 60" (150CM) CON PELUSA
TODAS LAS TALLAS

ENTRETELA

USE LAS PIEZAS 3 4

1D 20" A 25" (51CM A 64CM) ADHESIVA
TODAS LAS TALLAS

B PANTALONES- SE USAN A 1" (2.5CM) DEBAJO DE LA CINTURA

USE LAS PIEZAS 6 7 8 9

PIEZA 10 SE CORTA DEL ELÁSTICO

2A 44" 45" (115CM) CON PELUSA
TALLAS 10 12 14

2B 44" 45" (115CM) CON PELUSA
TALLAS 16 18 20 22

2C 58" 60" (150CM CON PELUSA
TODAS LAS TALLAS

DOUBLE THICKNESS= ESPESOR DOBLE
SELVAGES=ORILLAS
SEL(S)= ORILLAS
FOLD= DOBLEZ

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.
STITCH SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.

JACKET A

1.

Stay-stitch neck edges of front (1) and back (2) 1/2" (1.3cm) from cut edge in direction of arrows.
This stitching stays in permanently and helps prevent stretching on curved edges.
Stay-stitching will not be shown in the following illustrations.
2.














Stitch front to back at shoulder seams.
3.

With RIGHT sides together, pin sleeve (5) to armhole edge, matching notches and small dots. Stitch.
Stitch again 1/8" (3mm) from first stitching.
Trim seam below notches close to stitching.
Press seam toward sleeve.
4.

Pin front to back at entire underarm seam, matching underarm seams. Stitch seam.
5.

Press up hem on lower edge of sleeve.
Press under 1/4" (6mm) on raw edge.
Stitch hem in place close to inner pressed edge.
6.

Apply fusible interfacing to WRONG side of front facing (3) and back facing (4) sections, following manufacturer's directions.
Stitch shoulder seams of facing sections.
Stitch 1/4" (6mm) from unnotched edge; turn under along stitching and press.

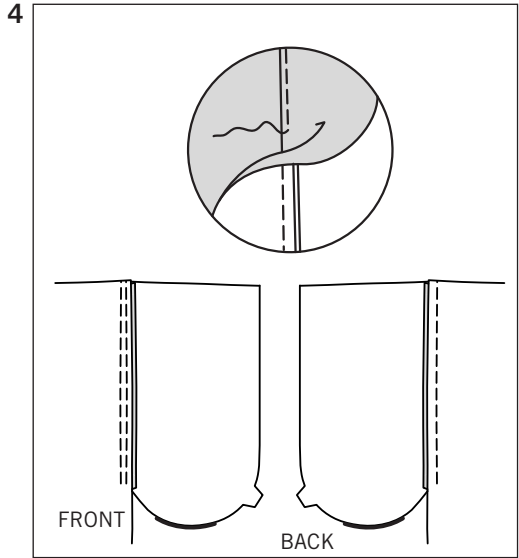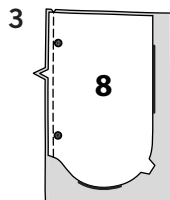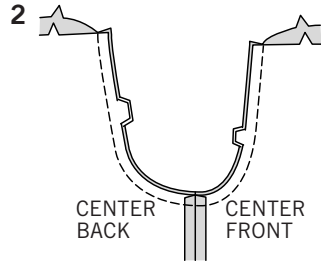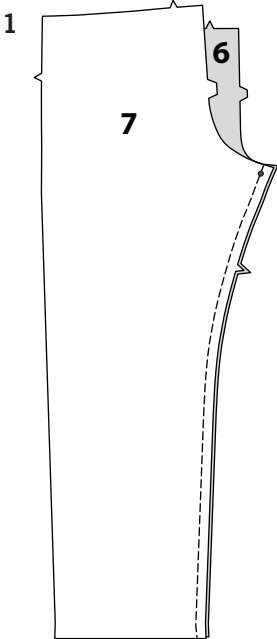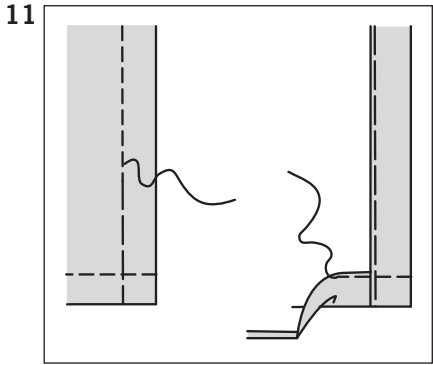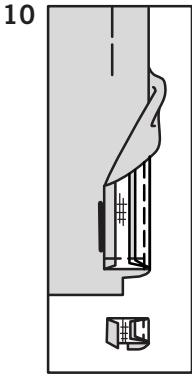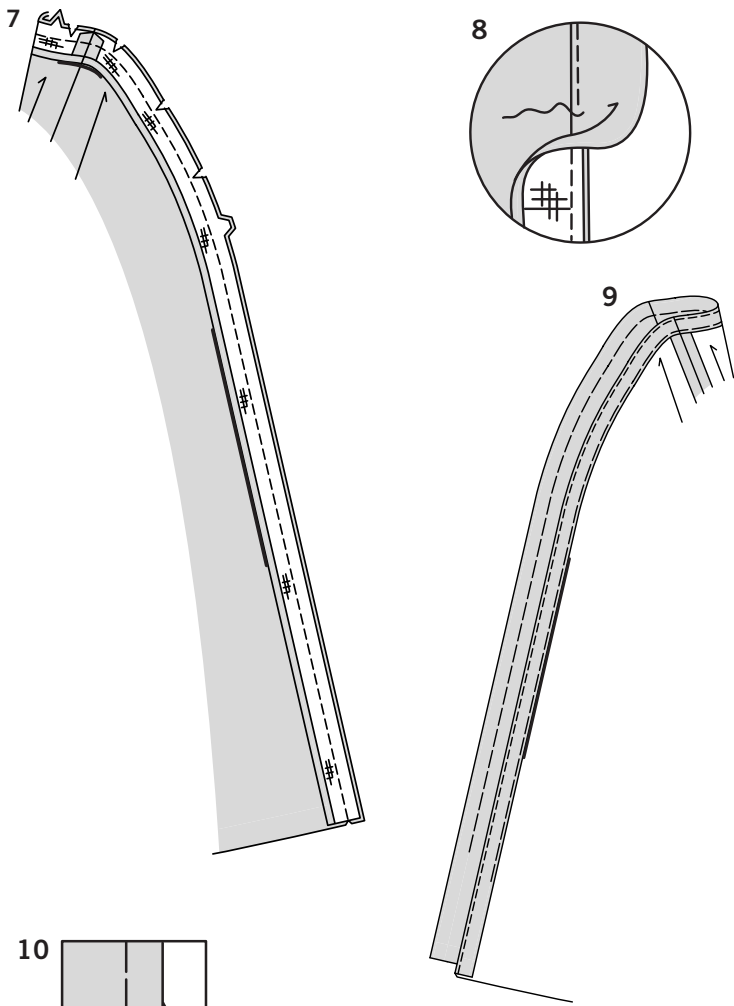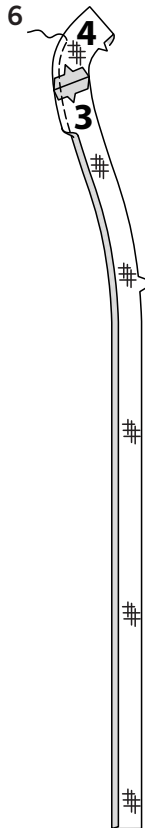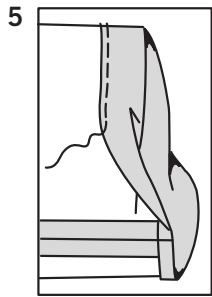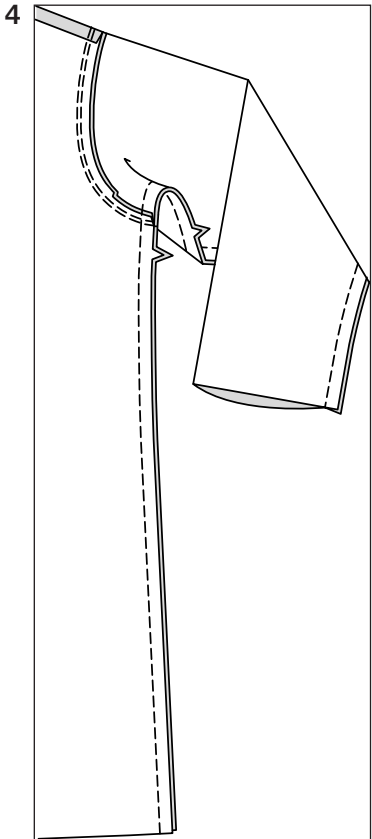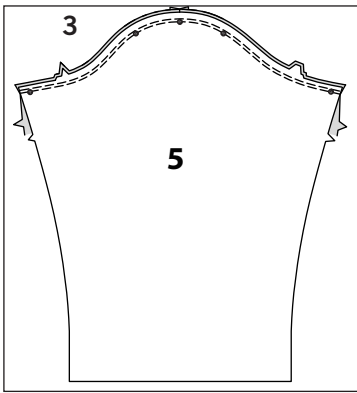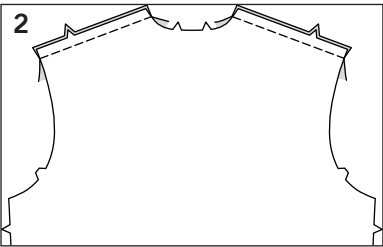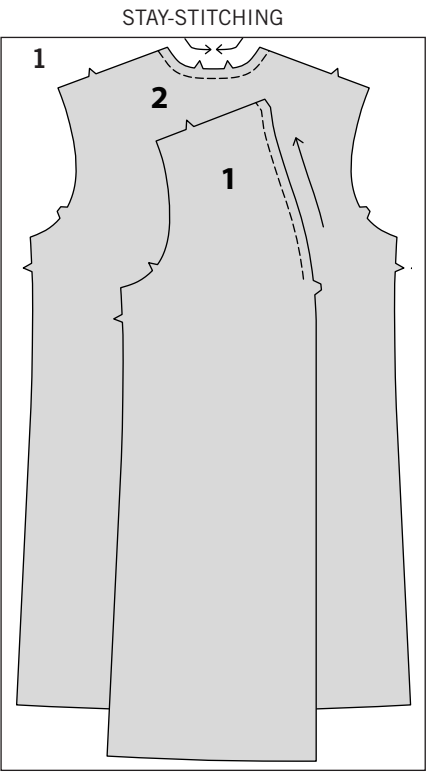

7.

With RIGHT sides together, pin facing to jacket, matching centers back and shoulder seams. Stitch front and neck edges.
Trim seam; clip curves.
8.

Understitch by pressing facing and seam away from jacket, stitching through facing and seam allowances close to seam as far as possible.
9.

Turn facing to INSIDE; press.
Hand-baste close to inner pressed edge of facing starting and ending 5" (12.5cm) above lower edges.
10.

Turn facing to OUTSIDE. Stitch across facing exactly 1" (2.5cm) above lower edge. Trim facing close to stitching.
Trim jacket to within 5/8" (1.5cm) of inner edge of facing.
11.

Turn facing to INSIDE; press, pressing up hem.
Press under 1/4" (6mm) on raw edge of hem.
Baste close to pressed edge of facing connecting to previous basting. Stitch hem in place starting at opening edge.
On OUTSIDE, top-stitch as basted. Remove basting.

PANTS B

NOTE: *Pants are worn 1" (2.5cm) below waist.*


1.

Stitch front (6) to back (7) at inner leg seams, matching notches. Stitch seam, stretching back to fit.
2.


Pin center seam, matching inner leg seams and notches. Stitch. Stitch again over first stitching to reinforce seam.
3.

Apply pockets (8) to side edges of front and back sections, as follows:
With RIGHT sides together, pin pocket to pants, matching large dots, having raw edges even. Stitch in a 3/8" (1cm) seam.
4.


Press seam toward pocket, pressing pocket out.
Understitch front pocket by stitching through pocket and seam allowances close to seam.

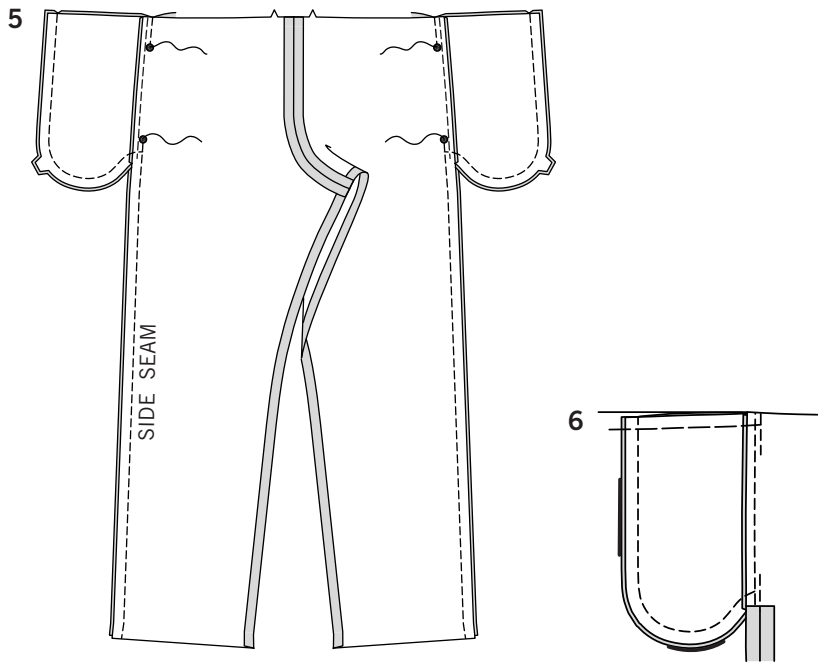

5. Pin front to back at side seams, matching large dots. Stitch side seams, leaving an opening between large dots, back-stitching at large dots to reinforce seam. Stitch pocket edges together from side seam to upper edge.


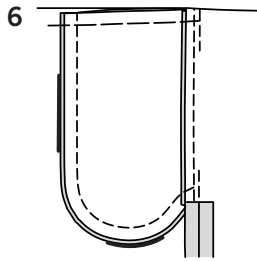


6. Clip pants back seam allowance below pocket. Press seam open below clip. Press pocket toward front. Baste upper edge of pocket to front, having raw edges even.

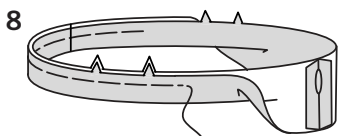


7. With RIGHT sides together, stitch seams of casing (9) sections , leaving an opening in LEFT side seam between small dots, as shown; back-stitch at small dots to reinforce seam.

8. Press seams open. Fold casing in half, lengthwise, with WRONG sides together, having raw edges even. Baste raw edges together. The side with the opening is the underside of the casing.

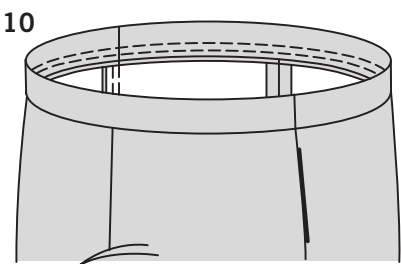
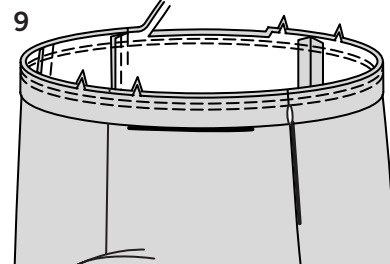


9. With the underside of casing facing you, pin casing to pants matching centers and side seams. Stitch along seam line. Stitch again 1/4" (6mm) from first stitching within seam allowance. Trim close to second stitching.

10. Press seam toward pants, pressing casing out.

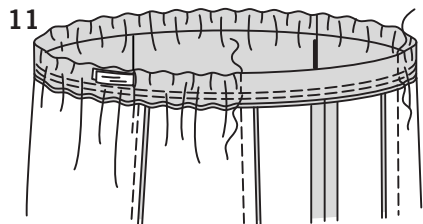


11. Cut a piece of elastic the length of elastic guide (10). Insert elastic through opening in casing, pulling out ends at LEFT side seam, as shown. Distribute fullness away from broken lines on front, keeping the elastic flat between broken lines, as shown. On OUTSIDE, stitch along broken lines, catching in elastic.

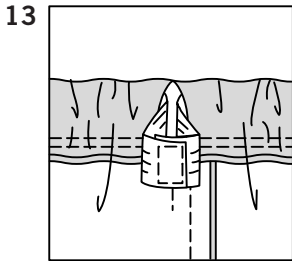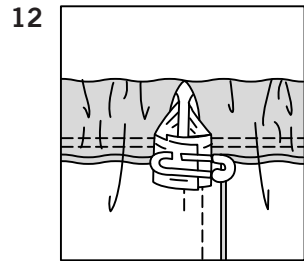


12. Overlap ends and hold with a safety pin. Try on pants and adjust to fit.

13. Stitch ends of elastic together securely.

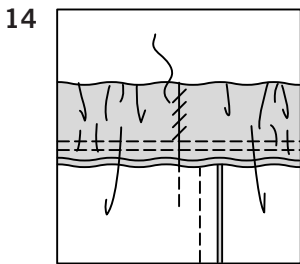

14. Slip-stitch opening edges of casing together. Distribute fullness evenly along the remainder of the casing. **TIP**-To secure elastic so it won't twist in wearing, stitch through all thicknesses of casing in the groove of each seam.

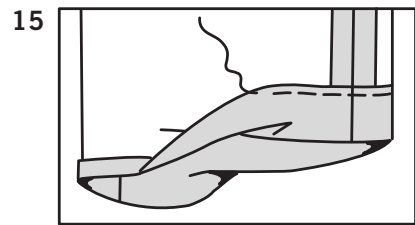

15. Mark length. Press up hem along marking. Mark depth of hem; trim evenly. Press under 1/4" (6mm) on raw edge. Stitch close to inner pressed edge.

CHAQUETA A

1. Haga puntada de sostén a los bordes del escote frontal (1) y trasero (2), a 1/2" (1.3cm) del borde cortado en dirección de las flechas. Esta puntada de sostén es permanente y ayuda, a prevenir el estiramiento de los bordes curvos. La puntada de sostén no será mostrada en las siguientes ilustraciones.

2. Cosa el frente a la espalda en las costuras de los hombros.

3. DERECHO CON DERECHO, sujete con alfileres la manga (5) al borde de la sisa, casando las muescas y los puntos pequeños. Cosa. Cosa de nuevo a 1/8" (3mm) de la puntada previa. Recorte la costura por debajo de las muescas cerca de la puntada. Planche la costura hacia la manga.

4. Sujete con alfileres el frente a la espalda, en la totalidad de la costura de debajo de los brazos, casando las costuras de debajo de los brazos. Cosa la costura.

5. Planche el dobladillo hacia arriba sobre el borde inferior de la manga. Planche un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa el dobladillo en su lugar, cerca del borde doblado interior.

6. Aplique entretela adhesiva al REVES, de las secciones de la vista frontal (3) y de la trasera (4), siguiendo las instrucciones del fabricante. Cosa las costuras de los hombros de las secciones de la vista. Cosa a 1/4" (6mm) del borde sin muescas; volteo un doblez a lo largo de la puntada y planche.

7. DERECHO CON DERECHO, sujete con alfileres la vista a la chaqueta, casando las costuras trasera central y la de los hombros. Cosa los bordes frontal y del escote. Recorte la costura; haga cortes en las curvas.

8. Haga puntada oculta planchando la vista y la costura aparte de la chaqueta, cosiendo a través de la vista y los márgenes de la costura, cerca de la puntada hasta donde sea posible.

9. Voltee la vista al INTERIOR; planche. Hilvane a mano cerca del borde doblado interior de la vista, comenzando y terminando a 5" (12.5cm) por encima de los bordes inferiores.

10. Voltee la vista al EXTERIOR. Cosa a través de la vista a exactamente 1" (2.5cm) por encima del borde inferior. Recorte la vista cerca de la puntada. Recorte la chaqueta hasta dentro de 5/8" (1.5cm) del borde interior de la vista.

11. Voltee la vista al INTERIOR; planche, planchando el dobladillo hacia arriba. Planche un doblez de 1/4" (6mm) sobre el borde no terminado del dobladillo. Hilvane cerca del borde doblado de la vista, uniendo los hilvanados previos. Cosa el dobladillo en su lugar, comenzando en el borde abierto. En el EXTERIOR, haga puntada de adorno como hilvanado. Retire el hilvanado.

PANTALONES B

NOTA: Los pantalones se usan a 1" (2.5cm) por debajo de la cintura.

1. Cosa el frente (6) a la parte trasera (7), en las costuras interiores de la pierna, casando las muescas. Cosa la costura, estirando hacia atrás para ajustar.

2. Sujete con alfileres la costura central, casando las costuras interiores de la pierna y las muescas. Cosa. Cosa de nuevo sobre la puntada previa para reforzar la costura.

3. Aplique los bolsillos (8) a los bordes laterales, de las secciones frontal y trasera, como sigue: DERECHO CON DERECHO, sujete con alfileres el bolsillo a los pantalones, casando los puntos grandes y emparejando los bordes no terminados. Cosa en una costura de 3/8" (1cm).

4. Planche la costura hacia el bolsillo y el bolsillo hacia afuera. Haga puntada oculta al bolsillo frontal, planchando a través del bolsillo y los márgenes de la costura cerca de la puntada.

5. Sujete con alfileres el frente a la parte trasera en las costuras laterales, casando los puntos grandes. Cosa las costuras laterales, dejando una abertura entre los puntos grandes, retrocediendo la puntada y cosiendo en los puntos grandes, para reforzar la costura. Cosa juntos los bordes del bolsillo, desde la costura lateral hasta el borde superior.

6. Corte el margen de la costura trasera de los pantalones por debajo del bolsillo. Planche abierta la costura por debajo del corte. Planche el bolsillo hacia el frente. Hilvane el borde superior del bolsillo al frente, emparejando los bordes no terminados.

7. DERECHO CON DERECHO, cosa las costuras de las secciones de la jareta (9), dejando una abertura en la costura lateral IZQUIERDA entre los puntos pequeños, como se muestra; retroceda la puntada y cosa en los puntos pequeños, para reforzar la costura.

8. Planche abierta las costuras. REVES CON REVES, doble la jareta por la mitad y a lo largo, emparejando los bordes no terminados. Hilvane conjuntamente los bordes no terminados. El lado con la abertura es la parte de debajo de la jareta.

9. Con la parte de debajo de la jareta mirándolo, sujete con alfileres la jareta a los pantalones, casando las costuras centrales y las laterales. Cosa a lo largo de la línea de la costura. Cosa de nuevo a 1/4" (6mm) de la puntada previa, dentro del margen de la costura. Recorte cerca de la puntada siguiente.

10. Planche la costura hacia los pantalones y la jareta hacia afuera.

11. Corte un pedazo de elastico, de la longitud de la guía del elastico (10). Inserte el elastico en la jareta, halando los extremos en la costura lateral IZQUIERDA, como se muestra. Distribuya la amplitud aparte de las líneas entrecortadas sobre el frente, manteniendo plano el elastico entre las líneas entrecortadas, como se muestra. En el EXTERIOR, cosa a lo largo de las líneas entrecortadas, agarrando el elastico.

12. Cruce los extremos y sosténgalos con un gancho de seguridad. Pruébese los pantalones y ajústelos a la medida.

13. Cosa firmes y juntos los extremos del elastico.

14. Haga puntada falsa conjunta a los bordes abiertos de la jareta. Distribuya uniformemente la amplitud, a lo largo del resto de la jareta.

CONSEJO – Para prevenir que el elastico no se tuerza con el uso, cosa a través de todos los grosores de la jareta, en la ranura de cada costura.

15. Marque el largo. Planche el dobladillo hacia arriba a lo largo de la marca. Marque el ancho del dobladillo; recorte uniformemente. Planche un doblez de 1/4" (6mm) sobre el borde no terminado. Cosa cerca del borde doblado interior.