

S3038

Simplicity



NORRIS DÁNTA FORD



Scan QR code for a Sew-Along tutorial by Norris Dánta Ford.

Average

MEN'S JACKET

Suggested Fabrics: Boiled Wool, Broadcloth, Chino, Corduroy, Cotton Blends, Denim, Linen Blends, Melton, Microsuede, Stretch Wovens, Tweed, Twill, Wool Blends. **Lining:** Cotton Blends, Polyester Blends. **Interfacing:** Lightweight Fusible.

Notions: One 24" (61cm) separating medium weight zipper (adjust to fit).

Sizes	S	M	L	XL	XXL
	(34-36)	(38-40)	(42-44)	(46-48)	(50-52)
European	44-46	48-50	52-54	56-58	60-62

BODY MEASUREMENTS: Select pattern size based on body measurements

	S	M	L	XL	XXL	
Chest	34-36	38-40	42-44	46-48	50-52	Ins.
Waist	28-30	32-34	36-39	42-44	46-48	"
Hip	35-37	39-41	43-45	47-49	51-53	"

Jacket	S	M	L	XL	XXL	
45**	2 1/4	2 3/4	2 3/4	2 3/4	3	Yds.
60**	1 1/4	2	2 1/4	2 1/4	2 3/4	"
Contrast (Collar)- 45** - 1/2 yd.; 60** - 3/4 yd.						
Lining						
45***	2 1/4	2 1/4	2 1/4	2 1/4	2 3/4	Yds.
Interfacing- 20" - 1 1/4 yd.						

FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)

	S	M	L	XL	XXL	
Chest	44	48	52	56	60	Ins.
Width, lower edge						
Jacket	43	47	51	55	59	Ins.
Finished back length from base of neck						
Jacket	22 1/2	23	23 1/2	24	24 1/2	Ins.

*with nap **without nap

Moins Facile

VESTE POUR HOMMES

Tissus Conseillés: Laine bouillie, Broadcloth, Chino, Velours côtelé, Cottonnades, Denim, Lin mélangés, Melton, Tissus tissés extensibles, Tweed, Twill, Lainages. **Doubleure:** Cottonnades, Melanges de polyester. **Entoilage:** Thermocollant léger.

Mercerie: 1 fermeture à glissière séparable de poids moyen de 61cm (adaptez pour ajuster).

Tailles	P/S	M/M	G/L	TG/XL	TTG/XXL
Fr/Eur	44-46	48-50	52-54	56-58	60-62

MESURES DU CORPS: Choisissez la taille du patron basée sur les mesures du corps

	P/S	M/M	G/L	TG/XL	TTG/XXL	
Poitrine	87-92	97-102	107-112	117-122	127-132	cm
Taille	71-76	81-87	92-99	107-112	117-122	"
Hanches	89-94	99-104	109-115	119-124	128-135	"

Veste	P/S	M/M	G/L	TG/XL	TTG/XXL	
115cm*	2.4	2.4	2.6	2.6	2.7	m
150cm*	1.7	1.8	1.9	1.9	2.1	"
Contraste (Col)- 115cm* - 0.5m; 150cm* - 0.3m						
Doubleure						
115cm**	1.9	2.1	2.1	2.2	2.2	m
Entoilage- 51cm - 1.0m						

MESURES DES VÊTEMENTS FINI (Motif et aisance de port compris)



	P/S	M/M	G/L	TG/XL	TTG/XXL	
Poitrine	112	122	132	142	152	cm
Largeur à l'ourlet						
Veste	109	119	130	140	150	cm
Longueur finie – dos, votre nuque à l'ourlet						
Veste	57	58	60	61	62	cm

*avec sens **sans sens



Simplicity®

Thank you for purchasing this Simplicity pattern. We made every effort to provide you with a high quality product.

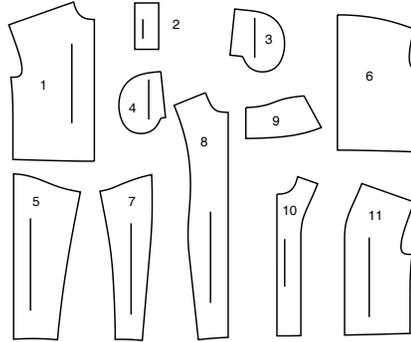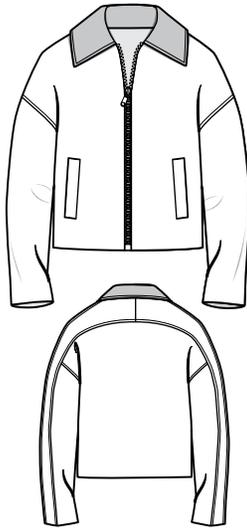

- 1 FRONT
- 2 WELT
- 3 POCKET
- 4 POCKET FACING
- 5 SLEEVE FRONT
- 6 BACK
- 7 SLEEVE BACK
- 8 YOKE AND SLEEVE BACK
- 9 COLLAR
- 10 FRONT FACING
- 11 FRONT LINING



General Directions

The Pattern

- SYMBOLS**
- GRAIN LINE: Place on straight grain of fabric parallel to selvage
 - PLACE SOLID LINE on fold of fabric.
 - CENTER FRONT OR BACK of garment.
 - NOTCHES
 - DOTS
 - CUTTING LINE
 - LENGTHEN OR SHORTEN LINES

SEAM ALLOWANCE: 5/8" (1.5cm) unless otherwise stated is included but not printed on MULTI-SIZE PATTERNS. Mark your size with colored felt tip pen. See chart on tissue for how to use MULTI-SIZE PATTERNS.

ADJUST IF NEEDED
Make adjustments before placing pattern on fabric.

TO LENGTHEN:
Cut pattern between lengthen or shorten lines. Spread pattern evenly, the amount needed and tape to paper.



TO SHORTEN:
At lengthen or shorten lines, make an even pleat taking up amount needed. Tape in place.

When lengthen or shorten lines are not given, make adjustments at lower edge of pattern.

Cutting/Marking

BEFORE CUTTING:
PRESS pattern pieces with a warm dry iron. PRE-SHRINK fabric by pre-washing washables or steam-pressing non-washables.

CIRCLE your cutting layout.

PIN pattern to fabric as shown in Cutting Layouts.

• FOR DOUBLE THICKNESS: Fold fabric with RIGHT sides together.


• FOR SINGLE THICKNESS: Place fabric RIGHT side up.

• FOR PILE, SHADED OR ONE WAY DESIGN FABRICS: Use "with nap" layouts

AFTER CUTTING:
Transfer markings to WRONG side of fabric before removing pattern. Use pin and chalk method or dressmaker's tracing paper and wheel.


To Quick Mark:

- Snip edge of fabric to mark notches, ends of fold lines and center lines.
- Pin mark dots.

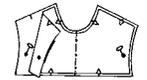


Sewing

- SEW garment following **Sewing Directions**.
- PIN or machine-baste seams matching notches.
- STITCH 5/8" (1.5 cm) seams unless otherwise stated.
- PRESS seams open unless otherwise indicated clipping when necessary so seams will lie flat.
- TRIM seams to reduce bulk, as shown below.

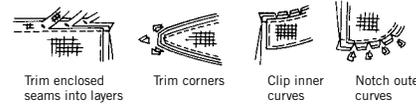


SPECIAL CUTTING NOTES


★ If layout shows a piece extending past fold, cut out all pieces except piece that extends.

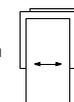


Open out fabric to single thickness. Cut extending piece on RIGHT side of fabric in position shown.

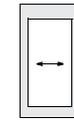

✱ Mark small arrows along both selvages indicating direction of nap or design. Fold fabric crosswise with RIGHT sides together, and cut along fold (a).

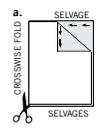

Turn one fabric layer around so arrows on both layers go in the same direction. Place RIGHT sides together (b).

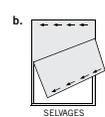


Cutting Layouts

- WRONG SIDE OF FABRIC
- RIGHT SIDE OF FABRIC
- PATTERN PIECE WITH PRINTED SIDE UP
- PATTERN PIECE WITH PRINTED SIDE DOWN
- ★ SEE SPECIAL CUTTING NOTES


POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE

JACKET
USE PIECES 1 2 3 5 6 7 8 10

45" (115CM)
WITH NAP
ALL SIZES

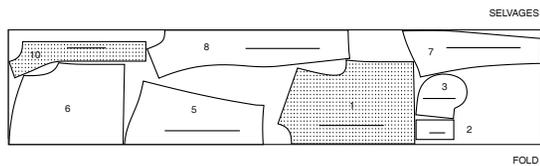


60" (150CM)
WITH NAP
ALL SIZES

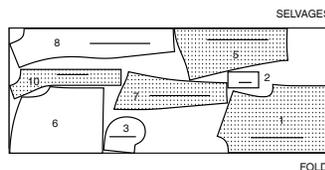


CONTRAST (COLLAR)
USE PIECE 9

45" (115CM)
WITH NAP
ALL SIZES




60" (150CM)
WITH NAP
ALL SIZES

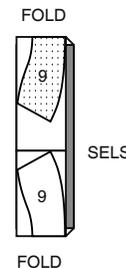


LINING
USE PIECES 4 5 6 7 8 11

45" (115CM)
WITHOUT NAP
ALL SIZES

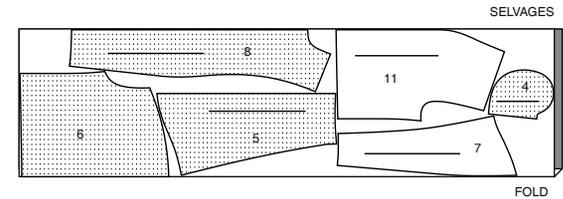

INTERFACING
PIECES 2 9 10

20" (51CM)
ALL SIZES

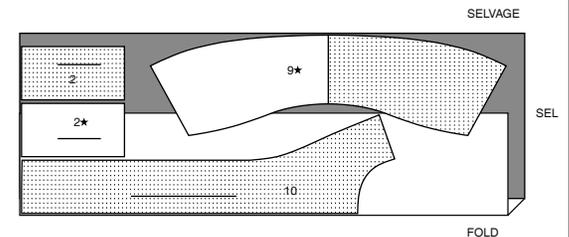

Sewing Directions

FABRIC KEY RIGHT SIDE WRONG SIDE INTERFACING LINING LINING

Sewing methods in **BOLD TYPE** have Sewing Tutorial Video available. Scan QR CODE to watch videos:

CATCHSTITCH - See how to catchstitch video.

REINFORCE - Stitch along seamline where indicated in sewing instructions, using small machine stitches.

SLIPSTITCH - Slide needle through a folded edge, then pick up a thread of underneath fabric.

STAYSTITCH - Stitch 1/2" (1.3mm) from seamline in seam allowance.

TOPSTITCH - On outside, stitch 1/4" (6mm) from edge, seam or previous stitching, using presser foot as guide, or stitch where indicated in instructions.

UNDERSTITCH - Open out facing or underside of garment; stitch to seam allowance close to seam.

JACKET

NOTE: When lining pieces are shared with fabric, cut lining sections 1" (2.5cm) shorter.

INTERFACING

1. Pin INTERFACING to wrong side of each matching FABRIC section. Fuse, following manufacturer's instructions.






FRONT AND BACK

2. **REINFORCE FRONT** (1) along stitching lines, pivoting at small dots, as shown. Slash along line between stitching lines, clipping diagonally to small dots.

3. With right sides together, fold WELT (2) along foldline. Baste raw edges together. Trim lower seam allowance to a scant 1/4" (6mm).

4. Pin welt to front, matching small and large dots, placing seamline along stitching line. Baste between small dots.

5. With right sides together, pin POCKET (3) to front, placing seamline along stitching line, matching large dots. Stitch along seamline between large dots.

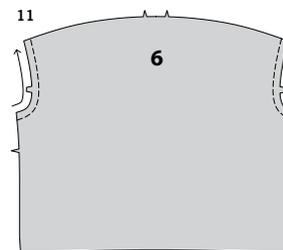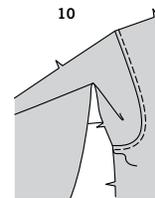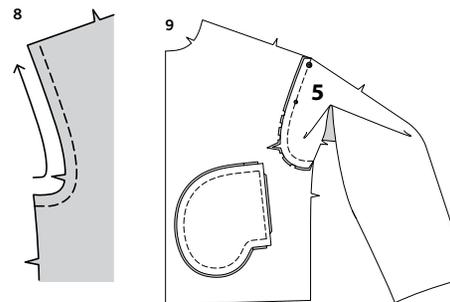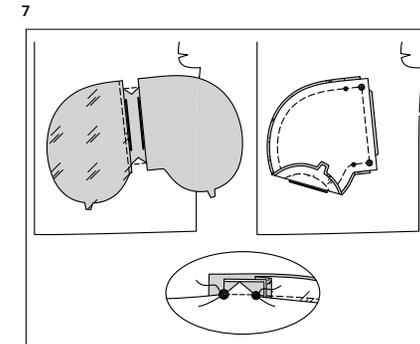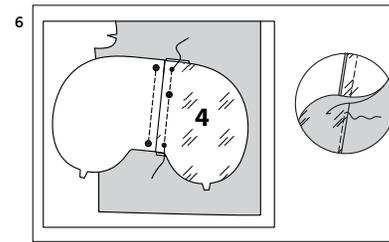

6. With right sides together, pin POCKET FACING (4) to front (over welt), placing seamline along basting, matching small and large dots. Stitch along seamline between small dots. **UNDERSTITCH** pocket facing.





7. Turn pocket, pocket facing and triangular ends to inside, pulling ends of welt between small dots, as shown, turning welt out. Press. Stitch pocket edges together, catching welts and triangular ends in stitching, stitching across upper edge of pocket, keeping front free.


8. **STAYSTITCH** armhole edges of front, in direction of arrows.

9. With **RIGHT** sides together, pin SLEEVE FRONT (5) to armhole edge, matching notches and dots, clipping to stay-stitching if necessary. Baste. Stitch. Press seam toward front.

10. On **OUTSIDE**, **TOPSTITCH** front in direction of seam.


11. **STAYSTITCH** armhole edges of **BACK** (6), in direction of arrows.

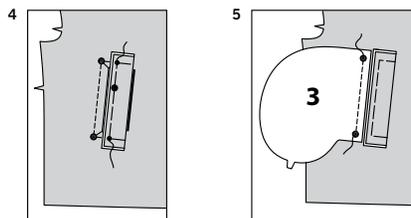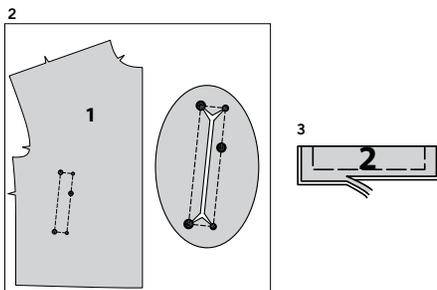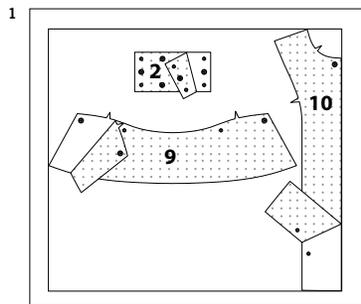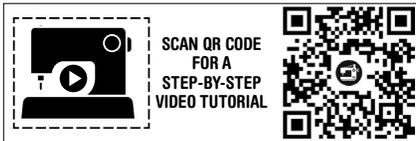

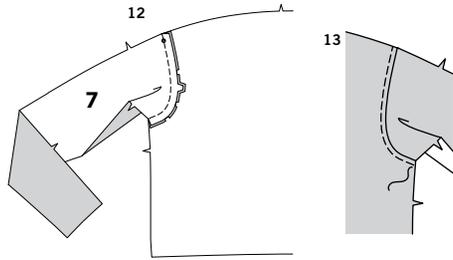


12. With RIGHT sides together, pin SLEEVE BACK (7) to armhole edge, matching notches and dots, clipping to stay-stitching if necessary. Baste. Stitch. Press seam toward back.


13. On OUTSIDE, TOPSTITCH back in direction of seam.

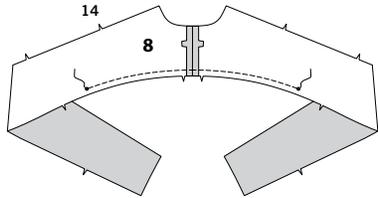


14. With RIGHT sides together, stitch center back seam of YOKE AND SLEEVE BACK (8) sections. Machine stitch 1/2" (1.3cm) from lower edge of yoke and sleeve between small dots.

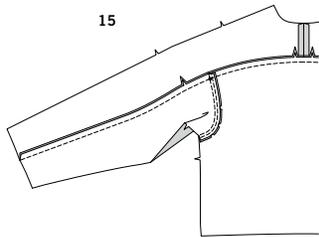


15. With RIGHT sides together, pin yoke and sleeve to upper edge of back matching notches and small dots. Clip to stitching if necessary, along curve. Baste. Stitch. Press seam up.

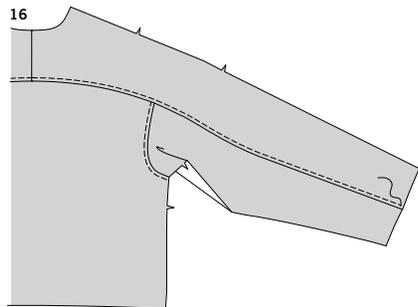


16. On OUTSIDE, TOPSTITCH yoke in direction of seam.

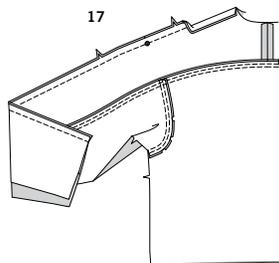

17. With RIGHT sides together. Stitch front to back at shoulder seams. Press seams toward back.

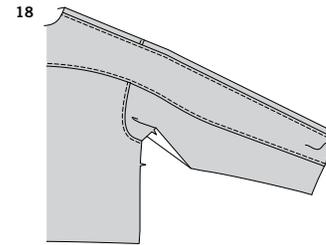


18. On OUTSIDE, TOPSTITCH back in direction of seam.

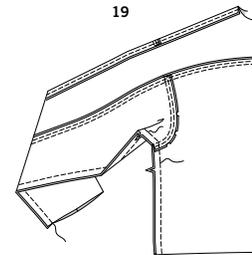


19. With RIGHT sides together, pin front to back at underarm seam matching notches and seams. Stitch front to back at entire underarm seam, matching armhole seams. Stitch again along curve, over first stitching to reinforce.


COLLAR

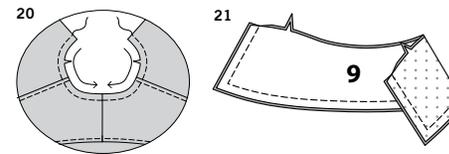


20. STAYSTITCH neck edge of jacket in direction of arrows.

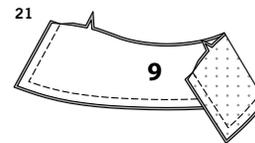


21. With RIGHT sides together, pin COLLAR (9) sections together having raw edges even. Stitch, leaving notched edge open. Trim seam and corners.

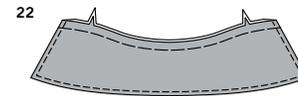

22. Turn collar RIGHT side out. Press. Baste raw edges together. TOPSTITCH outer edges of collar.

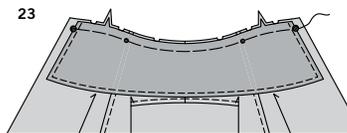

23. On OUTSIDE, with interfaced side facing down, pin collar to neck edge matching large dots, placing small dots at shoulder seams. Clip to stay-stitching if necessary. Baste.

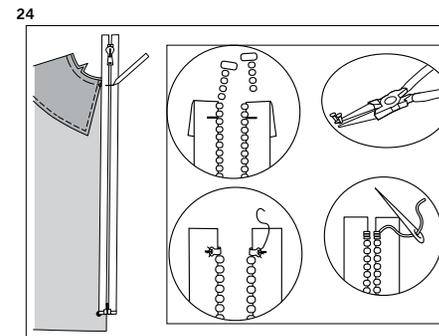


ZIPPER

NOTE: Use an adjustable zipper foot when stitching zipper.

24. You will need to adjust the length of your Separating Zipper. Always shorten separating zippers from the top. Measure front opening edge between lower small dot on front and below collar seam. Mark the desired length on the zipper tape, measuring from the lower edge of the bottom stop. Cut off extra zipper 1" (2.5cm) above mark, making sure that the zipper pull is well below where you are going to cut. Do not discard the pieces. Remove zipper teeth above mark. Using pliers pry the top-stops open and remove them from the discarded pieces of zipper. Reinstall top stops by crimping them in place immediately above the last remaining tooth.

25

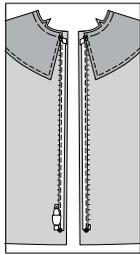

25. Separate zipper. On **OUTSIDE**, pin slider side of zipper, face down onto **RIGHT** front opening edge, with lower end of zipper at small dots, and having zipper tape 1/4" (6mm) from front raw edge.

On **OUTSIDE**, pin remaining side of zipper, face down onto the **LEFT** front opening edge in same manner. Make sure that both sides of zipper are aligned. Baste. Using an adjustable zipper foot, stitch zipper in place 5/8" (1.5cm) from the front edge.

TIP - To avoid bumpy stitching around the tab and slider, stop stitching just before you get to the slider. Leaving the needle in the fabric, raise the presser foot and pull the slider down below the needle. Lower the presser foot and continue stitching.

LINING AND FACING

26. **STAYSTITCH** side edges of **FRONT FACING** (10), in direction of arrows.

27. With **RIGHT** sides together, pin **FRONT LINING** (11) to side edge of front facing, matching notches, clipping to stay-stitching if necessary. Baste. Stitch, ending at lower small dot. Backstitch to reinforce seam. Press seam toward lining.


28. **STAYSTITCH** armhole edges of front, in direction of arrows.

29. With **RIGHT** sides together, pin sleeve front lining to armhole edge, matching notches and dots, clipping to stay-stitching if necessary. Baste. Stitch. Press seam toward sleeve.


30. **STAYSTITCH** armhole edges of back lining, in direction of arrows.

31. With **RIGHT** sides together, pin sleeve back lining to armhole edge, matching notches and dots, clipping to stay-stitching if necessary. Baste. Stitch. Press seam toward sleeve.


26

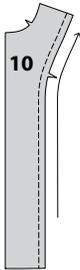


27

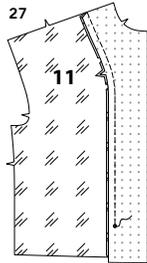


28

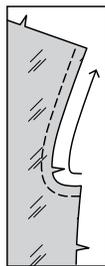


29

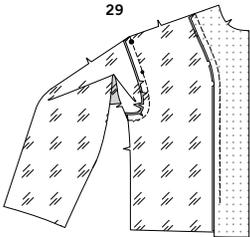


30

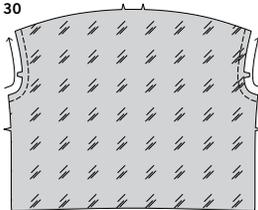


31

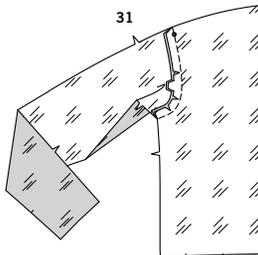


32

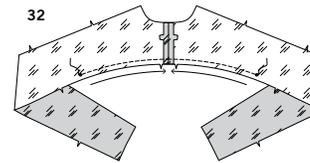


33

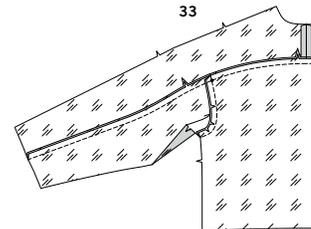


34

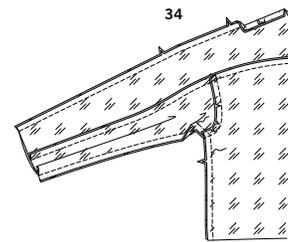

35

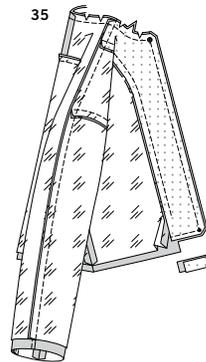


36

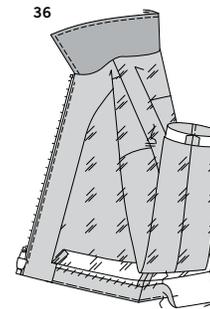


37



38

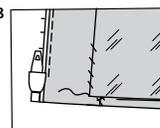

39

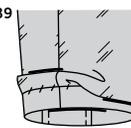

32. With **RIGHT** sides together, stitch center back seam of yoke and sleeve back lining. Machine stitch 1/2" (1.3cm) from lower edge of yoke and sleeve between small dots.

33. With **RIGHT** sides together, pin yoke and sleeve to upper edge of back matching notches and small dots. Clip to stitching if necessary, along curve. Baste. Stitch. Press seam up.

34. With **RIGHT** sides together. Stitch front to back at shoulder seams. Press seams toward back. Pin front to back at underarm seam matching notches and seams. Stitch front to back at entire underarm seam, matching armhole seams. Stitch again along curve, over first stitching to reinforce.

35. With **RIGHT** sides together, pin lining to jacket, over collar, matching seams and notches, having raw edges even. Stitch neck and front and lower edge of jacket, leaving lower edge of lining free, using an adjustable zipper foot on front edges. Trim seam, as shown. Clip curves.

FINISHING

36. **UNDERSTITCH** facing/lining as far as possible. Turn facing/lining to **INSIDE**; press. Hand tack at shoulder seams. Turn up remainder of lower edge of jacket along hemline, keeping lining free. Baste close to fold. Sew hem in place, easing in fullness, if necessary. Press. **CATCHSTITCH** facings to hem.

37. Turn in 5/8" (1.5cm) on lower edge of lining and place folded edge 5/8" (1.5cm) below raw edge of hem. **SLIPSTITCH**. **NOTE:** A pleat will form at lower edge for wearing ease.

38. **SLIPSTITCH** remainder of lining to front facing.

39. Press up hem on lower edge of sleeve. Turn in 5/8" (1.5cm) on lower edge of sleeve lining and place folded edge 5/8" (1.5cm) below raw edge of hem. **SLIPSTITCH**. **NOTE:** A pleat will form at lower edge for wearing ease.



Congrats!

You've completed your sewing adventure

**SHARE
YOUR** LOOK



Post your pattern and tag us
[@simplicity_creative_group](#) and [#simplicitypatterns](#)
for a chance to be featured on our social media.

Look for more PDF patterns at [simplicity.com](https://www.simplicity.com)

Have a question or need help with your sewing project call us at
1-888-588-2700



Simplicity ©2024 a division of IG Design Group Americas Inc. • Atlanta, GA 30342 USA www.thedesigngroup.com • All Rights Reserved. www.simplicity.com • Made in the U.S.A. Fabriqué aux États-Unis.

To be used for individual private home use only and not for commercial or manufacturing purposes. • A usage privé seulement et non à des fins commerciales ou de production en série. • Para uso privado solamente, no se puede utilizar con propósitos de comercialización o de producción en serie.