

S9804

Simplicity®



easy-to-sew

Shop all the pattern brands you love @

Simplicity®.com

Easy

BICYCLE BASKETS, BAGS AND PANNIERS

Suggested Fabrics: Canvas, Cotton/Cotton Blends, Denim, Light and Medium Weight Home Dec, Poplin, Synthetic Leather, Twill, Vinyl Coated Fabric. **Lining:** Cotton/Cotton Blends.

Interfacing 1: Headliner Fabric. **Interfacing 2:** Extra firm fusible craft weight.

Notions: **A,B,C,D,E:** One pkg. of $\frac{1}{2}$ " (1.3cm) double fold bias tape, corrugated cardboard or foam core board, $\frac{3}{4}$ " (2cm) hook and loop tape: $1\frac{1}{4}$ yd. (1.2m) for **A**, $1\frac{1}{2}$ yd. (1.4m) for **B,C**, $1\frac{1}{2}$ yd. (1.6m) for **D**, $2\frac{1}{2}$ yd. (2.1m) for **E**.

Basket A - 7" W x 8½" H x 4" D (18cm x 22cm x 10cm)

45"** - $\frac{1}{2}$ yd. (115cm* - 0.6m)

Lining A: 45*** - $\frac{1}{2}$ yd. (115cm** - 0.5m)

Interfacing 1: 54" - $\frac{1}{2}$ yd. (140cm - 0.3m)

Interfacing 2: 20" - $\frac{1}{2}$ yd. (51cm - 0.3m)



A




B



C



D

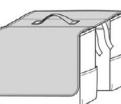

E

Bag B - 10" W x 8½" H x 5½" D (25cm x 22cm x 14cm)

45"** - $\frac{1}{2}$ yd. (115cm* - 0.6m)

Contrast (Flap): 45"** - $\frac{1}{2}$ yd. (115cm* - 0.3m)

Lining B: 45*** - $\frac{1}{2}$ yd. (115cm** - 0.5m)

Interfacing 1: 54" - $\frac{1}{2}$ yd. (140cm - 0.3m)

Interfacing 2: 20" - $\frac{1}{2}$ yd. (51cm - 0.3m)

Basket C - 7" W x 8½" H x 4" D (18cm x 22cm x 10cm)

45"** - $\frac{1}{2}$ yd. (115cm* - 0.7m)

Lining C: 45*** - $\frac{1}{2}$ yd. (115cm** - 0.8m)

Interfacing 1: 54" - $\frac{1}{2}$ yd. (140cm - 0.3m)

Interfacing 2: 20" - $\frac{1}{2}$ yd. (51cm - 0.5m)

Bag D - 10" W x 8½" H x 5½" D (25cm x 22cm x 14cm)

45"** - $\frac{1}{2}$ yd. (115cm* - 0.7m)

Contrast (Flap): 45"** - $\frac{1}{2}$ yd. (115cm* - 0.5m)

Lining D: 45*** - $\frac{1}{2}$ yd. (115cm** - 0.8m)

Interfacing 1: 54" - $\frac{1}{2}$ yd. (140cm - 0.3m)

Interfacing 2: 20" - $\frac{1}{2}$ yd. (51cm - 0.7m)

Panniers E - For each bag: 14" W x 11" H x 4" D (36cm x 28cm x 10cm)

45"** - $\frac{1}{4}$ yds. (115cm* - 1.0m)

Contrast (Flap, Top, Handle, Straps): 45"** - $\frac{1}{4}$ yds. (115cm* - 1.0m)

Lining E: 45*** - $\frac{1}{4}$ yds. (115cm** - 1.5m)



Interfacing 1: 54" - 1 yd. (140cm - 0.9m)

Interfacing 2: 20" - 1 yd. (51cm - 0.9m)

*with nap **without nap


Simplicity® S9804

Thank you for purchasing this Simplicity pattern.
We made every effort to provide you with a high quality product.

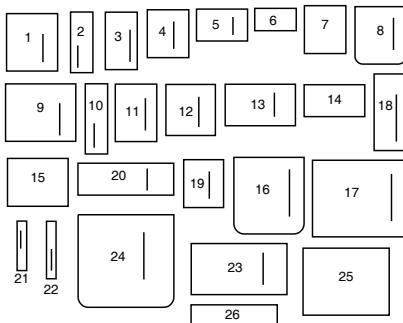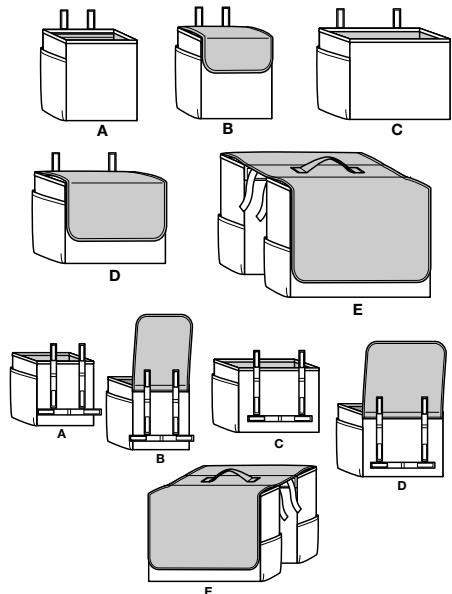

- 1 FRONT AND BACK - A,B
- 2 STRAP - A,B
- 3 SIDE - A,B
- 4 POCKET - A,B
- 5 BOTTOM - A,B
- 6 GUIDE - A,B
- 7 GUIDE - A,B
- 8 FLAP - B
- 9 FRONT AND BACK - C,D
- 10 STRAP - C,D
- 11 SIDE - C,D
- 12 POCKET - C,D
- 13 BOTTOM - C,D
- 14 GUIDE - C,D
- 15 GUIDE - C,D
- 16 FLAP - D
- 17 FRONT AND BACK - E
- 18 SIDE - E
- 19 POCKET - E
- 20 BOTTOM - E
- 21 STRAP - E
- 22 HANDLE - E
- 23 TOP - E
- 24 FLAP - E
- 25 GUIDE - E
- 26 GUIDE - E

Cutting Layouts

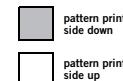

POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE

General Directions For Cutting

PRE-SHRINK and iron all fabric.

FOR DOUBLE THICKNESS -Fold fabric with RIGHT sides together. Pin pattern to WRONG side of fabric.

FOR SINGLE THICKNESS -Pin pattern to RIGHT side of fabric.

★ If layout shows a piece extending past fold, cut out all pieces except piece that extends. Open out fabric to single thickness. Cut extending piece on RIGHT side of fabric in position shown.


★ Mark small arrows along both selvages in indicating direction of nap or design. Fold fabric crosswise with RIGHT sides together, and cut along fold. Turn one fabric layer around so arrows on both layers go in the same direction. Place RIGHT sides together.

BASKET A, BAG B

USE PIECES 1 2 3 4 5

CUT THREE OF PIECE 2
CUT ONE OF PIECE 5


45" (115CM)
WITH NAP

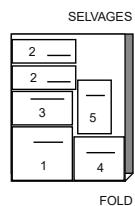

LINING A,B

USE PIECES 1 3 5


45" (115CM)
WITH NAP

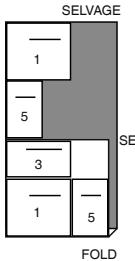

INTERFACING 1 A,B

USE PIECES 1 3 5


54" (137CM)
WITH NAP

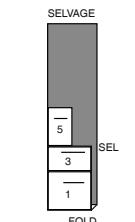

INTERFACING 2A

USE PIECE 2


20" (51CM)

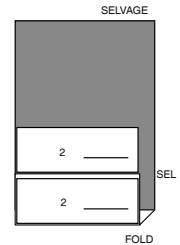

CONTRAST B (FLAP)

USE PIECE 8


45" (115CM)
WITH NAP

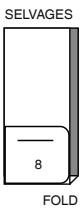

INTERFACING 2C

USE PIECES 10


20" (51CM)

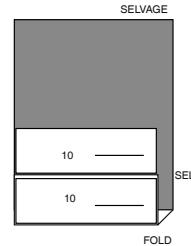

INTERFACING 2B

USE PIECES 2 8


20" (51CM)

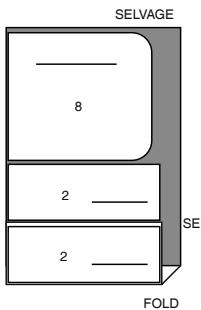

BASKET C, BAG D

USE PIECES 9 10 11 12 13


45" (115CM)
WITH NAP

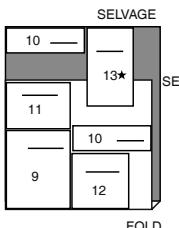

LINING C,D

USE PIECES 9 11 13


45" (115CM)
WITH NAP

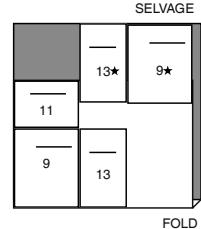

INTERFACING 1 C,D

USE PIECES 9 11 13


54" (137CM)
WITH NAP

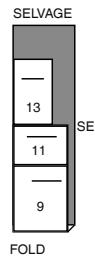

CONTRAST D (FLAP)

USE PIECE 16


45" (115CM)
WITH NAP

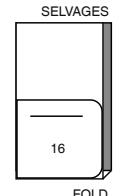

INTERFACING 2D

PIECES 10 16


20" (51CM)

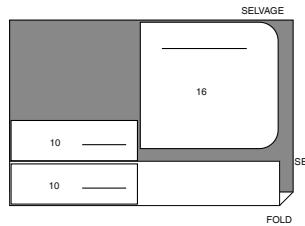

PANNIERS E

PIECES 17 18 19 20


45" (115CM)
WITH NAP

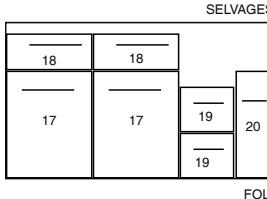

CONTRAST E (FLAP, TOP, HANDLE)

PIECES 21 22 23 24


45" (115CM)
WITH NAP

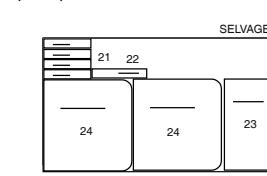

LINING E

PIECES 17 18 20

45" (115CM)
WITH NAP

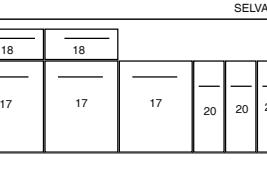

S9804


2 of 4

INTERFACING 1E

USE PIECES 17 18 20 22 23

CUT ONE OF PIECE 22










54" (137CM)

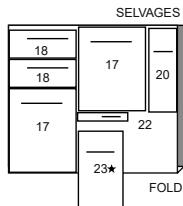

INTERFACING 2E

USE PIECES 21 24

20" (51CM)

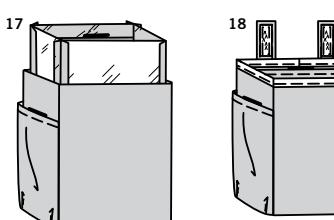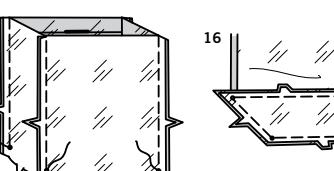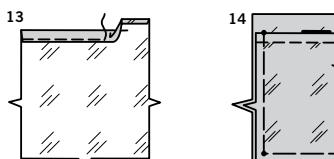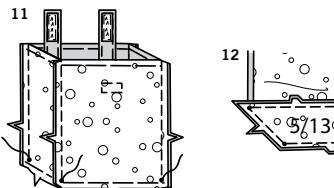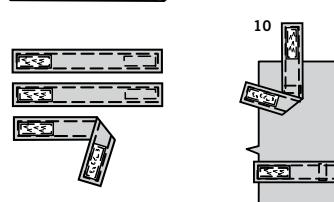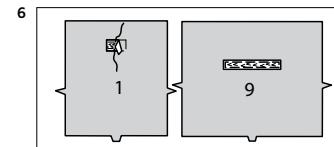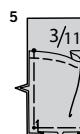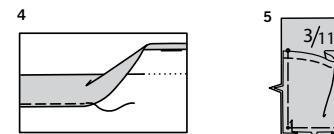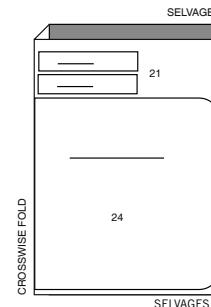

4. To finish upper raw edge of pocket turn under 1/4" (6mm) on raw edge. Press. Turn upper edge of pocket to INSIDE along fold line. Press. Stitch close to inner pressed edge.

5. On outside, pin WRONG side of pocket to RIGHT side of side (3 OR 11) matching small and large dots, having raw edges even. Baste raw edges together.

FRONT AND BACK

6. **VIEW B, D** - Cut a piece of hook and loop tape the measurement of solid lines on front. Separate tape. Pin hook (rough) half of tape to one front and back (1 OR 9) sections, centering edges along solid lines. Stitch along outer edge of tape.

NOTE: Remaining half of tape will be used for flap.
NOTE: This will be the front.

VIEWS A, B, C, D

7. Construct three back straps as follows: Fold strap (2 OR 10) in half lengthwise. Press. Stitch outer edge in a 1/2" (1.3cm) seam, leaving an opening for turning.

8. Turn strap RIGHT side out. Press. **TOPSTITCH** outer edges of strap.

9. Cut three pieces of hook and loop tape the measurement of solid lines. Separate tape. Pin loop (soft) half of tape to OUTSIDE of strap, centering edges along solid lines. Stitch along outer edge of tape. Stitch hook (rough) half of tape to INSIDE of strap, in same manner.

10. With rough half of tape facing up, pin straps to one front and back section, matching solid lines. Stitch along solid lines, as shown.

NOTE: This will be the back.

11. With RIGHT sides together, pin front and back sections to sides, matching notches. Stitch seams, ending at lower small dots.

12. Pin bottom (5 OR 13) section to lower edge of basket/bag matching notches and small dots. Stitch.

LINING

13. Fold upper edge of one front and back LINING section to INSIDE, along fold line. Press under 1/4" (6mm) on raw edge. Stitch close to inner pressed edge, forming facing.

14. On OUTSIDE, pin WRONG side of one pocket to RIGHT side of one front and back lining section.

NOTE: This will be the back lining.

15. With RIGHT sides together, pin front and back lining sections to sides, matching notches. Stitch seams, ending at lower small dots.

16. Pin bottom lining section to lower edge of basket/bag matching notches and small dots. Stitch.

17. With WRONG sides together, insert lining into basket/bag having upper raw edges even.

18. Encase upper edge of basket/bag using double fold bias tape, keeping pocket free. **SEE GENERAL DIRECTIONS FOR BIAS TAPE.**

Sewing Directions




FABRIC KEY
 RIGHT SIDE WRONG SIDE INTERFACING LINING^{RIGHT SIDE} LINING^{WRONG SIDE}

Sewing methods in **BOLD TYPE** have Sewing Tutorial Video available. Scan QR CODE to watch videos:

EDGESEWTH - see how to edgestitch video.

TOPSTITCH - see how to topstitch video.

SLIPSTITCH - see how to slipstitch video.

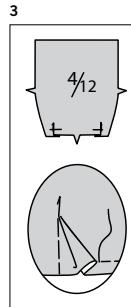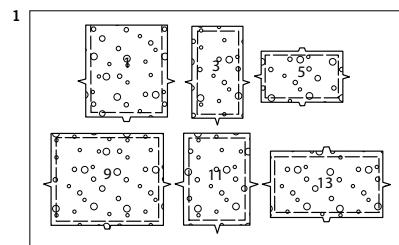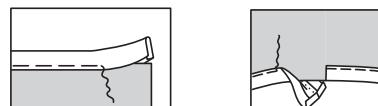

GENERAL DIRECTIONS FOR BIAS TAPE

A. To finish raw edge of basket/bag, slip the upper edge between the folds of the bias tape placing the raw edge against the center crease and the wider folded edge of the tape on the INSIDE of the bag. Stitch the tape in place from the OUTSIDE, being sure to catch in the folded edge on the INSIDE.

B. ENDS:

When binding completely encloses an edge, arrange to have ends meet at one edge; then turn both ends under where they meet and tack together invisibly after stitching on binding.

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.

STITCH 1/2" (1.3CM) SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.

BASKET A, C, BAG B, D

NOTE: Illustrated for View A, unless otherwise indicated.

INTERFACING

1. Apply headliner INTERFACING 1 to wrong side of each matching FABRIC section. Baste raw edges together.

2. Fuse INTERFACING 2 to wrong side of each matching FABRIC section, following manufacturer's instructions.

SIDES

3. To make pleats in pocket (4 or 12) sections, on OUTSIDE, fold along solid lines. Bring folds to broken lines; pin. Baste across raw edge.

4

5

6

7

8

9

10

11

12

13

14

15


16

17

18

S9804

3 of 4

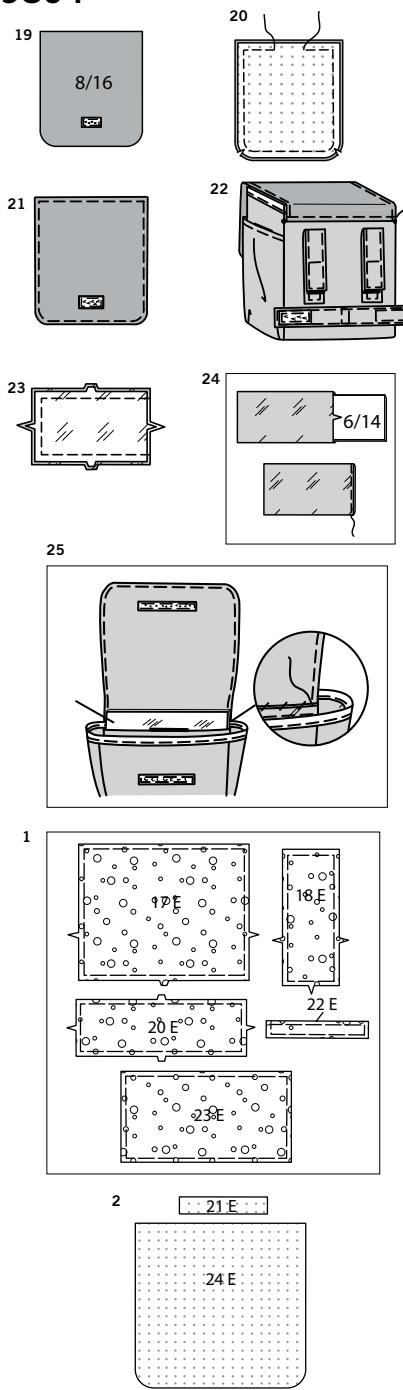

FLAP B, D

19. On OUTSIDE, pin remaining loop (soft) half of tape to uninterfaced flap (8 OR 16) section, centering edges along solid lines. Stitch along outer edges of tape, as shown.

20. With RIGHT sides together, stitch flap sections together along outer edge leaving an opening large enough for turning. Trim seam, clip curves.

21. Turn flap RIGHT side out. Press. **TOPSTITCH** outer edges of flap.

22. On OUTSIDE, pin flap to upper edge of back matching small dots. **TOPSTITCH** flap in place. Stitch again over first stitching to reinforce if you prefer.

FINISHING

23. Construct bottom insert as follows:
With RIGHT sides together, stitch remaining bottom lining sections together, leaving one short end open.

24. Turn bottom RIGHT side out. Press, pressing under 1/2"(1.3cm) seam allowance on raw edges.
Cut a piece of cardboard the size of guide (6 OR 14).
Insert cardboard into bottom. **TOPSTITCH** opening edges closed.








25. For back insert, cut a piece of cardboard the size of guide (7 OR 15).
Insert cardboard into back pocket. **SLIPSTITCH** opening closed.
NOTE: Pocket can be left open if you prefer.

PANNIERS E

INTERFACING

1. Apply headliner INTERFACING 1 to wrong side of each matching FABRIC section. Baste raw edges together.

2. Fuse INTERFACING 2 to wrong side of each matching FABRIC section, following manufacturer's instructions.

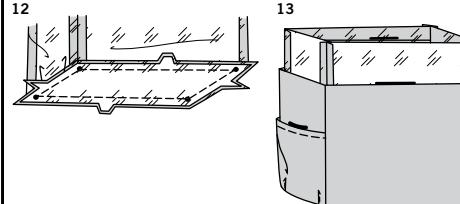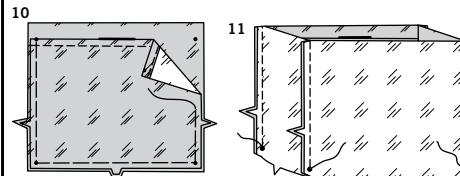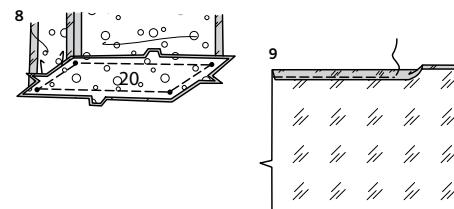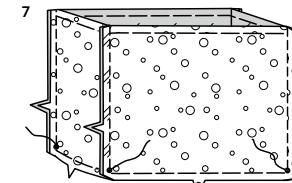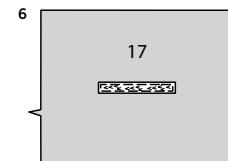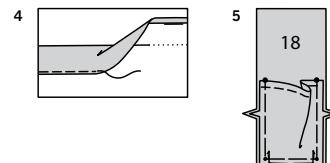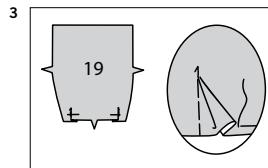

SIDES

3. Construct two bags as follows:
To make pleats in pocket (19) sections, on OUTSIDE, fold along solid lines. Bring folds to broken lines; pin. Baste across raw edge.

4. To finish upper raw edge of pocket turn under 1/4" (6mm) on raw edge. Press.
Turn upper edge of pocket to INSIDE along fold line. Press.
Stitch close to inner pressed edge.

5. On outside, pin WRONG side of pocket to RIGHT side of side (18) matching small and large dots, having raw edges even.
Baste raw edges together.

FRONT AND BACK

6. Cut two pieces of hook and loop tape the measurement of solid lines on front.
Separate tape. Pin hook (rough) half of tape to two front and back (17) sections, centering edges along solid lines. Stitch along outer edge of tape.
NOTE: Remaining half of tape will be used for flaps.

7. With RIGHT sides together, pin front and back sections to sides, matching notches. Stitch seams, ending at lower small dots.

8. Pin bottom (20) to lower edge of basket/bag matching notches and small dots. Stitch.

LINING













9. Fold upper edge of one front and back lining section to INSIDE, along fold line. Press under 1/4"(6mm) on raw edge. Stitch close to inner pressed edge, forming pocket facing.

10. For each basket/bag, pin WRONG side of one pocket to RIGHT side of one front and back section.
NOTE: These will be the back linings.

11. With RIGHT sides together, pin front and back lining sections to sides, matching notches. Stitch seams, ending at lower small dots.

12. Pin bottom lining section to lower edge of bag matching notches and small dots. Stitch.

13. With WRONG sides together, insert lining into bag having upper raw edges even.

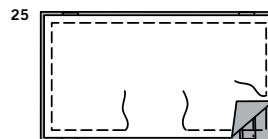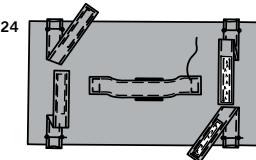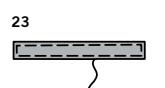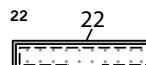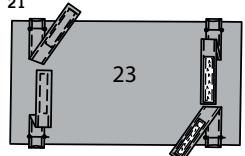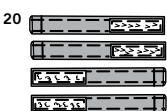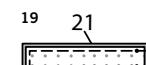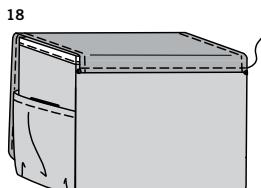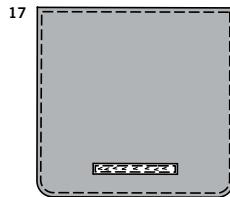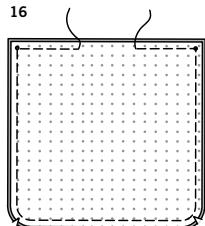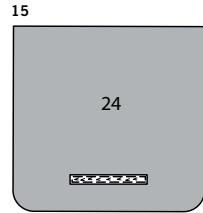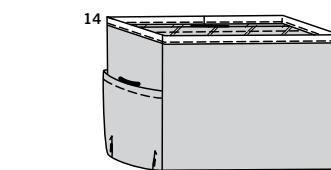

14. Encase upper edge of basket/bag using double fold bias tape, keeping pocket free. **SEE GENERAL DIRECTIONS FOR BIAS TAPE.**

FLAPS AND TOP

15. Construct two flaps as follows:
On OUTSIDE, pin remaining loop (soft) half of tape to uninterfaced flap (24) section, centering edges along solid lines. Stitch along outer edges of tape, as shown.

16. With RIGHT sides together, stitch flap sections together along outer edge, leaving an opening large enough for turning. Trim seam, clip curves.

17. Turn flap RIGHT side out. Press. **TOPSTITCH** outer edges of flap.

18. On OUTSIDE, pin flap to upper edge of each back matching small dots. Stitch flaps in place in 1/4"(6mm) seam.

19. With RIGHT sides together, stitch strap (21) sections together in a 1/4"(6mm) seam, leaving edge with small dots open.

20. Turn strap RIGHT side out. Press. **TOPSTITCH** outer edges of strap.

Baste raw edges together.
Cut four pieces of hook and loop tape the measurement of solid lines on front.
Separate tape. Pin hook (rough) half of tape to two straps, centering edges along solid lines. Stitch along outer edge of tape.
Pin remaining loop (soft) half of tape to remaining straps in same manner.



21. On OUTSIDE pin hook half of straps to interfaced top (23) section, with tape facing up, matching small dots. Pin loop half of straps to top having tape facing down. Baste straps in place.

22. With RIGHT sides together, stitch handle (22) sections together in a 1/4"(6mm) seam, leaving an opening large enough for turning.




23. Turn handle RIGHT side out. Press. **TOPSTITCH** handle.

24. On OUTSIDE, pin handle to top having finished edges along solid lines. **EDGESEW** handle and stitch along broken lines, as shown.

25. With RIGHT sides together, stitch top sections together, leaving an opening large enough for turning.

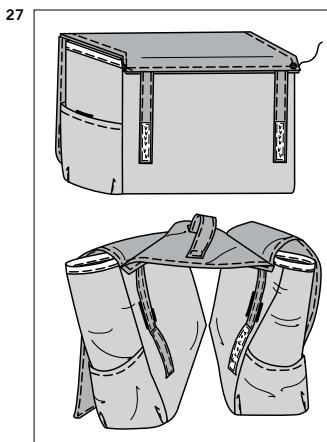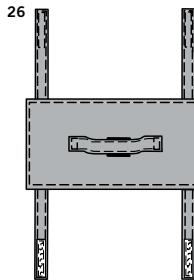

26. Turn top section RIGHT side out. Press. **TOPSTITCH** outer edges.

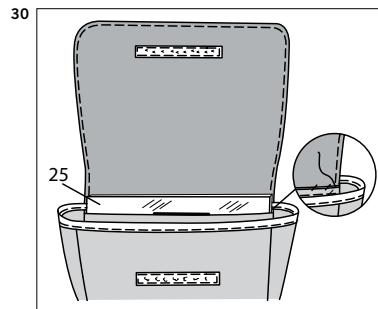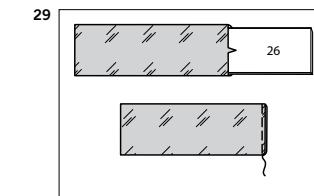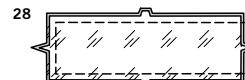

27. With RIGHT sides together, pin top to each flap matching small dots. Stitch top to flaps in a 1/4"(6mm) seam, as shown, keeping straps free on underside.
Stitch again over first stitching to reinforce, if you prefer.

FINISHING

28. Construct two bottom inserts as follows:
With RIGHT sides together, stitch remaining bottom lining sections together, leaving one short end open.

29. Turn bottom RIGHT side out. Press, pressing under 1/2"(1.3cm) seam allowance on raw edges.
Cut a piece of cardboard the size of guide (26).
Insert cardboard into bottom. **TOPSTITCH** opening edges closed.

30. For back insert, cut a piece of cardboard the size of guide (25).
Insert cardboard into back pocket. **SLIPSTITCH** opening closed.
NOTE: Pocket can be left open if you prefer.



Congrats!

You've completed your sewing adventure

SHARE YOUR LOOK



Post your pattern and tag us
@simplicity_creative_group and **#simplicitypatterns**
for a chance to be featured on our social media.

Look for more PDF patterns at **simplicity.com**

Have a question or need help with your sewing project call us at
1-888-588-2700

Simplicity
by design group

Simplicity ©2023 a division of IG Design Group Americas Inc. • Atlanta, GA 30342 USA www.thedesigngroup.com • All Rights Reserved. www.simplicity.com • Made in the U.S.A. Fabriqué aux États-Unis.

To be used for individual private home use only and not for commercial or manufacturing purposes. • A usage privé seulement et non à des fins commerciales ou de production en série. • Para uso privado solamente, no se puede utilizar con propósitos de comercialización o de producción en serie.