# Simplicity<sup>®</sup>.com

## S9948

# **Simplicity**

#### easy-to-sew









#### WOMEN'S KNIT DRESS WITH SLEEVE AND LENGTH VARIATIONS

Suggested Fabrics: Stretch Knits only such as: Interlock, ITY, Jersey, Poly/Spandex. See Pick-A-Knit® Rule.

Notions: A,B:	One	5/8"	(1.5cm)	button.
---------------	-----	------	---------	---------

Sizes	20W	22W	24W	26W	28W	30W	32W	34W	36W	38W
European	46	48	50	52	54	56	58	60	62	64

#### **BODY MEASUREMENTS: Select pattern size based on body measurements**

Bust	42	44	46	48	50	52	54	56	58	60 Ins.
Waist	35	37	39	41½	44	461/2	49	51½	53	54½ "
Hip-9" below waist	44	46	48	50	52	54	56	58	60	62 "
Back-neck to waist	171/4	17%	171/2	17%	17¾	17%	18	181/8	181/4	18% "

Dress A	60"*	21/4	2%	2%	2%	2%	3	3	3	31/8	3% Yds.
Dress B	60"*	3%	3%	3%	31/2	31/2	3%	3¾	3¾	3%	3% Yds.

#### FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)

A,B Bust 45 47 49 51 53 55 57 59 61 63 Ins. A.B Waist 44½ 46½ 48½ 50½ 52½ 54½ 56½ 58½ 60½ 62½ " A,B Hip 53 55 57 59 61 63 65 67 69 71 " Width, lower edge

Dress A

71¼ 73¼ 75¼ 77¼ 79¼ 81¼ 83¼ 85¼ 87¼ 89¼Ins. Finished back length from base of neck

Dress A 41¾ 42 42¼ 42½ 42¾ 43 43¼ 43½ 43¾ 44 Ins. Dress B 55% 56 56% 56% 56% 57 57% 57% 57% 58

\*with nap \*\*without nap

#### **Facile**

#### ROBE EN TRICOT AVEC VARIATIONS DE MANCHE ET DE LONGUEUR POUR FEMMES

Tissus Conseillés: Tricots extensibles seulement tels que: Interlock, Tricots interlock en fil retors, Jersey, Polyester/Élasthanne. Reportez-vous à la règle Pick-A-Knit®.

Mercerie: A,B: 1 bouton de 1.5cm.

Easy

<b>Tailles</b>	20W	22W	24W	26W	28W	30W	32W	34W	36W	38W
Françaises	48	50	52	54	56	58	60	62	64	66
Europèen	46	48	50	52	54	56	58	60	62	64

MESURES DU CORPS: Choisissez la taille du patron basée sur les mesures du corps Poitrine 107 112 117 122 127 132 137 142 147 152 cm 89 94 99 105 112 118 124 130 134 138 "

Hanches (23cm au-dessous de la taille)

		112	117	122	127	132	137	142	147	152	157	cm
Dos du co	ou à la taille	44	44	44.5	45	45	45.5	46	46	46.5	47	ш
Robe A	150cm*	2.1	2.2	2.2	2.3	2.4	2.7	2.7	2.7	2.9	3.0	m
Rohe B	150cm*	3.0	3 1	3 1	3 2	3 2	3 3	3 3	3 4	3 5	3.5	m

#### MESURES DES VÉTEMENTS FINI (Motif et aisance de port compris)

A,B Poitrine	114	119	124	130	135	140	145	150	155	160 m
A,B Taille	113	118	123	128	133	138	144	149	154	159 "
A,B Hanches	135	140	145	150	155	160	165	170	175	180 "
Largeur à l'ourlet										

Robe A 181 186 191 196 201 206 211 217 222 227 m Longueur finie – dos, votre nuque à l'ourlet

Robe A 106 107 107 108 109 109 110 110 111 112 m Robe B 142 142 143 144 144 145 145 146 147 147 "

\*avec sens \*\*sans sens

Use the 1 inch (2.54cm) box to ensure you are using rule at 100%

Utilisez la boîte de 2.54 cm pour vous assurer d'utiliser la règle à 100%.

Utilizar un cuadrado de 2.54 cm para asegurarse de estar usando la regla al 100%.

#### PICK-A-KNIT® RULE

FOR THIS PATTERN - 4" (10 cm) OF KNIT FABRIC MUST STRETCH CROSSWISE FROM HERE POUR CE PATRON - LE JERSEY DOIT S'ETIRER DANS LA LAGEUR DE 4" (10 cm) DEPUIS ICI PARA ESTE PATRON - LAS MALLAS DEBEN ESTIRARSE A LO ANCHO POR 4" (10 cm) DESDE AQUI




TO HERE 50% JUSQUE LA 50% HASTA ALLA 50%




When using the Pick-A-Knit® rule to measure your fabrics stretch capacity, rule must be viewed or printed at 100%. Quand vous utilisez la règle Pick-A-Knit® pour mesurer la capacité d'élasticité des tissus, la règle doit être visible ou imprimée à 100%. Al utilisar la regla Pick-A-Knit® para medir la capacidad de elasticidad de las telas, la regla debe estar visible o impresa al 100%.





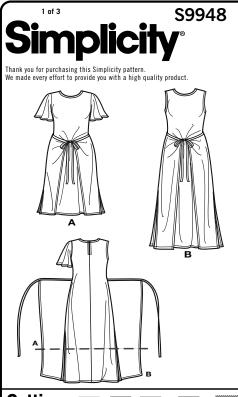

7 PIECES

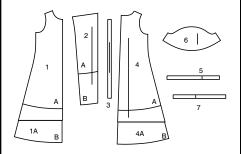

- 1 Front-A,B
- 1A Extension-B
- 2 Front Overlay-A,B
- 3 Upper Binding-A,B 4 Back-A,B
- 4A Extension-B
- 5 Neck Binding-A,B
- 6 Sleeve-A
- 7 Armhole Binding-B

www.simplicity.com



1-888-588-2700

### **General Directions**

#### The Pattern

#### SYMBOLS GRAIN LINE Place on straight grain of fabric parallel to selvage

PLACE SOLID LINE on fold of fabric



DOTS CUTTING LINE

SIZE PATTERNS.

SEAM ALLOWANCE: 5/8" (1.5cm) unless otherwise stated is included but not printed on MULTI-SIZE PATTERNS. Mark your size with colored felt tip pen. See chart on tissue for how to use MULTI-

LENGTHEN OR

SHORTEN LINES

#### ADJUST IF NEEDED Make adjustments before placing pattern on fabric.

TO LENGTHEN: Cut pattern between lengthen or shorten lines

Spread pattern evenly, the amount needed and tape to paper.

TO SHORTEN: At lengthen or shorten lines, make an even pleat taking up amount needed. Tape in place.

When lengthen or shorten lines are not given, make adjustments at lower edge of pattern.

#### Sewing

- · SEW garment following Sewing Directions.
- · PIN or machine-baste seams matching notches.
- STITCH 5/8" (1.5 cm) seams unless otherwise stated.
- · PRESS seams open unless otherwise indicated clipping when necessary so seams will lie flat.
- TRIM seams to reduce bulk, as shown below.



Trim enclosed

seams into lavers





curves

FOLLOWING INSTRUCTIONS ON TISSUE PATTERN



#### BEFORE CUTTING:

Cutting/Marking

PRESS pattern pieces with a warm dry iron. PRE-SHRINK fabric by pre-washing washables or steam-pressing nonwashahles

CIRCLE your cutting layout.

PIN pattern to fabric as shown in Cutting Layouts.

- FOR DOUBLE THICKNESS: Fold fabric with RIGHT sides together.
- FOR SINGLE THICKNESS: Place fabric RIGHT side up
- FOR PILE, SHADED OR ONE WAY DFSIGN FABRICS: Use "with nap" lavouts


#### AFTER CUTTING:

Transfer markings to WRONG side of fabric before removing pattern. Use pin and chalk method or dressmaker's tracing paper and wheel.

#### To Quick Mark:

- Snip edge of fabric to mark notches, ends of fold lines and center lines.
- Pin mark dots



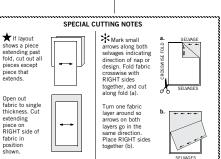

## **Cutting** Layouts












POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE


#### VIEW A

USE PIECES 1 2 3 4 5 6

60" (150CM) SIZES 20W 22W 24W 26W 28W

60" (150CM) WITH NAP SIZES 30W 32W 34W 36W 38W

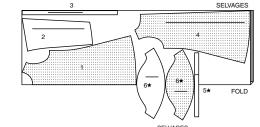

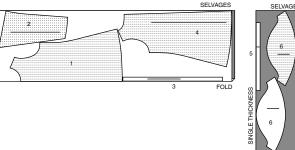


curves

NOTE: BEFORE CUTTING FABRIC JOIN PIECE IN PARENTHESIS TO CORRESPONDING PIECE

#### VIEW B

USE PIECES 1 (1A) 2 3 4 (4A) 5 7

60" (150CM) WITH NAP ALL SIZES

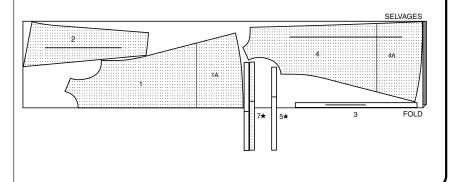

S9948

2 of 3

SEWING TUTORIALS



Build your skills viewing short, easy-to-follow videos at simplicity.com/sewingtutorials

# SIMPLY THE BEST SEWING TECHNIQUES FOR KNITS

- . Use a ball point or stretch needle.
- . Use narrow zig-zag stitch or a stretch stitch.
- To prevent shoulder seams from stretching, pin center of hem tape, clear elastic or twill tape along seam line on front shoulder edges, then stitch the shoulder seams.

# **Sewing Directions**

FABRIC KEY RIGHT SIDE WRONG SIDE INTERFACING INTERFACI

Read General Directions on page 1 before you begin.

**EDGESTITCH** – See Machine Stitches: "how to sew an edgestitch" video.

NARROW HEM - See Hems: "sewing narrow hems" video.

#### FOR OVERLOCK/SERGER


- The Overlock/Serger can be used alone or as a supplement to your conventional sewing machine.
- Overlock sewing machines stitch, trim and finish all in one operation. Therefore, it is VERY important to Check Fit before stitching seams.
- Using matching color thread, baste seams and try garment on. If no adjustments are needed, overlock seams along basting.
- The three thread overlock is ideal for major seams such as shoulder, side, underarm and sleeve seams.
- For stress areas such as crotch seams and armholes, the four thread overlock/safety stitch is best...OR, use a three thread overlock, and stitch along seam with a conventional machine to reinforce.
- The two or three thread overlock stitch is a perfect finish for edges of facings, hems and seam allowances.

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.

STITCH 5/8" (1.5CM) SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.

#### DRESS A, B


- NARROW HEM long, unnotched edge and lower edge of FRONT OVERLAY (2) sections. To form a narrow hem, press under 5/8" (1.5cm) hem allowance. Tuck under raw edge to meet crease. Press. EDGESTITCH hem in place along inner edge.
- Pin RIGHT side of the UPPER BINDING (3) to the WRONG side of front overlay along upper edge with raw edges even, matching large dots. Stitch in a 3/8" (1cm) seam from side edge to large dot, back-stitching at dot to reinforce the seam.
- Press seam toward binding, pressing binding out.On OUTSIDE, attach a small safety pin to free end of binding, outside the seam allowance and off center.

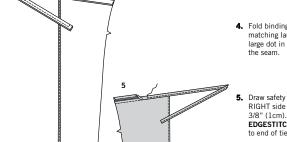


4. Fold binding in half, lengthwise, with RIGHT sides together, matching large dots and sandwiching the pin. Stitch free end to large dot in a 3/8" (1cm) seam, backstitching at dot to reinforce the seam.


5. Draw safety pin forward, through fold, turning tie end of binding RIGHT side out. Press, pressing under remaining raw edge 3/8" (1cm). On OUTSIDE, pin pressed edge of binding over seam. EDGESTITCH inner edge of binding in place, continuing stitching to end of tie.


6. NARROW HEM lower edge of FRONT (1).





7. Pin WRONG side of front overlay to the RIGHT side of front, matching small dots, large dots, and notches. Baste side edges together

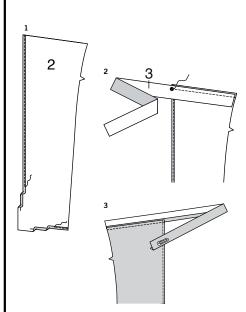

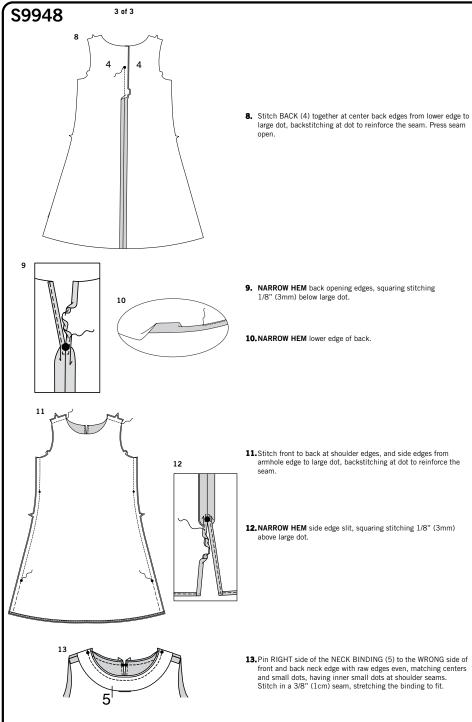








15. Fold ends of binding in half, lengthwise, with RIGHT sides together, sandwiching the thread ends of loop. Stitch binding ends to small dot in a 5/8" (1.5cm) seam.




16. Turn ends of binding RIGHT side out. Press, pressing under remaining raw edge 3/8" (1cm). On OUTSIDE, pin pressed edge of binding over seam. EDGESTITCH inner edge of binding in place.

Sew button to RIGHT back opposite loop when dress is finished.






17. Stitch underarm edges of SLEEVE (6).
NARROW HEM lower edge.

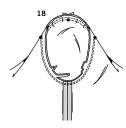


18. Turn sleeve RIGHT side out. Hold dress WRONG side out with armhole toward you. With RIGHT sides together, jon sleeve to armhole edge with center small dot at shoulder seam, matching underarm seams, notches and remaining small dots. Baste. Stitch. Stitch again 1/8" (3mm) from first stitching. Trim seam below notches close to stitching. Press seam toward sleeve.

#### ARMHOLE BINDING B



19. Stitch ends of ARMHOLE BINDING (7) together.

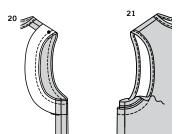

- 20. Trim 1/4" (6mm) from armhole edge. Pin RIGHT side of the armhole binding to the WRONG side of front and back armhole edge with raw edges even, matching seams, placing inner small dot at shoulder seam. Stitch in a 3/8" (1cm) seam, stretching the binding to fit.
- 21. Press seam toward binding, pressing binding out.
  Turn under remaining raw edge 3/8" (1cm). On OUTSIDE, pin
  pressed edge of binding over seam.
  EDGESTITCH inner edge of binding in place.



# SHARE LOOK









Post your pattern and tag us @simplicity\_creative\_group and #simplicitypatterns for a chance to be featured on our social media.

Look for more PDF patterns at **simplicity.com** 

Have a question or need help with your sewing project call us at 1-888-588-2700

