Simplicity[®].com

S9962

Simplicity[®]

easy-to-sew











CHILDREN'S DRESS, TOP AND SHORTS

Suggested Fabrics: Challis, Chambray, Double Gauze, Soft Cottons, Voile.

Notions: A,B,C: ¾ yd. (0.7m) of ¾" (2cm) elastic. Also for A,B: 1¼ yds. (1.2m) of ½" (1.3cm) elastic.

Sizes		3	4	5	6	7	8					
BODY MEASUREMENTS: Select pattern size based on body measurements												
Chest		22	23	24	25	26	27	Ins.				
Waist		201/2	21	21½	22	23	231/2	ш				
Hip		_	24	25	26	27	28					
Back-neck to waist		9	91/2	10	101/2	11½	12	ш				
Approx. Height		38	41	44	47	50	52	"				
Dress A	45"*	11/2	1%	1%	13/4	13/4	1%	Yds.				
	60"*	1%	1%	1%	1%	1%	1½	ш				
Тор В	45"*	11/4	11/4	1%	1%	1%	1½	Yds.				
	60"*	7∕8	1	1	1	1%	11/8	ш				
Shorts C	45"*	5/8	5/8	%	1	1	1	Yd.				
	60"*	5/8	5/8	5/8	5/8	3/4	3/4	п				
FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)												
C Hip		27	27	28	29	30	31	Ins.				
Width, low	er edge											
Dress A		80	81	82	83	84	85	Ins.				
Top B		48	49	50	51	52	53	п				
Width, eac	h leg											
Pants C		151/4	16	16¾	171/2	181/4	19	Ins.				
Finished b	ack length	from bas	e of neck	í.								
Dress A		19½	21	221/2	24	251/2	27	Ins.				
Top B		141/2	16	171/2	19	201/2	22	ш				
Finished side length from waist												
Shorts C		12	13	14	15	16	17	Ins.				


*with nap **without nap

Facile ROBE, HAUT ET SHORT POUR ENFANTS

Tissus Conseillés: Challis, Chambray, Gaze double, Cotons souple, Voile.

Mercerie: A,B,C: 0.7 m d'élastique de 2cm. Aussi pour A,B: 1.2 m d'élastique de 1.3 cm.

Tailles		3	4	5	6	7	8	
MESURES	DU CORPS: C	hoisissez	la taille d	u patron b	asée sur	les mesu	res du co	rps
Poitrine		56	58	61	64	66	69	cm
Taille		52	53	55	56	58	60	
Hanches		_	61	64	66	69	71	
Dos du cou à la taille		23	24	25.5	27	29.5	31	
Taille approx.		97	104	112	119	127	132	
Robe A	115cm*	1.4	1.5	1.5	1.5	1.6	1.7	m
	150cm*	1.1	1.3	1.3	1.3	1.3	1.4	
Haut B	115cm*	1.1	1.1	1.3	1.3	1.3	1.4	m
	150cm*	8.0	0.8	0.9	0.9	1.0	1.0	"
Short C	115cm*	0.6	0.6	0.8	8.0	0.9	0.9	m
	150cm*	0.6	0.6	0.6	0.6	0.6	0.7	

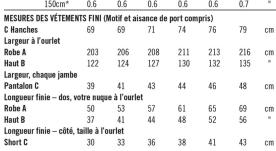




Easy





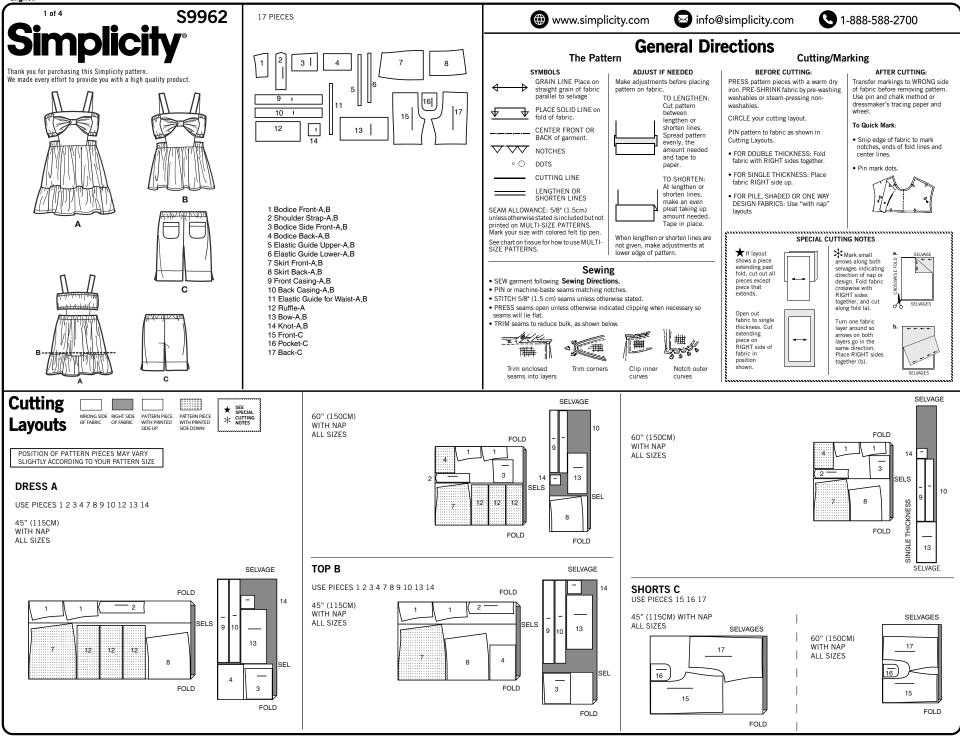

S9962

2 of 4

SEWING TUTORIALS

SCAN ME

Build your skills viewing short, easy-to-follow videos at

simplicity.com/sewingtutorials

Sewing Directions

FABRIC

RIGHT SIDE WRONG SIDE INTERFACING MINING MI

Read General Directions on page 1 before you begin.

Sewing methods in **BOLD TYPE** have Sewing Tutorial Video available. Scan QR CODE to watch videos:

EASE/GATHER - See Gathering: "sewing two row gathers" video.

NARROW HEM - See Hems: "sewing narrow hems" video. SLIPSTITCH - See "how to slipstitch" video

UNDERSTITCH - See Machine Stitches: "how to understitch" video.

PATTERN PIECES WILL BE IDENTIFIED BY NUMBERS THE FIRST TIME THEY ARE USED.

STITCH SEAMS WITH RIGHT SIDES TOGETHER UNLESS OTHERWISE STATED.

NOTE: Under each sub-heading, the first view will be illustrated, unless otherwise illustrated.


DRESS A, TOP B

SHOULDER STRAPS AND BODICE FRONT

- **1.** Fold SHOULDER STRAP (2) on foldline, with RIGHT sides together. Stitch long edges in 3/8"(1cm) seam.
- 2. Turn strap RIGHT side out; press. Baste raw edges.
- 3. On OUTSIDE, baste front edge of straps to one BODICE FRONT (1) section, matching small and large dots, having raw edges even. (Remaining bodice front section will be used as facing.)
- **4.** With right sides together, pin bodice front FACING (1) to bodice front, matching centers and dots. Stitch upper edge; trim seam. **UNDERSTITCH** facing.
- 5. Turn facing to inside, turning straps out; press.

BODICE BACK AND SIDE FRONT


- **6.** With RIGHT sides together, pin each BODICE SIDE FRONT (3) to BODICE BACK (4) at sides; stitch.
- 7. To keep elastic from getting stuck in the seam allowances as it's inserted, use machine-basting to anchor them to bodice within the casing area. Be sure to remove basting after casing is finished.
- Press 7/8"(2.2cm) on upper and lower edge of bodice side front and back to INSIDE, forming casing. Press under 1/4"(6mm) on raw edge. Stitch close to pressed edge of casing.







10

11

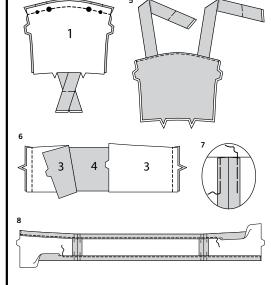

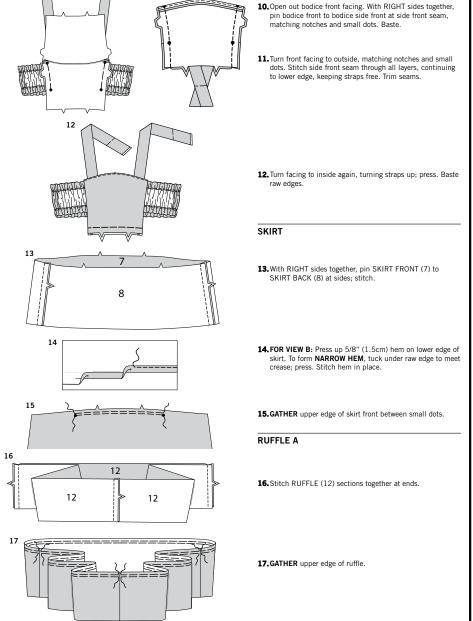



3 of 4

- 18. Press up 5/8" (1.5cm) hem on lower edge of ruffle. To form NARROW HEM, tuck under raw edge to meet crease; press. Stitch hem in place.
- 19. With RIGHT sides together, pin ruffle to lower edge of skirt, placing one seam at center back and remaining seams at small dots on front. Adjust gathers; baste. Stitch. Stitch again 1/4"(6mm) away in seam allowance. Trim close to second stitching. Turn seam up, turning ruffle down.


20. FOR VIEWS A, B: With RIGHT sides together, pin bodice front to skirt front, matching notches, centers and small dots. Adjust gathers; baste.


CASING AND ELASTIC


- 21. Pin FRONT CASING (9) to BACK CASING (10) at ends, RIGHT sides together, matching notches. Stitch.
- 22. Fold casing on foldline, with WRONG sides together, matching notches, centers and seams, having raw edges even. Baste raw edges together.
- 23. With RIGHT sides together, pin casing to skirt (over bodice front), matching centers, seams and dots. Stitch along seam line, leaving open between small dots. Stitch again 1/4"(6mm) from first stitching within seam allowance.


- 24. Press seams toward skirt, pressing casing up.
- 25. Cut 3/4"(2cm) wide elastic using ELASTIC GUIDE FOR WAIST (11).


Insert elastic through front opening in casing, having ends of elastic extending 5/8"(1.5cm) beyond dots on front casing, as shown. Pin ends of elastic in place.


















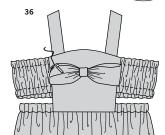

- 26. On outside, stitch front casing along stitching lines, through all layers, catching ends of elastic.
- 27.On inside, stitch front opening edges of casing and skirt closed, connecting with previous casing stitching. Hand-sew bodice front to upper edge of front casing. TIP- To secure elastic so it won't twist in wearing, stitch through all thicknesses of casing in the groove of each seam.

FINISHING

SHOULDER STRAPS

- 28. Pin straps to upper edge of bodice back, matching small and large dots, having solid line along casing stitching. TIP- You will notice that the straps have an extra allowance at the back edge. This is for adjustment. Try on garment and adjust the length of straps so that they fit comfortably.
- 29. On outside, stitch strap along casing stitching, stretching elastic while stitching, being careful not to catch elastic.
- 30. If necessary, trim raw edge of straps 1"(2.5cm) below stitching.

BOW

- 31. Fold BOW (13) in half, lengthwise, with RIGHT sides together, matching notches. Stitch notched edge: trim seam.
- 32. Turn bow RIGHT side out; press. Bring ends to UNDERSIDE, having ends extend 5/8"(1.5cm) beyond center. Stitch along center line.
- 33. Fold KNOT (14) in half, lengthwise, with RIGHT sides together, matching notches. Stitch notched edge: trim seam.
- 34. Turn knot right side out, bringing seam to center on UNDERSIDE; press.
- 35. Crush bow at center and place knot around center of bow, turning under and lapping one end on UNDERSIDE. SLIPSTITCH ends securely catching in UNDERSIDE of bow.
- 36. Hand-sew knot securely to bodice front, centering over placement line. Tack ends of bow to bodice front, as shown.

:===<u>=</u>

English S9962

4 of 4

15

FRONT AND BACK


PANTS C

- 1. Press under 1/4"(6mm) on upper edge of Pocket (16).
 Turn upper edge to OUTSIDE along foldline, forming facing.
- Stitch along seam line on raw edges. To ease curved edge of pocket, stitch 1/4"(6mm) INSIDE the seam line, using a long machine-stitch. Trim seam allowance in the facing area to 1/4"(6mm).
- 3. Turn corners RIGHT side out, turning facing to the WRONG side; press, pressing under raw edges along stitching. Pull up ease stitches to shape the curve. To eliminate bulk, notch out the fullness in the seam allowance along the curves as far as the ease stitches. Stitch facing close to inner edge.
- **4.** On outside, pin pocket to each Front (15), matching dots. Stitch close to sides and lower edge.




6. Stitch center seam, matching inside leg seams. To reinforce curve, stitch again 3/8"(1cm) from raw edge along curves. Cut seam allowances close to second stitching. Press seam allowances open above notches.

With right sides together, pin back to front at sides, matching large dots. Stitch, leaving open between large dots, as shown.




CASING AND ELASTIC

8. To keep elastic from getting stuck in the seam allowances as it's inserted, use machine-basting to anchor them to pants within the casing area. Be sure to remove basting after casing is finished.




9. Press 1-1/8"(2.9cm) on upper edge to INSIDE, forming casing. Press under 1/4"(6mm) on raw edge. Stitch close to lower edge of casing, leaving an opening to insert elastic.



13


14



10. Cut a piece of elastic to fit waist, plus 1"(2.5cm). Insert elastic through casing.

Overlap ends and hold with a safety pin. Try on pants and adjust to fit.

11. Stitch ends of elastic together securely.




12. Stitch opening closed. Distribute fullness evenly. Remove basting.

TIP-To secure elastic so it won't twist in wearing, stitch through all thicknesses of casing in the groove of each seam.




FINISHING LOWER EDGES

13. Turn lower edge of pants 2-1/4"(5.7cm) hem to outside, matching large dots. Stitch side opening edges, breaking stitching at large dots. Trim seams.

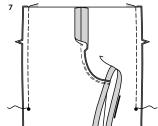

17

15 14. Turn lower edge to inside; turning up 2-1/4"(5.7cm) hem; press.
Baste close to fold.



15. Turn under 1/4"(6mm) on raw edge. Baste upper edge in place. Stitch hem in place along upper basting.



SHARE LOOK









Post your pattern and tag us @simplicity_creative_group and #simplicitypatterns for a chance to be featured on our social media.

Look for more PDF patterns at **simplicity.com**

Have a question or need help with your sewing project call us at 1-888-588-2700

