

S9926

Simplicity



Designed and printed in USA.

easy-to-sew

Easy

MISSES' AND WOMEN'S TOP AND PANTS

Suggested Fabrics: A,B: Charmeuse, Cotton Lawn, Crepe de Chine, Double Georgette, Silky Types. C: Chambray, Cotton Blends, Gabardine, Lightweight Wool Blends, Linen Blends, Stretch Wovens, Twill. **Interfacing C:** Lightweight Fusible.

Notions: A,B: One pkg. of ½" (1.3cm) single fold bias tape, one ¾" (1cm) button. C: One 7" (18cm) zipper (cut to fit), three ¾" (1.5cm) buttons.

Sizes	10	12	14	16	18	20W	22W	24W	26W	28W
European	36	38	40	42	44	46	48	50	52	54

BODY MEASUREMENTS: Select pattern size based on body measurements

Bust	32½	34	36	38	40	42	44	46	48	50	Ins.
Waist	25	26½	28	30	32	35	37	39	41½	44	"
Hip-9" below waist	34½	36	38	40	42	44	46	48	50	52	"
Back-neck to waist	16	16¼	16½	16¾	17	17¼	17½	17¾	17¾	17¾	"

Top A	60**	1½	1½	1½	1¾	1¾	2¼	2¼	2¼	2¼	2¼	Yds.
Top B	60**	1¾	1¾	2¼	2¼	2¼	2¼	2¼	2¼	2¼	2¼	Yds.
Pants C	45**	2¼	2¼	2¼	2¼	2¼	3¼	3¼	3¼	3¼	3¼	Yds.
	60**	1¾	2	2¼	2¼	2¼	2¼	2¼	2¼	2¼	2¼	"

Interfacing 20" - ¾ yd.

FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)

A,B Bust	39	40½	42½	44½	46½	47½	49½	51½	53½	55½	Ins.
C Waist	26½	28	30	32	34	36	38	40	42	44	"
C Hip	37	38½	40½	42½	44½	44½	46½	48½	50½	52½	"
Width, each leg											
Pants C	20	20½	21	21½	22	26	26½	27	27½	28	Ins.
Finished side length from waist											
Pants C	42	42¼	42½	42¾	43	42¾	43	43¼	43½	43¾	Ins.

*with nap **without nap

Facile

HAUT ET PANTALON POUR JEUNES FEMMES ET FEMMES

Tissus Conseillés: A,B: Charmeuse, Linon de coton, Crêpe de chine, Crepe georgette double, Tissus soyeux. C: Chambray, Cottonnades, Gabardine, Mélanges de laine légère, Lin mélangés, Tissus tissés extensibles, Twill. **Entoilage C:** Thermocollant léger.

Mercerie: A,B: 1 paquet de ruban de biais simple de 1.3cm, 1 bouton de 1cm. C: 1 fermeture à glissière de 18cm (coupée pour ajuster), 3 boutons de 1.5cm.

Tailles	10	12	14	16	18	20W	22W	24W	26W	28W
Françaises	38	40	42	44	46	48	50	52	54	56
Européen	36	38	40	42	44	46	48	50	52	54

MESURES DU CORPS: Choisissez la taille du patron basée sur les mesures du corps

Poitrine	83	87	92	97	102	107	112	117	122	127	cm
Taille	64	67	71	76	81	89	94	99	105	112	"
Hanches (23cm au-dessous de la taille)	88	92	97	102	107	112	117	122	127	132	cm
Dos du cou à la taille	40.5	41.5	42	42.5	43	44	44	44.5	45	45	"

Haut A	150cm*	1.3	1.4	1.4	1.5	1.6	1.8	1.9	2.1	2.1	2.2	m
Haut B	150cm*	1.6	1.7	1.9	2.1	2.1	2.3	2.4	2.4	2.5	2.5	m
Pantalon C	115cm*	2.3	2.3	2.3	2.4	2.4	3.0	3.0	3.0	3.0	3.0	m
	150cm*	1.7	1.7	1.9	2.1	2.1	2.1	2.2	2.4	2.4	2.4	"

Entoilage 51cm - 0.7m

MESURES DES VÊTEMENTS FINI (Motif et aisance de port compris)

A,B Poitrine	99	103	108	113	118	121	126	131	136	141	cm
C Taille	67	71	76	81	86	91	97	102	107	112	"
C Hanches	94	98	103	108	113	113	118	123	128	133	"
Largeur, chaque jambe											
Pantalon C	51	52	53	55	56	66	67	69	70	71	cm
Longueur finie – côté, taille à l'ourlet											
Pantalon C	107	107	108	109	109	109	109	110	110	111	cm


*avec sens **sans sens



A




B

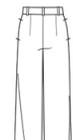


C

Simplicity® S9926

Thank you for purchasing this Simplicity pattern. We made every effort to provide you with a high quality product.

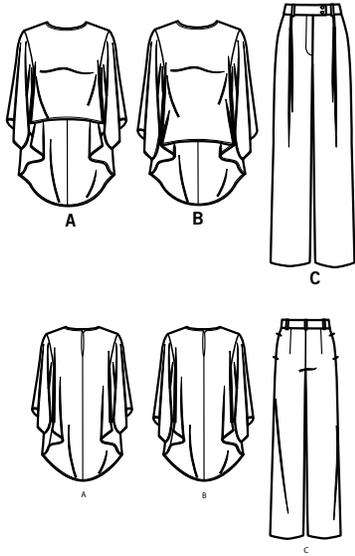

12 PIECES

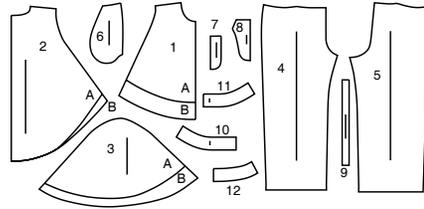

- 1 Front-A,B
- 2 Back-A,B
- 3 Sleeve-A,B
- 4 Front-C
- 5 Back-C
- 6 Pocket-C
- 7 Right Fly Facing-C
- 8 Left Fly-C
- 9 Carrier-C
- 10 Right Front Waistband-C
- 11 Left Front Waistband-C
- 12 Back Waistband-C

General Directions

The Pattern

- SYMBOLS**
- GRAIN LINE Place on straight grain of fabric parallel to selvage
 - PLACE SOLID LINE on fold of fabric.
 - CENTER FRONT OR BACK of garment.
 - NOTCHES
 - DOTS
 - CUTTING LINE
 - LENGTHEN OR SHORTEN LINES

SEAM ALLOWANCE: 5/8" (1.5cm) unless otherwise stated is included but not printed on MULTI-SIZE PATTERNS. Mark your size with colored felt tip pen. See chart on tissue for how to use MULTI-SIZE PATTERNS.

ADJUST IF NEEDED
Make adjustments before placing pattern on fabric.

TO LENGTHEN:
Cut pattern between lengthen or shorten lines. Spread pattern evenly, the amount needed and tape to paper.

TO SHORTEN:
At lengthen or shorten lines, make an even pleat taking up amount needed. Tape in place.

When lengthen or shorten lines are not given, make adjustments at lower edge of pattern.

Cutting/Marking

BEFORE CUTTING:
PRESS pattern pieces with a warm dry iron. PRE-SHRINK fabric by pre-washing washables or steam-pressing non-washables.

CIRCLE your cutting layout.
PIN pattern to fabric as shown in Cutting Layouts.

- FOR DOUBLE THICKNESS: Fold fabric with RIGHT sides together.
- FOR SINGLE THICKNESS: Place fabric RIGHT side up.
- FOR PILE, SHADED OR ONE WAY DESIGN FABRICS: Use "with nap" layouts

AFTER CUTTING:
Transfer markings to WRONG side of fabric before removing pattern. Use pin and chalk method or dressmaker's tracing paper and wheel.


To Quick Mark:

- Snip edge of fabric to mark notches, ends of fold lines and center lines.
- Pin mark dots.




Sewing

- SEW garment following Sewing Directions.
- PIN or machine-baste seams matching notches.
- STITCH 5/8" (1.5 cm) seams unless otherwise stated.
- PRESS seams open unless otherwise indicated clipping when necessary so seams will lie flat.
- TRIM seams to reduce bulk, as shown below.

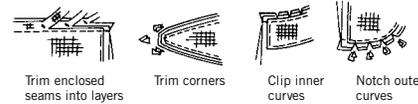


SPECIAL CUTTING NOTES


★ If layout shows a piece extending past fold, cut out all pieces except piece that extends.

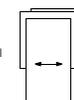


Open out fabric to single thickness. Cut extending piece on RIGHT side of fabric in position shown.

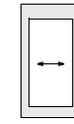


✳ Mark small arrows along both selvages indicating direction of nap or design. Fold fabric crosswise with RIGHT sides together, and cut along fold (a).

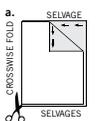

Turn one fabric layer around so arrows on both layers go in the same direction. Place RIGHT sides together (b).

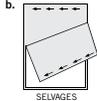

Cutting Layouts

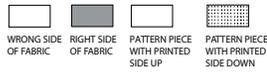


★ SEE SPECIAL CUTTING NOTES


POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE

TOP A

PIECES 1 2 3
60" (150CM) WITH NAP
SIZES 10 12 14 16 18


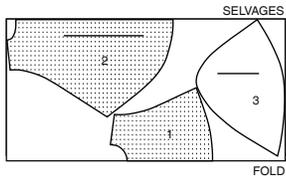


60" (150CM) WITH NAP
SIZES 20W 22W 24W 26W 28W

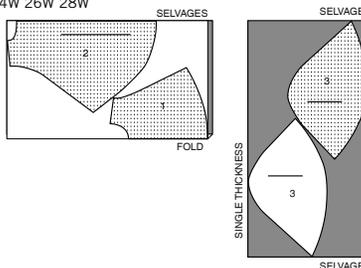


TOP B

PIECES 1 2 3
60" (150CM) WITH NAP
ALL SIZES

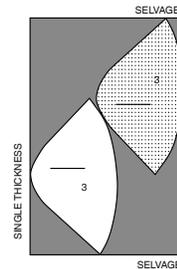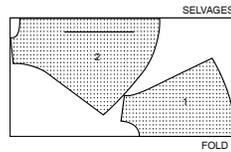


PANTS C


PIECES 4 5 6 7 8 9 10 11 12
45" (115CM) WITH NAP
SIZES 10 12 14 16 18

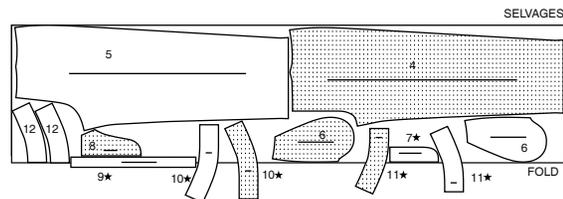


45" (115CM) WITH NAP
SIZES 20W 22W 24W 26W 28W

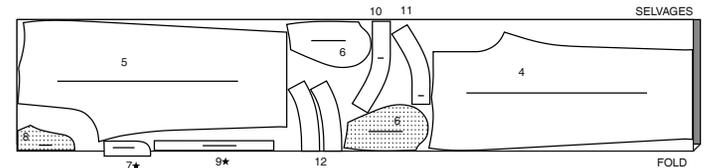

60" (150CM) WITH NAP
SIZES 10 12 14 16 18

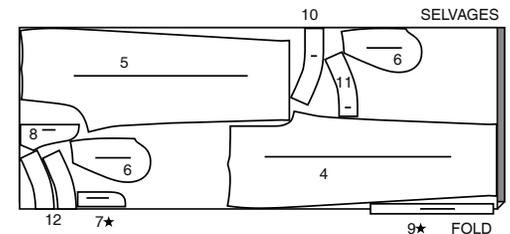


60" (150CM)
WITH NAP
SIZES 20W 22W 24W 26W 28W

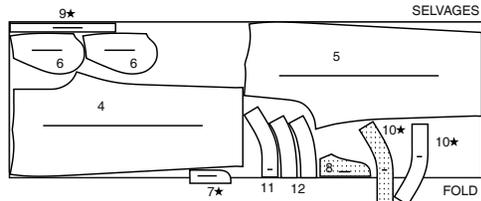


INTERFACING
PIECES 7 8 10 11 12

20" (51CM)
SIZES 10 12 14 16 18

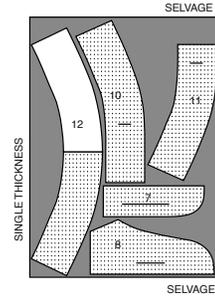

20" (51CM)
SIZES 20W 22W 24W 26W 28W

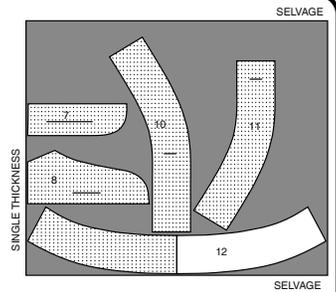

SEWING TUTORIALS



Build your skills viewing short, easy-to-follow videos at [simplicity.com/sewingtutorials](https://www.simplicity.com/sewingtutorials)

Sewing Directions

FABRIC KEY **RIGHT SIDE** **WRONG SIDE** **INTERFACING** **LINING** **LINING**

Sewing methods in **BOLD TYPE** have Sewing Tutorial Video available. Scan QR CODE to watch videos:

DART - see **Darts**: "sewing flat dart" video.

EDGESTITCH - see **Machine Stitches**: "how to edgestitch" video.

FINISH - see **Seams**: "how to finish seam allowances" video.

FRENCH SEAM - see **Seams**: "how to sew a french seam" video.

NARROW HEM - see **Hems**: "sewing narrow hems" video.

REINFORCE - see **Machine Stitches**: "how to reinforce" video.

SLIPSTITCH - Slide needle through a folded edge, then pick up a thread of underneath fabric.

STITCH IN THE DITCH - see **Machine Stitches**: "how to stitch in the ditch" video.

TOPSTITCH - see **Machine Stitches**: "how to topstitch" video.

UNDERSTITCH - see **Machine Stitches**: "how to understitch" video.








TOP A, B

NOTE: Under each sub-heading, the first view will be illustrated, unless otherwise mentioned.

1. REINFORCE BACK (2) through large dot, as shown. Clip to large dot.

2. Stitch back sections together at center back in a FRENCH SEAM below clip.

3. Make a 5/8" (1.5cm) NARROW HEM on back opening edges squaring stitching below large dot.

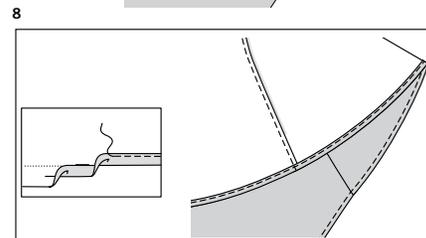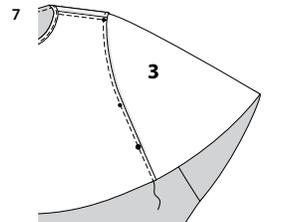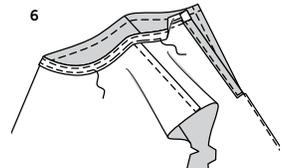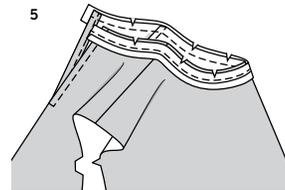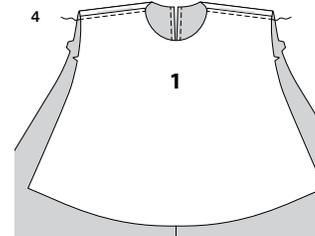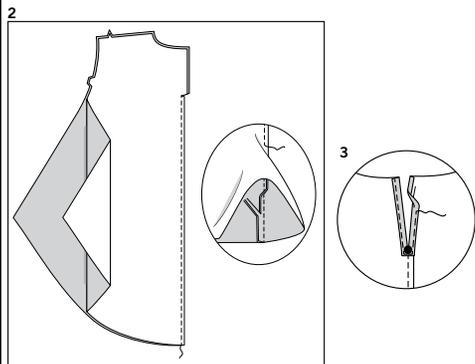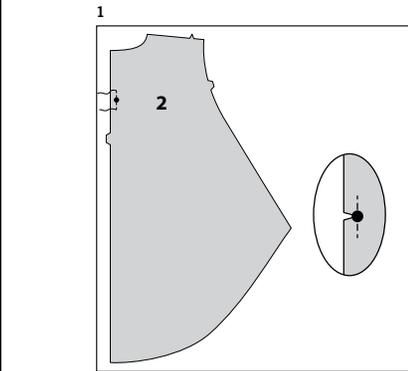

4. Stitch FRONT (1) to back at shoulders in a FRENCH SEAM. Turn seam toward back.

5. Open out one edge of single fold bias tape. With **RIGHT** sides together, pin tape to neck edge having crease 3/8" (1cm) from raw edge and tape extending 3/8" (1cm) beyond back opening edges, as shown. Stitch in a 3/8" (1cm) seam. Trim seam. Clip curve.



6. UNDERSTITCH tape. Turn tape to **INSIDE**, turning under ends at back opening. Press. Baste close to inner edge of tape. **TOPSTITCH** as basted.

7. Stitch SLEEVE (3) to armhole in a FRENCH SEAM, matching center small dot to shoulder seam, notches and remaining large and small dots.

8. Make a 5/8" (1.5cm) NARROW HEM on lower edges of top and sleeves.

S9926

3 of 4

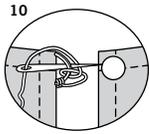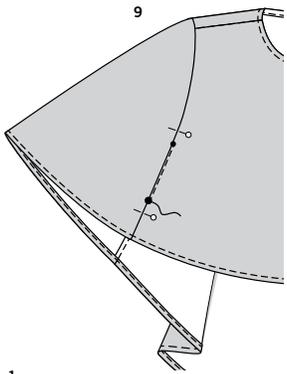

9. To form side seams, with front and back and sleeves **WRONG** sides together, pin side edges together, matching seamlines, and large and small dots. On **OUTSIDE**, **STITCH IN THE DITCH** of the armhole between large and small dots through all layers.

10. Using a strong thread, make a thread loop on left back edge, large enough to fit button. Sew button to right back opening opposite loop.

PANTS INTERFACING






1. Trim corners from INTERFACING, as shown. Fuse INTERFACING to **WRONG** side of each matching FABRIC section, following manufacturer's instructions.

FRONT AND BACK


2. To make pleats in **FRONT** (4), bring broken lines, **RIGHT** sides together, matching small dots. Stitch from upper edge to small dot. Press pleat toward front. Baste upper edge.

3. Stitch **DART** in **BACK** (5). Press dart toward center.

4. Stitch front to back at inner leg seams, stretching back to fit.

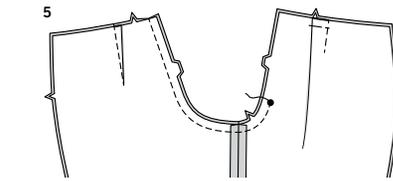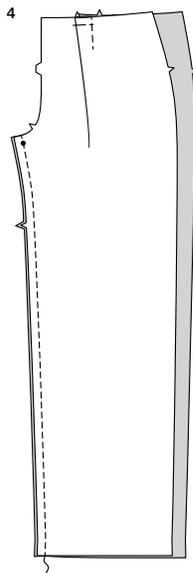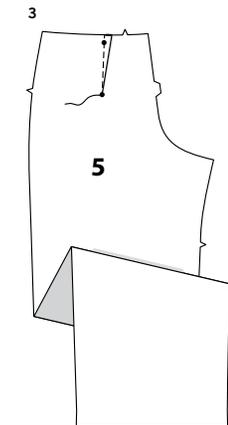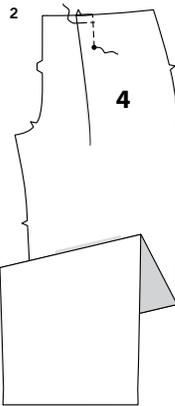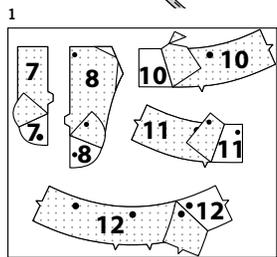


5. With **RIGHT** sides together stitch crotch seam to large dot on front. Backstitch at large dot to reinforce.

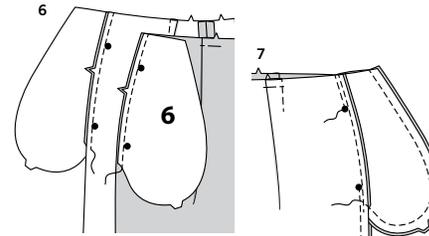


6. With **RIGHT** sides together, pin two **POCKET** (6) sections to side edges of front matching notches and large dots. Stitch in a 3/8" (1cm) seam. Press seam toward pocket, pressing pocket out. Stitch remaining pockets to side edges of back in same manner.


7. Pin front to back at side seams, matching large dots. Stitch side seams, leaving open between large dots. Stitch pocket edges together from upper edge to side seam.

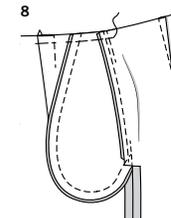


8. Clip back seam allowance below pocket. Press seam open below clip. Press pocket toward front. Baste upper edge of pocket to front.

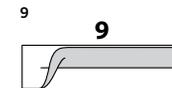

9. Fold **CARRIER** (9) in half, lengthwise with **WRONG** sides together. Press.

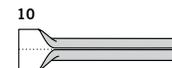


10. Open out long edges of carrier and turn them to **WRONG** side so that they meet at the crease. Press.

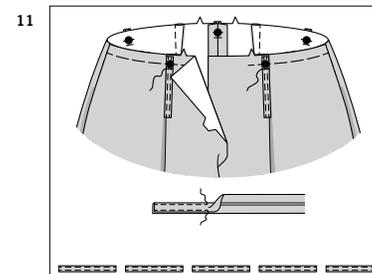


11. Fold carrier in half lengthwise, bringing pressed edges together. Stitch close to both long edges. Cut five sections from carrier, each 4" (10cm) long. Pin one end of each carrier to upper edge of pants centering over large dots. Baste. Stitch across carries at dots and again 3/8" (1cm) below first stitching.

WAISTBAND AND ZIPPER


NOTE: Interfaced waistband sections will be used as facings.

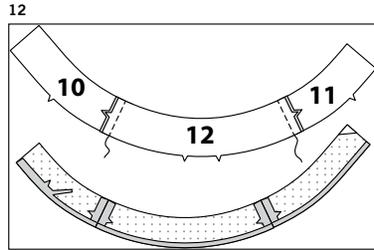

12. Stitch one RIGHT FRONT WAISTBAND (10), and one LEFT FRONT WAISTBAND (11), to side edges of one BACK WAISTBAND (12). Repeat for facing. Press under 1/2" (1.3cm) on lower edge of facing. Trim pressed edge to 3/8" (1cm).

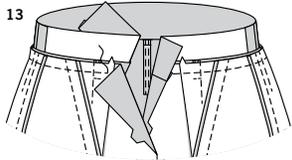


13. Pin lower edge of waistband to upper edge of pants, matching notches, centers and side seams. Stitch, stopping at notch on RIGHT front. Trim. Press seam toward waistband, turning waistband up.

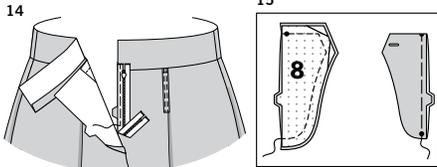


14. Close zipper. Pin LEFT side of zipper, FACE DOWN, to LEFT front opening edge, placing zipper teeth just over foldline and top stop even with waistband seam. Baste along foldline.


15. Pin LEFT FLY (8), RIGHT sides together. Stitch, leaving notched edge open. Trim. Turn RIGHT side out. Press. Baste raw edges together. Make a buttonhole in left fly at marking.

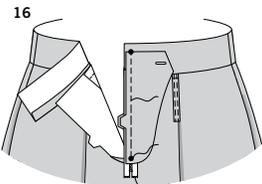


16. With RIGHT sides together, pin left fly to left front opening edge, over zipper, matching notches, small dots, having raw edges even and upper edge of fly at small dot on waistband. Baste. Using a zipper foot, stitch a 3/8" (1cm) seam from lower small dot to upper edge of fly.

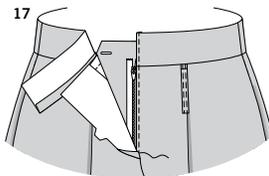

17. Turn seam toward front, turning fly and zipper out. **EDGESTITCH** front and waistband above small dot.

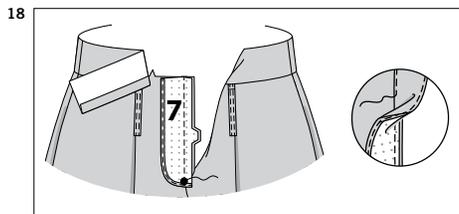


18. **FINISH** outer edge of RIGHT FLY FACING (7). Pin right fly facing to RIGHT front opening edge, matching notches, and large dot. Stitch, ending at large dot. Trim. **UNDERSTITCH** fly facing.

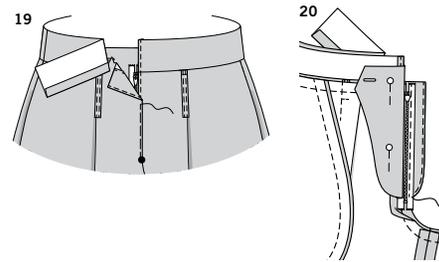


19. Turn facing to INSIDE. Press. Lap RIGHT front over LEFT, matching centers, with right waistband seamline even with left waistband seam. Baste close to edge through all thicknesses.

20. On INSIDE, pin left fly out of the way. Open out right fly facing. Pin remaining zipper tape to right fly facing, keeping right front free. Using a zipper foot, stitch in place close to zipper teeth.

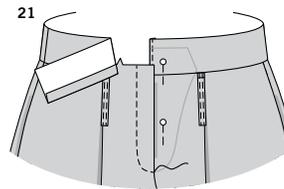


21. Turn right fly facing to INSIDE. On OUTSIDE, stitch RIGHT front along stitching lines, keeping left fly free.

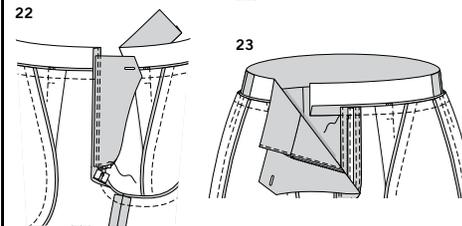


22. Turn left fly back in place. On inside, hand tack fly and facing together at lower edge, as shown. Trim away excess zipper tape even with lower edge of fly, if needed.


23. Stitch remainder of waistband to upper edge of RIGHT front. Trim. Press seam toward waistband.

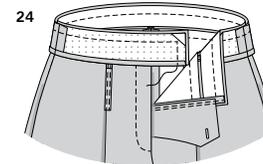


24. Press under 3/8" (1cm) on front edge of left front waistband facing. With RIGHT sides together, pin waistband facing to waistband matching seams and centers. Stitch upper edge and ends of right front waistband. Trim. **UNDERSTITCH** upper edge of waistband facing.

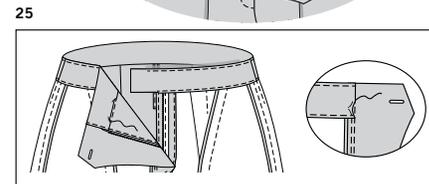

25. Turn facing to inside. Press. Pin lower pressed edge of facing over seam, placing pins on OUTSIDE. On OUTSIDE, **STITCH IN THE DITCH** of waistband seam, catching in pressed edge of facing on INSIDE. **SLIPSTITCH** pressed edge of left front facing over fly.

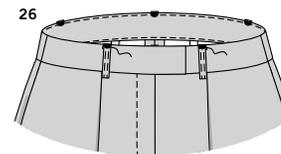

26. Press under 1/4" (6mm) on loose ends of carriers. Turn each carrier up and pin pressed end even with upper edge of waistband, centered over large dots. Stitch carrier to waistband close to pressed end.

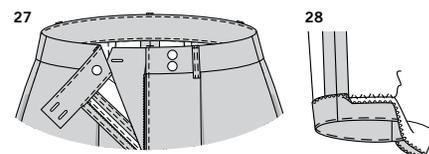

FINISHING

27. Make buttonholes in right front waistband at markings. Sew buttons to left front waistband and right front waistband facing at markings.

28. Turn up 1-1/4" (3.2cm) hem on lower edge of pants. Baste close to fold. **FINISH** raw edge. Hand sew hem in place.



Congrats!

You've completed your sewing adventure

**SHARE
YOUR** LOOK



Post your pattern and tag us
@simplicity_creative_group and **#simplicitypatterns**
for a chance to be featured on our social media.

Look for more PDF patterns at [simplicity.com](https://www.simplicity.com)

Have a question or need help with your sewing project call us at
1-888-588-2700



Simplicity ©2024 a division of IG Design Group Americas Inc. • Atlanta, GA 30342 USA www.thedesigngroup.com • All Rights Reserved. www.simplicity.com • Made in the U.S.A. Fabriqué aux États-Unis.

To be used for individual private home use only and not for commercial or manufacturing purposes. • A usage privé seulement et non à des fins commerciales ou de production en série. • Para uso privado solamente, no se puede utilizar con propósitos de comercialización o de producción en serie.