S9907

Simplicity®

ELAINE HEIGL Designs

easy-to-sew

Designed and printed in USA.

Shop all the pattern brands you love @

Simplicity®.com

MISSES' APRONS AND PANTS

Suggested Fabrics: Batiks, Cotton Types, Denim, Linen Types, Madras, Twill. **Interfacing:** Lightweight Fusible.

Notions: A: 3⅜ yds. (3.0m) of 1" (2.5cm) twill tape. **D:** 1½ yds. (1.4m) of 1" (2.5cm) elastic.

Sizes		XS	S	M	L	XL	XXL	
		4-6	8-10	12-14	16-18	20-22	24-26	
European		30-32	34-36	38-40	42-44	46-48	50-52	
Apron A	60"*	1⅛	1⅛	1⅛	1⅛	1⅛	1⅛	Yds.
	150cm*	1.0	1.0	1.0	1.0	1.0	1.0	m
Apron B	60"*	1¼	1¼	1¼	1⅜	1⅜	1⅞	Yds.
	150cm*	1.0	1.1	1.1	1.1	1.3	1.7	m
Interfacing B,C	20" - ¼ yd.							
	51cm - 0.2m							
Apron C	60"*	1⅛	1⅛	1¼	1⅜	1⅜	1¾	Yds.
	150cm*	1.0	1.0	1.1	1.1	1.3	1.6	m
Pants D - Sit 1" (2.5cm) Below Waist								
	45"*	2⅝	2⅝	2¾	2¾	2⅞	2⅞	Yds.
	60"*	1⅞	1⅞	2	2¼	2¼	2¼	"
	115cm*	2.4	2.4	2.5	2.5	2.6	2.6	m
	150cm*	1.7	1.7	1.7	2.1	2.1	2.1	"

FINISHED GARMENT MEASUREMENTS (Includes Design and Wearing Ease)

D Hip	42 ½	44 ½	48	52	56	60	Ins.
	(108)	(113)	(122)	(132)	(142)	(152)	(cm)
Width, each leg							
Pants D	14 1/4	15 3/4	17 1/4	19 1/4	21	22 3/4	Ins.
	(26)	(40)	(44)	(49)	(53)	(58)	(cm)
Finished side length from waist							
Pants D	33 1/2	34	34 1/2	35	35 1/2	36	Ins.
	(85)	(86)	(88)	(89)	(90)	(91)	(cm)

*with nap **without nap
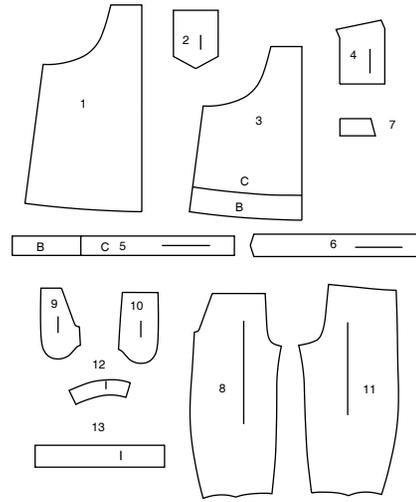

A

B

C

D

Simplicity®

S9907

13 PIECE

Thank you for purchasing this Simplicity pattern.
We made every effort to provide you with a high quality product.
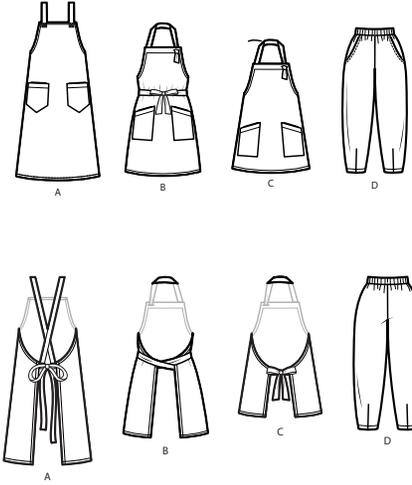
1 APRON - A
2 POCKET - A
3 APRON B,C
4 POCKET - B,C
5 TIE END - B,C
6 STRAP - B,C
7 FACING - B,C

8 FRONT - D
9 POCKET FACING - D
10 SIDE FRONT AND POCKET - D
11 BACK - D
12 HEM FACING - D
13 CASING - D

General Directions

The Pattern

SYMBOLS

GRAIN LINE Place on straight grain of fabric parallel to selvage

PLACE SOLID LINE on fold of fabric.

CENTER FRONT OR BACK of garment.

NOTCHES

○ ● **DOTS**

CUTTING LINE

LENGTHEN OR SHORTEN LINES

SEAM ALLOWANCE: 5/8" (1.5cm) unless otherwise stated is included but not printed on MULTI-SIZE PATTERNS. Mark your size with colored felt tip pen.

See chart on tissue for how to use MULTI-SIZE PATTERNS.

ADJUST IF NEEDED

Make adjustments before placing pattern on fabric.

TO LENGTHEN: Cut pattern between lengthen or shorten lines. Spread pattern evenly, the amount needed and tape to paper.

TO SHORTEN: At lengthen or shorten lines, make an even pleat taking up amount needed. Tape in place.

When lengthen or shorten lines are not given, make adjustments at lower edge of pattern.

Sewing

- SEW garment following **Sewing Directions.**
- PIN or machine-baste seams matching notches.
- STITCH 5/8" (1.5 cm) seams unless otherwise stated.
- PRESS seams open unless otherwise indicated clipping when necessary so seams will lie flat.
- TRIM seams to reduce bulk, as shown below.

Trim enclosed seams into layers | Trim corners | Clip inner curves | Notch outer curves

Cutting/Marking

BEFORE CUTTING:

PRESS pattern pieces with a warm dry iron. PRE-SHRINK fabric by pre-washing washables or steam-pressing non-washables.
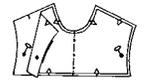
CIRCLE your cutting layout.

PIN pattern to fabric as shown in Cutting Layouts.

- FOR DOUBLE THICKNESS: Fold fabric with RIGHT sides together.
- FOR SINGLE THICKNESS: Place fabric RIGHT side up.
- FOR PILE, SHADED OR ONE WAY DESIGN FABRICS: Use "with nap" layouts

AFTER CUTTING:

Transfer markings to WRONG side of fabric before removing pattern. Use pin and chalk method or dressmaker's tracing paper and wheel.
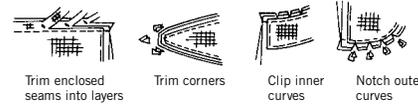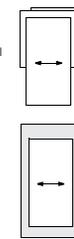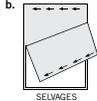
To Quick Mark:

- Snip edge of fabric to mark notches, ends of fold lines and center lines.
- Pin mark dots.

SPECIAL CUTTING NOTES

★ If layout shows a piece extending past fold, cut out all pieces except piece that extends.

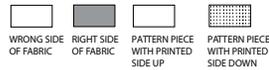Open out fabric to single thickness. Cut extending piece on RIGHT side of fabric in position shown.

✳ Mark small arrows along both selvages indicating direction of nap or design. Fold fabric crosswise with RIGHT sides together, and cut along fold (a).
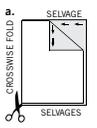
Turn one fabric layer around so arrows on both layers go in the same direction. Place RIGHT sides together (b).
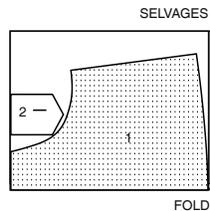
Cutting Layouts

WRONG SIDE OF FABRIC | RIGHT SIDE OF FABRIC | PATTERN PIECE WITH PRINTED SIDE UP | PATTERN PIECE WITH PRINTED SIDE DOWN | ★ ✳ SEE SPECIAL CUTTING NOTES

POSITION OF PATTERN PIECES MAY VARY SLIGHTLY ACCORDING TO YOUR PATTERN SIZE

APRON A

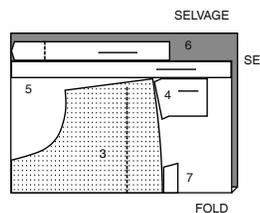USE PIECES 1 2

60" (150CM)
WITH NAP
ALL SIZES

NOTE: DASHED LINE SHOWN ON PATTERN PIECES IN CUTTING LAYOUTS INDICATES CUTTING LINE FOR SHORTER LENGTH.
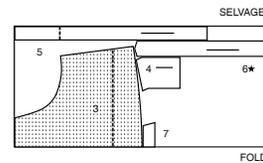
APRON B,C

USE PIECES 3 4 5 6 7

60" (150CM)
WITH NAP
SIZES XS S M L XL

60" (150CM) WITH NAP SIZE XXL
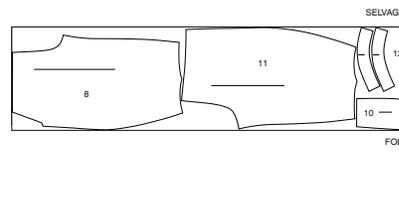

INTERFACING B,C
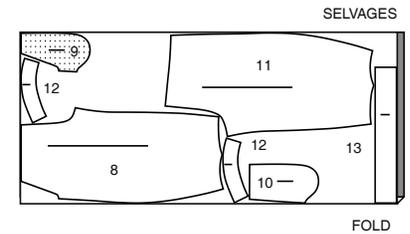
USE PIECE 7

20" (51CM)
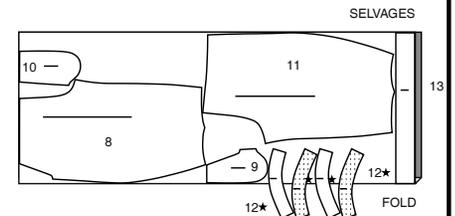ALL SIZES

PANTS D

USE PIECES 8 9 10 11 12 13

45" (115CM)
WITH NAP
ALL SIZES

60" (150CM) WITH NAP SIZES XS S M

60" (150CM) WITH NAP SIZES L XL XXL

SEWING TUTORIALS

SCAN ME 📱

Build your skills viewing short, easy-to-follow videos at simplicity.com/sewingtutorials

Sewing Directions

FABRIC KEY

| RIGHT SIDE | WRONG SIDE | INTERFACING | LINING RIGHT SIDE | LINING WRONG SIDE |

Read **General Directions** on page 1 before you begin.

Sewing methods in **BOLD TYPE** have Sewing Tutorial Video available. Scan QR CODE to watch videos:

DART - see **Darts: "sewing flat dart"** video.

NARROW HEM - see **Hems: "sewing narrow hems"** video.

EDGESTITCH - see **Machine Stitches: "how to edgestitch"** video.

UNDERSTITCH - see **Machine Stitches: "how to understitch"** video.

FINISH - see **Seams: "how to finish seam allowances"** video.

SLIPSTITCH - Slide needle through a folded edge, then pick up a thread of underneath fabric.

APRON A
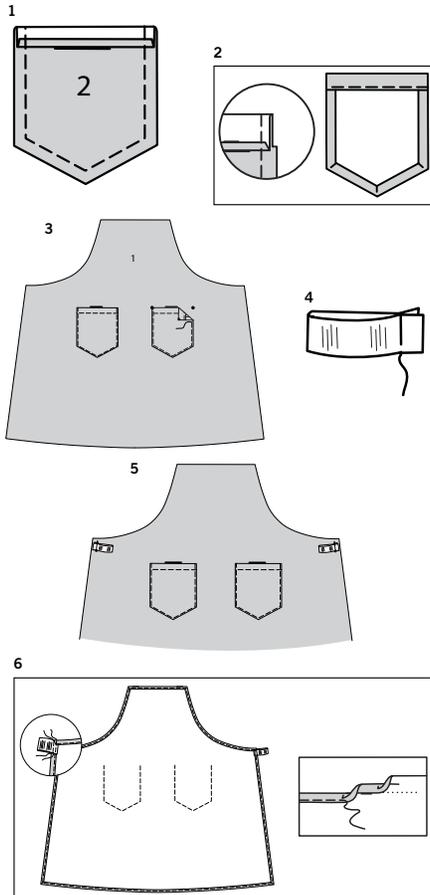
1. Press under 1/4" (6mm) on upper edge of pocket (2). Turn upper edge to OUTSIDE along fold line, forming facing. Stitch along seam line on raw edges.

2. Trim seam allowance in the facing area to 1/4" (6mm). Turn corners RIGHT side out, turning facing to the WRONG side; press, pressing under raw edges along stitching. Stitch facing close to inner pressed edge.

3. On OUTSIDE, pin pockets to apron (1), matching large dots. Stitch close to side and lower edges.

4. Cut two pieces of 1" (2.5cm) wide twill tape 4" (10.2cm) long. For loops, fold twill tape in half crosswise, having raw edges even. Baste.

5. On OUTSIDE, pin loops to side edges of apron, centering between small dots, having raw edges even. Baste.

6. Make **NARROW HEM** on lower, side and upper edges. To hold loops in place, stitch along loops 1/4" (6mm) away from previous stitching, as shown.
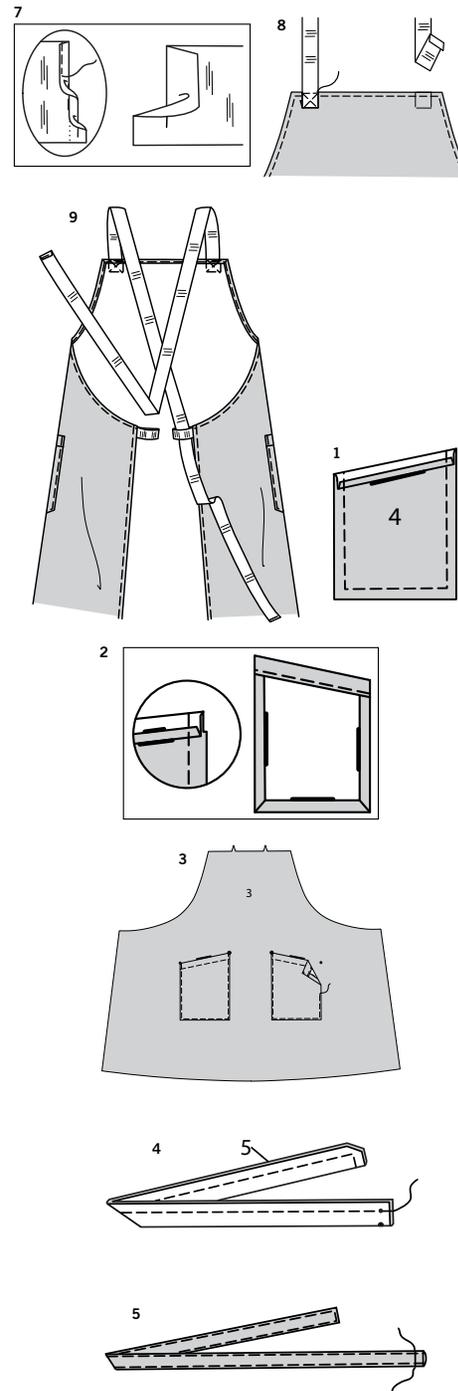
7. For straps, cut two pieces of 1" (2.5cm) wide twill tape 55" (140cm) long. Make **NARROW HEM** on one end of twill tape.

8. Press under 1" (2.5cm) on remaining end. Center pressed ends of straps INSIDE placement lines. Stitch close to side and lower edges and across upper edge, as shown, stitching diagonally across center.

9. To wear, cross straps in back of apron and insert straps through opposite loops, as shown. Adjust straps and tie.

APRON B, C

1. Press under 1/4" (6mm) on upper edge of pocket (4). Turn upper edge to OUTSIDE along fold line, forming facing. Stitch along seam line on raw edges.

2. Trim seam allowance in the facing area to 1/4" (6mm). Turn corners RIGHT side out, turning facing to the WRONG side; press, pressing under raw edges along stitching. Stitch facing close to inner pressed edge.

3. On OUTSIDE, pin pockets to apron (3), matching small and large dots. Stitch close to side and lower edges.

4. With RIGHT sides together, fold tie end (5) in half lengthwise. Stitch, leaving end with dots open. Trim seam and corner.

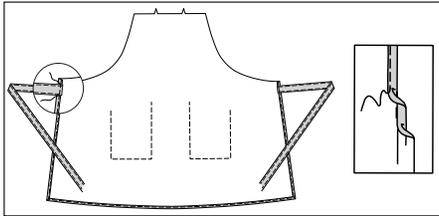**5.** Turn RIGHT side out. Press. Baste raw edges. **EDGESTITCH** finished edges.
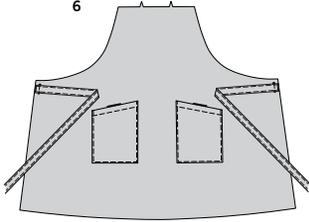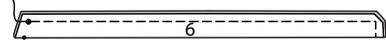
6. Pin tie ends to side edges, matching small and large dots, having raw edges even. Baste.

7. Make **NARROW HEM** on lower and side edges. To hold tie ends in place, stitch along tie ends 1/4" (6mm) away from previous stitching, as shown.
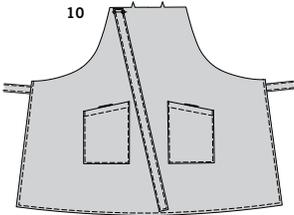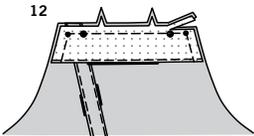
8. With RIGHT sides together, fold strap (6) in half lengthwise. Stitch, leaving end with dots open. Trim seam and corner.

9. Turn RIGHT side out. Press. Baste raw edges. **EDGESTITCH** finished edges.

10. Pin strap to upper RIGHT edge, matching small and large dots, having raw edges even. Baste.

11. Apply **INTERFACING** to facing (7). **FINISH** lower edge.

12. With RIGHT sides together, pin facing to apron, matching notches. Stitch upper and side edges. Trim seam.
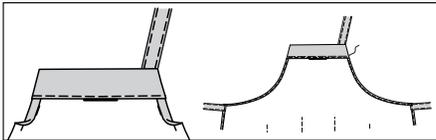
13. Turn facing to INSIDE. Press. Make **NARROW HEM** on remaining upper edges, ending stitching at facing edges.
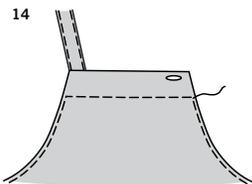
14. Baste facing in place close to finished edge.
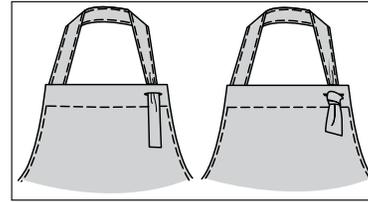
15. On OUTSIDE, top-stitch as basted. Make buttonhole in upper LEFT corner at marking. To wear, insert strap end into buttonhole. Adjust to fit. Tie strap end in knot to secure.

PANTS D

Pants sit 1" (2.5cm) below waist.

FRONT AND BACK

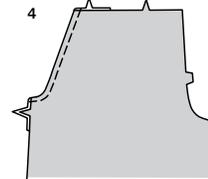**1.** Stitch **DART** in front (8). Press dart toward side.
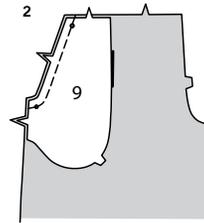
2. With RIGHT sides together, pin pocket facing (9) to upper side edge of front, matching notches and small dots. Stitch.
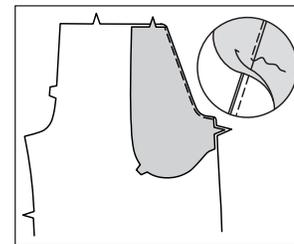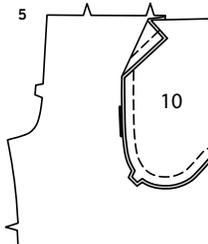
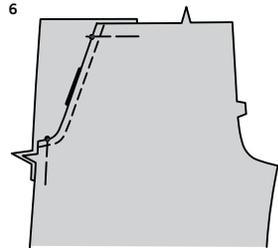**3.** **UNDERSTITCH** pocket. Turn pocket to inside; press.

4. **TOPSTITCH** pocket seam.

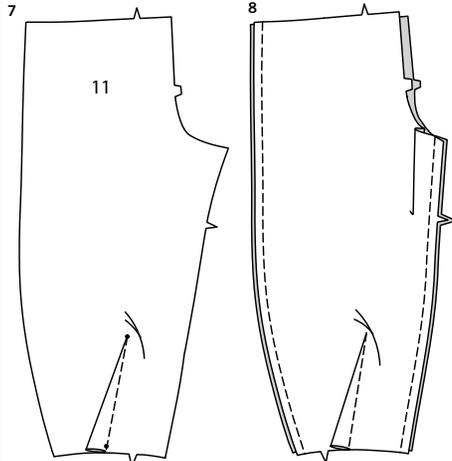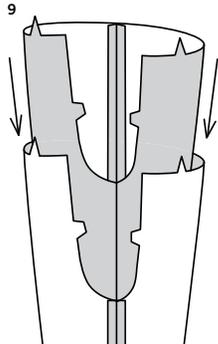**5.** With RIGHT sides together, pin side front and pocket (10) to pocket, matching notches. Stitch outer curved edge.
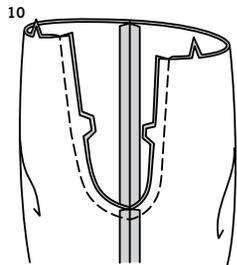
**6.** Turn in pocket and side front, matching small dots. Baste raw edges.

7. Stitch **DART** in back (11). Press dart toward side.

8. Stitch front to back at side. Stitch front and back together at inner leg seams.

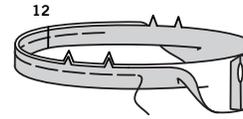**9.** With RIGHT sides together, insert one leg INSIDE the other.

10. With RIGHT sides together, pin center seam, matching inner leg seams and notches. Stitch. To reinforce seam, stitch again over first stitching.
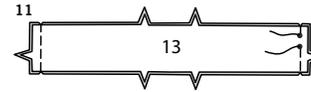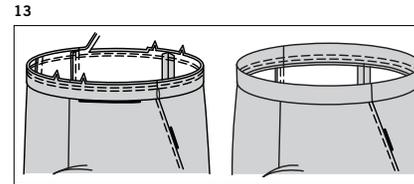
CASING AND FINISHING

11. Stitch casing (13) sections together at side edges, matching notches and small dots, leaving an opening between small dots.

12. With WRONG sides together, fold casing in half lengthwise. Press. Baste raw edges together.

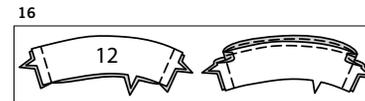**13.** With RIGHT sides together, pin casing to upper edge of pants, matching notches and side seams. Stitch. Stitch again 1/4" (6mm) away in seam allowance. Trim seam close to second stitching. Press seam toward pants.
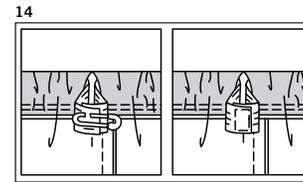
14. Cut a piece of elastic the waist measurement plus 3" (7.5cm). Insert elastic through opening in casing. Overlap ends and hold with a safety pin. Try on pants and adjust elastic so pants sit confortably 1" (2.5cm) below waist. Stitch ends of elastic together securely.
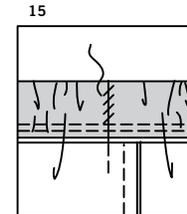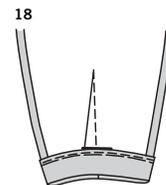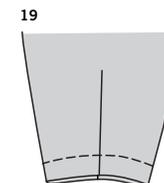
15. SLIPSTITCH opening. Distribute fullness evenly.

16. For each leg, stitch two hem facing (12) sections together at side edges, as shown. **FINISH** unnotched edge.
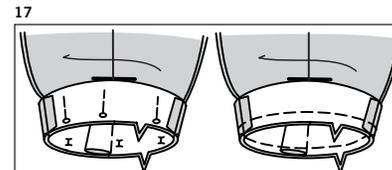
17. With RIGHT sides together, pin facing to lower edge of pants, matching notches and seams. Stitch. Trim seam. **UNDERSTITCH** facing.

18. Turn facing to INSIDE.
Press. Baste facing in place close to finished edge.

19. On OUTSIDE, top-stitch as basted.

Congrats!

You've completed your sewing adventure

SHARE YOUR LOOK

Post your pattern and tag us
@simplicity_creative_group and #simplicitypatterns
for a chance to be featured on our social media.

Look for more PDF patterns at **simplicity.com**

Have a question or need help with your sewing project call us at
1-888-588-2700

Simplicity®
by**design** group